




REMOTE CONTROL WIRING DIAGRAM - BF75D BF90D

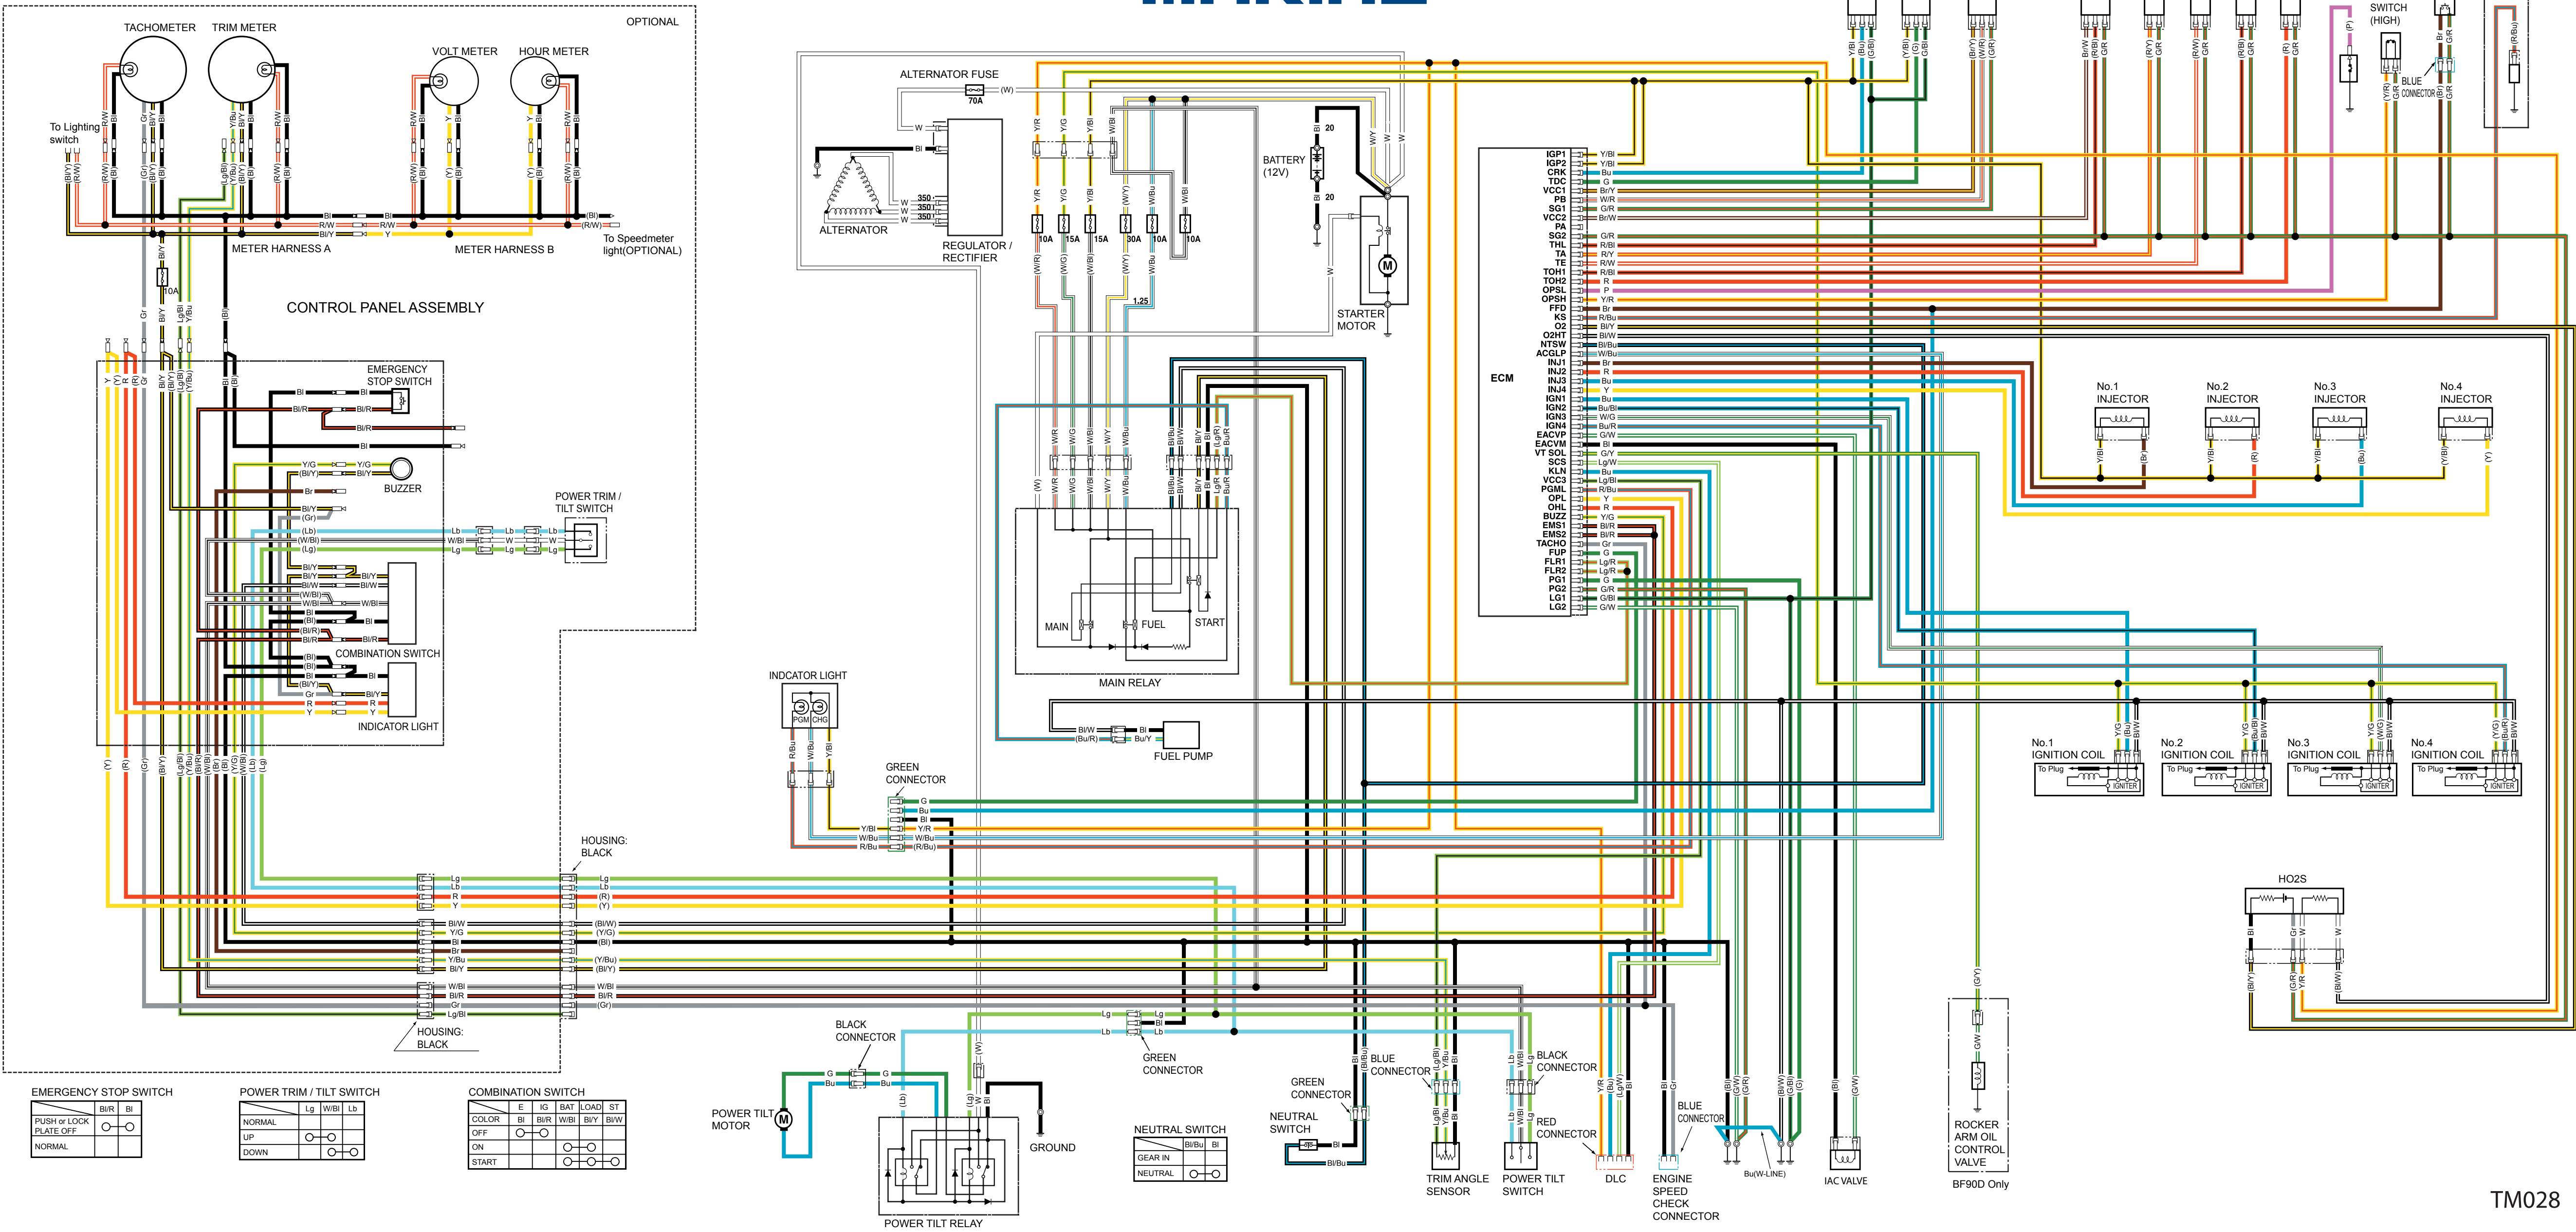

| EMERGENCY STOP SWITCH | | POWER TRIM / TILT SWITCH | | | COMBINATION SWITCH | | | | | |
|------------------------|------|--------------------------|----|------|--------------------|-------|------|------|------|------|
| PUSH or LOCK PLATE OFF | BI/R | NORMAL | Lg | W/BI | Lb | E | IG | BAT | LOAD | ST |
| NORMAL | BI | UP | ○ | ○ | ○ | BI | BI/R | W/BI | BI/Y | BI/W |
| | | DOWN | ○ | ○ | ○ | OFF | ON | ON | ON | ON |
| | | | ○ | ○ | ○ | START | | | | |



SYSTEM DIAGRAM
BF75D - BF90D

