



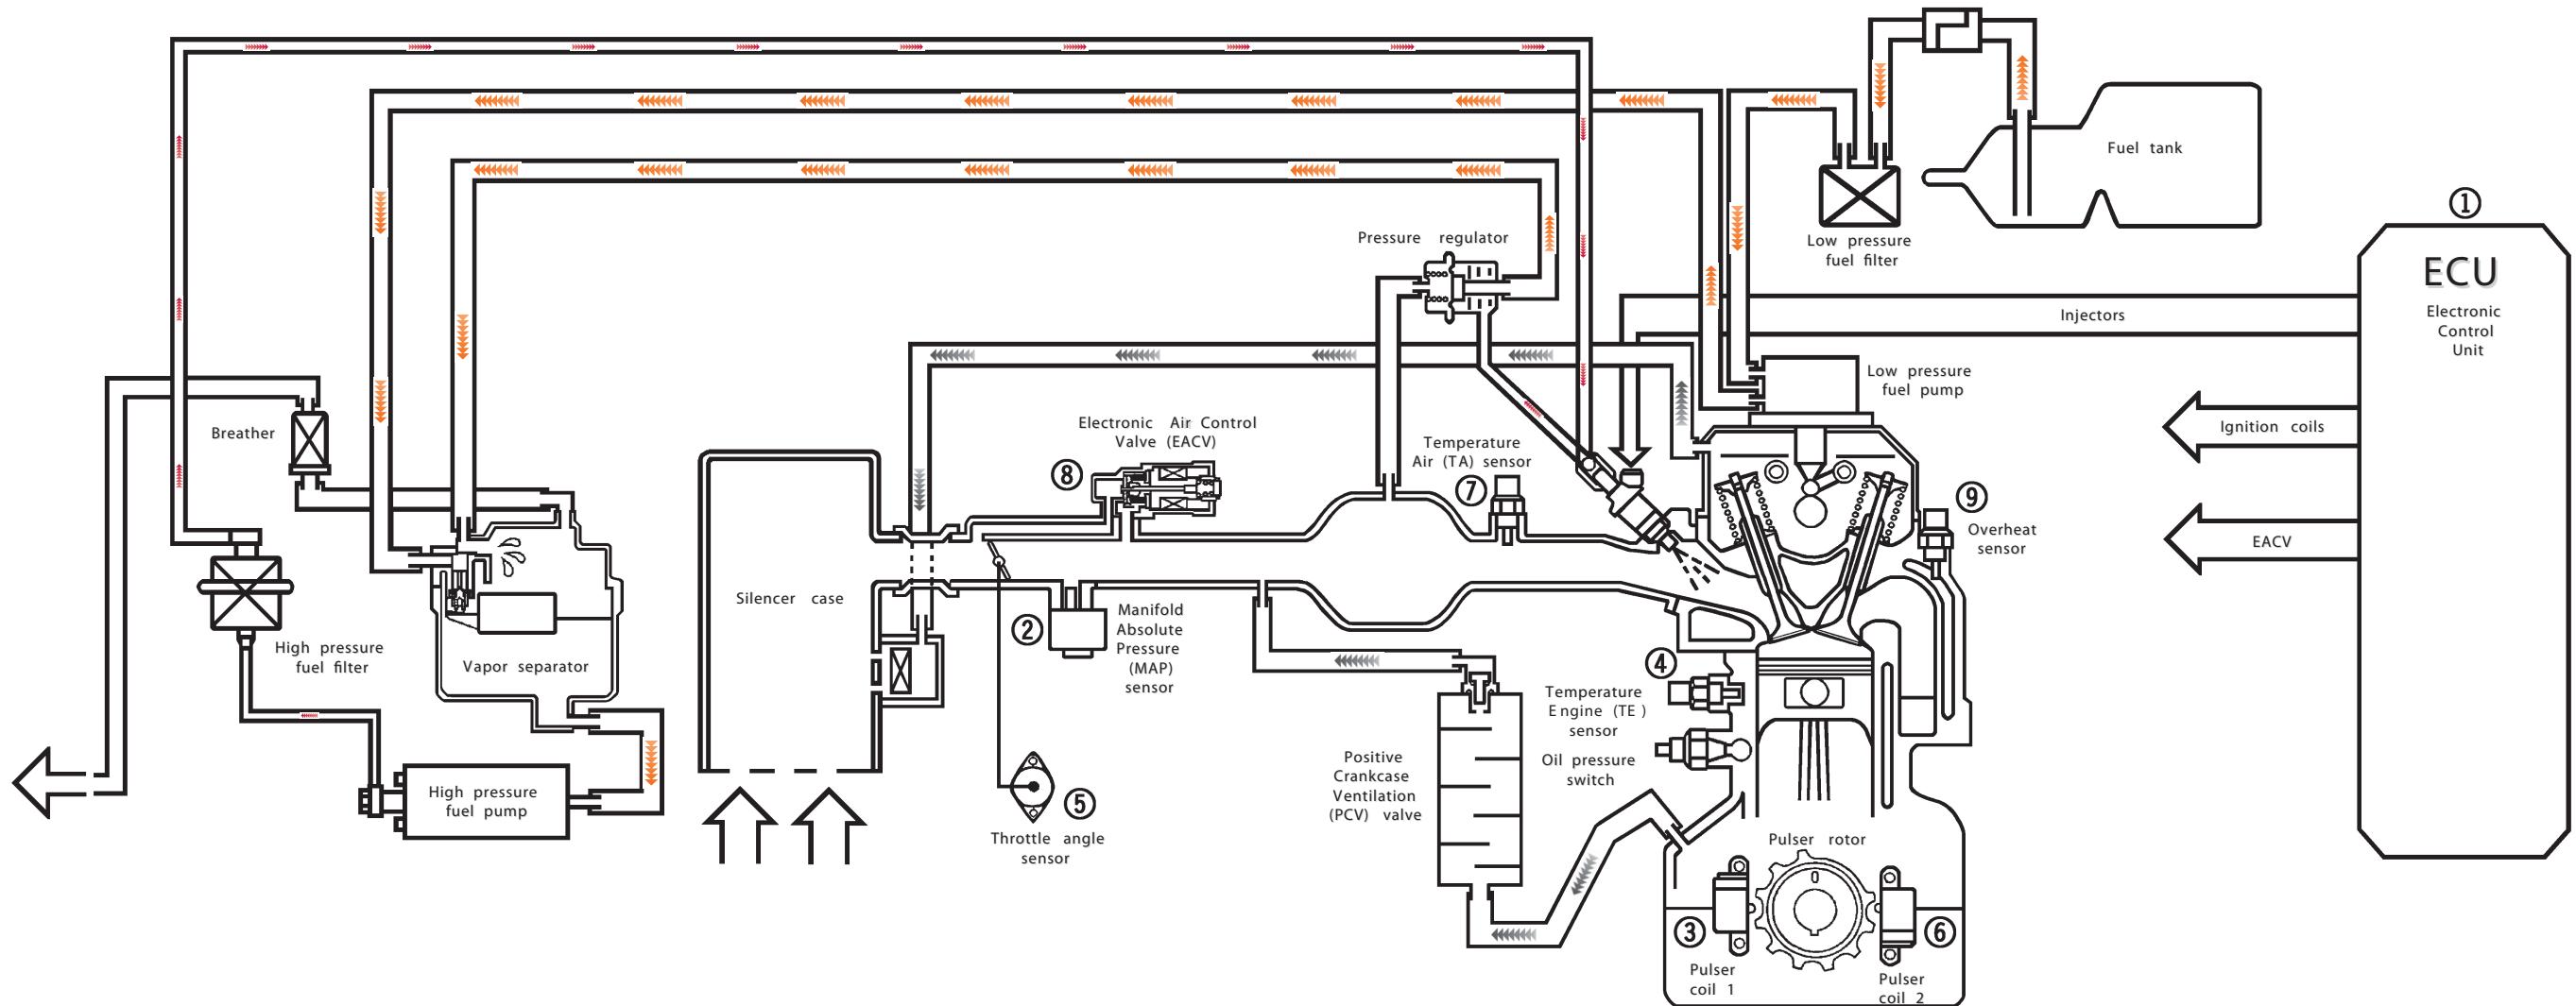


BF115A/BF130A PROGRAMMED FUEL INJECTION



SELF-DIAGNOSIS FUNCTION

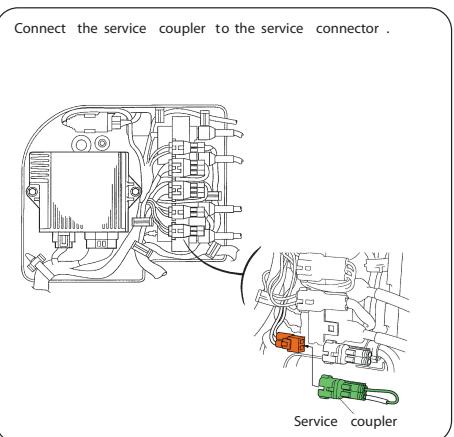

WARNING LAMP INDICATION

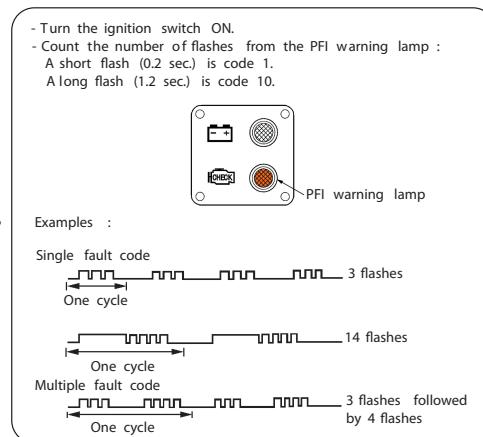

TROUBLE CODE

No.	PFI warning lamp flashes	Item	Symptom
①	No flash	Warning lamp	Bulb failure
		ECU	Engine does not start
②	Continuous flash	ECU	Engine does not start / Poor engine response
③	3	MAP sensor	Poor acceleration / Wet spark plug / Engine stalls
④	4	Pulser coil 1	Engine does not start / Engine stalls
⑤	6	TE sensor	Engine does not start when cold / Abnormal high engine speed when warming up
⑥	7	Throttle angle sensor	Engine does not start when cold / Poor acceleration when cold / Poor acceleration
⑦	8	Pulser coil 2	Engine does not start / Engine stalls
⑧	10	TA sensor	Improper idle speed when very cold
⑨	14	EACV	Idle speed too low
⑩	24	Overheat sensor	Overheat warning ON / Engine speed drops suddenly

ECU RESET METHOD

