


# CHARGING KITS

## 3.75 AMP Charging Kit

*Includes:* Flywheel, fuse harness, charge coils, voltage regulator, and DC plug.

<b>BF5AM-BF5A3</b>	
3.75 AMP Charging Kit (shown)	06310-ZV1-A00

<b>BF5A4 and subsequent</b>	
3.75 AMP Charging Kit	06310-ZV1-F01ZA

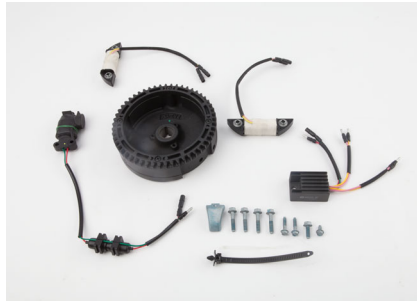

## 6 AMP Charge Receptacle Kit

*Includes:* Flywheel, harness assembly, battery cable bracket, charge coil assembly, peg receptacle assembly, regulator bracket.

<b>BF4A, BF5D, BF6A</b>	
6 AMP Charge Receptacle Kit	06310-ZVD-010ZA



## Battery Charging Plug

Allows manual start models with charging system to be connected to battery for charging.

NOTE: Customer to provide wire length as needed.

<b>BF5-BF30 "A" models only</b>	
Battery Charging Plug	31652-881-024



## 10 AMP Coil Set

Upgrades standard 6 amp system. Same as BF40/50.

<b>BF35A, BF45A</b>	
10 AMP Coil Set	06320-ZV5-911



## Charging Cable

**BF8D, BFP8D, BF9.9D, BFP9.9D, BF15D, BF20D**

Charging Cable	31575-ZW9-000
----------------	---------------



## 10 AMP Coil Set

Upgrades standard 6 amp system.

**BF9.9/BF15 AM, AW, AX, AY models**

10 AMP Coil Set	06320-ZV4-860
-----------------	---------------



# **CHARGING KITS**

---

**THIS PAGE INTENTIONALLY LEFT BLANK.**