


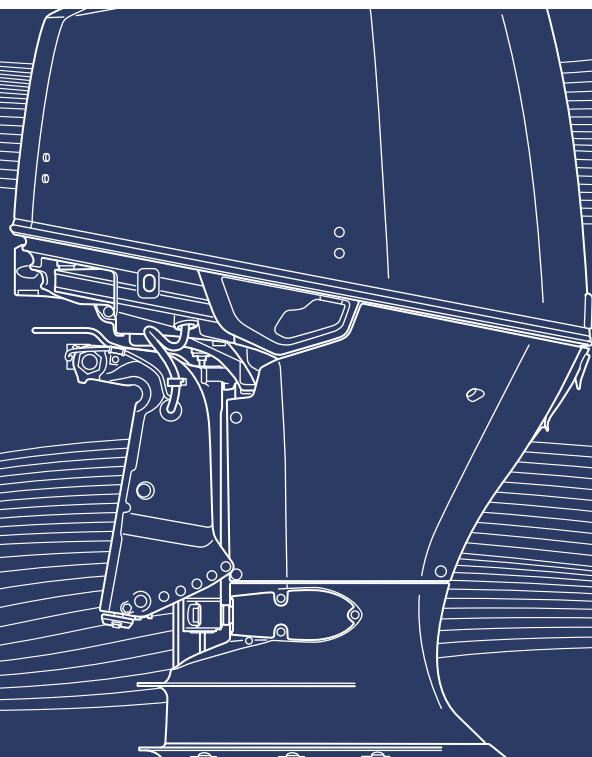

# Owner's Manual BF115J • BF140A • BF150D

Includes US and Canadian Models

© 2024 Honda Motor Co., Ltd. - All Rights Reserved







## **WARNING:**



The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

Keep this Owner's Manual handy, so you can refer to it at any time. This Owner's Manual is considered a permanent part of the outboard motor and should remain with the outboard motor if resold.

The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd. reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation whatever. No part of this publication may be reproduced without written permission.



# INTRODUCTION

Congratulations on your selection of a Honda outboard motor. We are certain you will be pleased with your purchase of one of the finest outboard motors on the market.

We want to help you get the best results from your new outboard motor and to operate it safely. This manual contains information on how to do that; please read it carefully.

As you read this manual you will find information preceded by a **NOTICE** symbol. That information is intended to help you avoid damage to your outboard motor, other property, or the environment.

We suggest you read the warranty policy to fully understand its coverage and your responsibilities of ownership.

When your outboard motor needs scheduled maintenance, keep in mind that your Honda Marine dealer is specially trained in servicing Honda outboard motors. Your Honda Marine dealer is dedicated to your satisfaction and will be pleased to answer your questions and concerns.

For information regarding the optional equipment, refer to the owner's manual that came with it.



# INTRODUCTION

---


## A FEW WORDS ABOUT SAFETY

Your safety and the safety of others are very important. And using this outboard motor safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all the hazards associated with operating or maintaining an outboard motor. You must use your own good judgment.

You will find important safety information in a variety of forms, including:

- **Safety Labels** – on the outboard motor.
- **Safety Messages** – preceded by a safety alert symbol  and one of three signal words, DANGER, WARNING, or CAUTION.

These signal words mean:

 **DANGER**

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

 **WARNING**

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

 **CAUTION**

You **CAN** be **HURT** if you don't follow instructions.

- **Safety Headings** – such as *IMPORTANT SAFETY INFORMATION*.
- **Safety Section** – such as *OUTBOARD MOTOR SAFETY*.
- **Instructions** – how to use this outboard motor correctly and safely.

This entire manual is filled with important safety information – please read it carefully.



# CONTENTS

OUTBOARD MOTOR SAFETY .....	7	Side-Mount Type .....	33
IMPORTANT SAFETY INFORMATION .....	7	Ignition Switch .....	33
SAFETY LABEL LOCATION .....	9	Emergency Stop Switch Clip and Emergency Stop Switch .....	34
CONTROLS AND FEATURES .....	11	Gearshift/Throttle Control Lever .....	34
CONTROL AND FEATURE IDENTIFICATION		Fast Idle Lever .....	36
CODES .....	11	Flush-Mount Type	
HOW TO DETERMINE WHICH DIRECTION		(Mechanical wire type) .....	36
THE PROPELLER SHAFT ROTATES .....	12	Ignition Switch .....	36
COMPONENT AND CONTROL LOCATIONS ...	13	Emergency Stop Switch Clip and Emergency Stop Switch .....	37
CONTROLS .....	24	Gearshift/Throttle Control Lever .....	38
Flush-Mount/Top-Mount Types (DBW type) ....	24	Fast Idle Button .....	39
Ignition Switch		Top-Mount Type	
(without START/STOP switch) .....	24	(Mechanical wire type) .....	40
Power Switch (with START/STOP switch) .....	25	Ignition Switch .....	40
Honda Smart Key (optional equipment) .....	25	Emergency Stop Switch Clip and Emergency Stop Switch .....	40
START/STOP Switch .....	26	Gearshift/Throttle Control Lever .....	41
Emergency Stop Switch Clip and Emergency Stop Switch .....	27	Fast Idle Button .....	43
Gearshift/Throttle Control Lever		Common Controls .....	44
(Flush-Mount type) .....	28	Power Trim/Tilt Switch .....	44
Gearshift/Throttle Control Lever		PTT Switch Panel .....	46
(Top-Mount type (DBW type)) .....	29	Power Tilt Switch .....	46
Function Switches		Manual Relief Valve .....	46
(Flush-Mount type) .....	30	Tilt Lock Lever .....	47
Function Switches		TRL (Trolling) Control Switch .....	47
(Top-Mount type (DBW type)) .....	31		



# CONTENTS

Engine Cover Latches .....	48	OPERATION .....	61
Trim Tab .....	49	SAFE OPERATING PRECAUTIONS .....	61
INSTRUMENTS .....	49	BREAK-IN PROCEDURE .....	61
Trim Meter		FUEL PRIMING .....	62
(optional equipment) .....	49	INFREQUENT OR OCCASIONAL USE .....	62
Tachometer		STARTING THE ENGINE .....	63
(optional equipment) .....	49	Flush-Mount/Top-Mount Types (DBW type) .....	63
NMEA Interface Coupler .....	50	Flush-Mount Type (DBW type) .....	64
Operating Hour Notification System .....	50	Top-Mount Type (DBW type) .....	64
How to reset the Hour Counter .....	53	Side-Mount Type .....	66
INDICATORS .....	53	Flush-Mount Type	
Alternator (ACG) Indicator .....	54	(Mechanical wire type) .....	69
Malfunction Indicator .....	55	Top-Mount Type	
Oil Pressure Indicator .....	55	(Mechanical wire type) .....	71
Overheat Indicator .....	56	Station Select Mode .....	74
Cooling System Indicator .....	57	STOPPING THE ENGINE .....	74
OTHER FEATURES .....	57	Emergency Engine Stopping .....	74
Water Separator Buzzer .....	57	Normal Engine Stopping	
Rev Limiter .....	57	(Flush-Mount/Top-Mount Types	
Anodes .....	58	(DBW type)) .....	75
Fuel Priming Bulb .....	58	Normal Engine Stopping	
Battery Switch OFF Notification .....	58	(Side-Mount/Flush-Mount/Top Mount Types	
		(Mechanical wire type)) .....	77
BEFORE OPERATION .....	59	GEARSHIFT AND	
ARE YOU READY TO GET UNDERWAY? .....	59	THROTTLE OPERATION .....	79
IS YOUR OUTBOARD MOTOR		STEERING .....	82
READY TO GO? .....	59	CRUISING .....	82



## CONTENTS

Engine Speed .....	82	REFUELING .....	109
Trim .....	82	FUEL RECOMMENDATIONS .....	110
Trolling Speed Control .....	85	Fuel Filter with Water Separator Inspection and Replacement .....	111
TRIM TAB .....	86	Anode Replacement .....	115
TROLLING MODE .....	87	Propeller Replacement .....	115
ONE-LEVER MODE .....	88	CLEANING AND FLUSHING .....	118
SHALLOW WATER OPERATION .....	88	Cleaning and Flushing .....	118
MOORING, BEACHING, LAUNCHING .....	89	STORAGE .....	120
MULTIPLE OUTBOARD MOTORS .....	90	Fuel .....	120
SERVICING YOUR OUTBOARD MOTOR .....	91	Engine Oil .....	122
THE IMPORTANCE OF MAINTENANCE .....	91	HOISTING THE OUTBOARD MOTOR .....	123
MAINTENANCE SAFETY .....	92	STORAGE PRECAUTIONS .....	123
TOOL KIT and OWNER'S MANUAL .....	93	REMOVAL FROM STORAGE .....	124
SPARE EMERGENCY STOP SWITCH CLIP (optional equipment) .....	93	TRANSPORTING .....	125
MAINTENANCE SCHEDULE .....	94	WITH OUTBOARD MOTOR	
TRIM TAB ADJUSTMENT .....	96	INSTALLED ON BOAT .....	125
MANUAL RELIEF VALVE .....	97	WITH OUTBOARD MOTOR	
ENGINE COVER REMOVAL		REMOVED FROM BOAT .....	125
AND INSTALLATION .....	97	TAKING CARE OF UNEXPECTED PROBLEMS ...	126
Engine Oil Level Check .....	99	ELECTRIC STARTER WILL NOT OPERATE ....	126
Engine Oil Change .....	100	ENGINE WILL NOT START .....	127
Oil Filter Change .....	102		
Engine Oil Recommendations .....	103		
Lubrication Points .....	104		
Spark Plug Service .....	106		



# CONTENTS

---

HARD STARTING OR STALLS AFTER STARTING .....	129	Distributor's Limited Warranty .....	152
ENGINE OVERHEATS .....	130	Emission Control System Warranty .....	157
FUSES .....	131	Distributor's Warranty .....	162
Electric Starter Will Not Operate .....	131	INDEX .....	165
Battery Will Not Charge .....	131		
Fuse Replacement .....	131		
OIL PRESSURE INDICATOR GOES OFF AND ENGINE SPEED IS LIMITED .....	134		
OVERHEAT INDICATOR COMES ON AND ENGINE SPEED IS LIMITED .....	135		
WATER SEPARATOR BUZZER SOUNDS .....	137		
SUBMERGED OUTBOARD MOTOR .....	137		
Emergency Gear Shifting (for DBW type) .....	139		
TECHNICAL INFORMATION .....	140		
Serial Number Locations .....	140		
Battery .....	141		
Emission Control System Information .....	141		
Star Label .....	144		
Specifications .....	146		
CONSUMER INFORMATION .....	149		
Dealer Locator Information .....	149		
Honda Publications .....	149		
Customer Service Information .....	150		
Warranty Statements .....	152		



# OUTBOARD MOTOR SAFETY

## IMPORTANT SAFETY INFORMATION

Honda BF115J/BF140A and BF150D outboard motors are designed for use with boats that have a suitable manufacturer's power recommendation. Other uses can result in injury to the operator or damage to the outboard motor and other property.

Most injuries or property damage can be prevented if you follow all instructions in this manual and on the outboard motor. The most common hazards are discussed in this chapter, along with the best way to protect yourself and others.

## Operator Responsibility

- It is the operator's responsibility to provide the necessary safeguards to protect people and property. Know how to stop the engine quickly in case of emergency. Understand the use of all controls.
- Stop the engine immediately if anyone falls overboard, and do not run the engine while the boat is near anyone in the water.
- Always stop the engine if you must leave the controls for any reason.

- Attach the emergency stop switch lanyard securely to the operator.
- Always wear a PFD (Personal Flotation Device) while on the boat.
- Familiarize yourself with all laws and regulations relating to boating and the use of outboard motors.
- Be sure that anyone who operates the outboard motor receives proper instruction.
- Be sure the outboard motor is properly mounted on the boat.
- Do not remove the engine cover while the engine is running.



# OUTBOARD MOTOR SAFETY

## Refuel With Care

- Gasoline is extremely flammable, and gasoline vapor can explode. Refuel outdoors, in a well-ventilated area, with the engine stopped. Never smoke near gasoline, and keep other flames and sparks away.
- Refuel carefully to avoid spilling fuel. Avoid overfilling the fuel tank.
- After refueling, tighten the filler cap securely. If any fuel is spilled, make sure the area is dry before starting the engine.

## Carbon Monoxide Hazard

Exhaust contains poisonous carbon monoxide, a colorless, odorless gas. Breathing carbon monoxide can cause loss of consciousness and may lead to death.

If you run the engine in an area that is confined, or even partly enclosed, the air you breathe could contain a dangerous amount of exhaust gas.

Never run your outboard inside a garage or other enclosure.

## WARNING

Running the engine of your outboard while in an enclosed or partially enclosed area can cause a rapid build-up of toxic carbon monoxide gas.


Breathing this colorless, odorless gas can quickly cause unconsciousness and lead to death.

Only run your outboard engine when it is located in a well ventilated area outdoors.



## SAFETY LABEL LOCATION

US, Puerto Rico, and US Virgin Islands Types

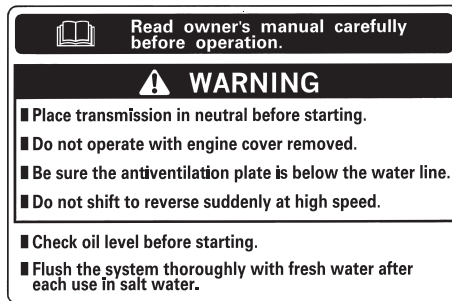


The label shown here contains important safety information. Please read it carefully. This label is considered a permanent part of your outboard motor. If the label comes off or becomes hard to read, contact an authorized Marine dealer for a replacement.



# OUTBOARD MOTOR SAFETY

## Canadian Types

### READ OWNER'S MANUAL

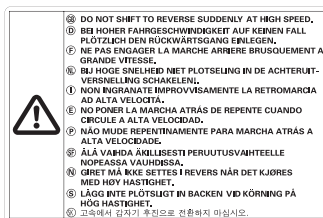

- **Honda outboard motor is designed to give safe and dependable service if operated according to instructions. Read and understand the Owner's Manual before operating the outboard motor. Failure to do so could result in personal injury or equipment damage.**

The labels shown here contain important safety information. Please read them carefully. These labels are considered permanent parts of your outboard motor. If a label comes off or becomes hard to read, contact an authorized Marine dealer for a replacement.




# CONTROLS AND FEATURES

## CONTROL AND FEATURE IDENTIFICATION CODES

Model	BF115J				BF140A						BF150D						
Type	LR□	LD□	XR□	XD□	LR□	LD□	XR□	XD□	XCR□	XCD□	JR□	LR□	LD□	XR□	XD□	XCR□	XCD□
Transom Height	20.0 in (508 mm)	•	•			•	•					•	•	•			
	25.0 in (635 mm)			•	•			•	•	•	•				•	•	•
Standard Rotating Propeller Shaft	•	•	•	•	•	•	•	•				•	•	•	•		
Counter-rotating Propeller Shaft									•	•						•	•
Mechanical wire	•		•		•		•		•		•	•		•		•	
Drive by Wire (DBW)		•		•		•		•		•			•		•		•

Refer to this chart for an explanation of the Type Codes used in this manual to identify control and feature applications.

### TYPE CODE (example)

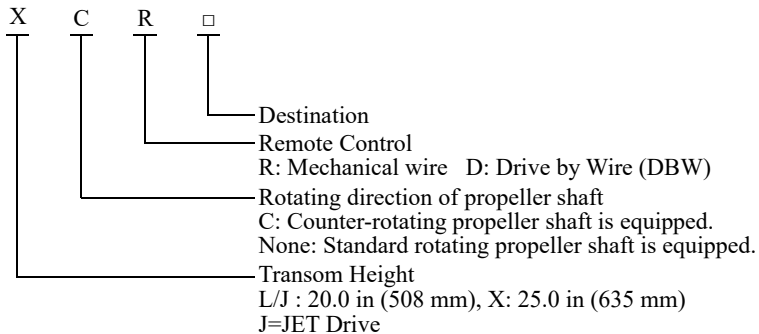



# CONTROLS AND FEATURES


---

## HOW TO DETERMINE WHICH DIRECTION THE PROPELLER SHAFT ROTATES

The direction the propeller shaft rotates can be determined based on whether or not the shaft has a groove.

With groove: Counter-rotating


Without groove: Standard rotating

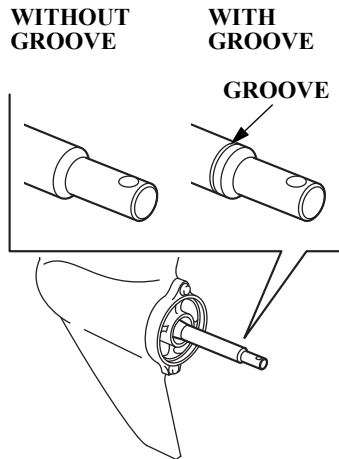



## COMPONENT AND CONTROL LOCATIONS

Except JRA Type

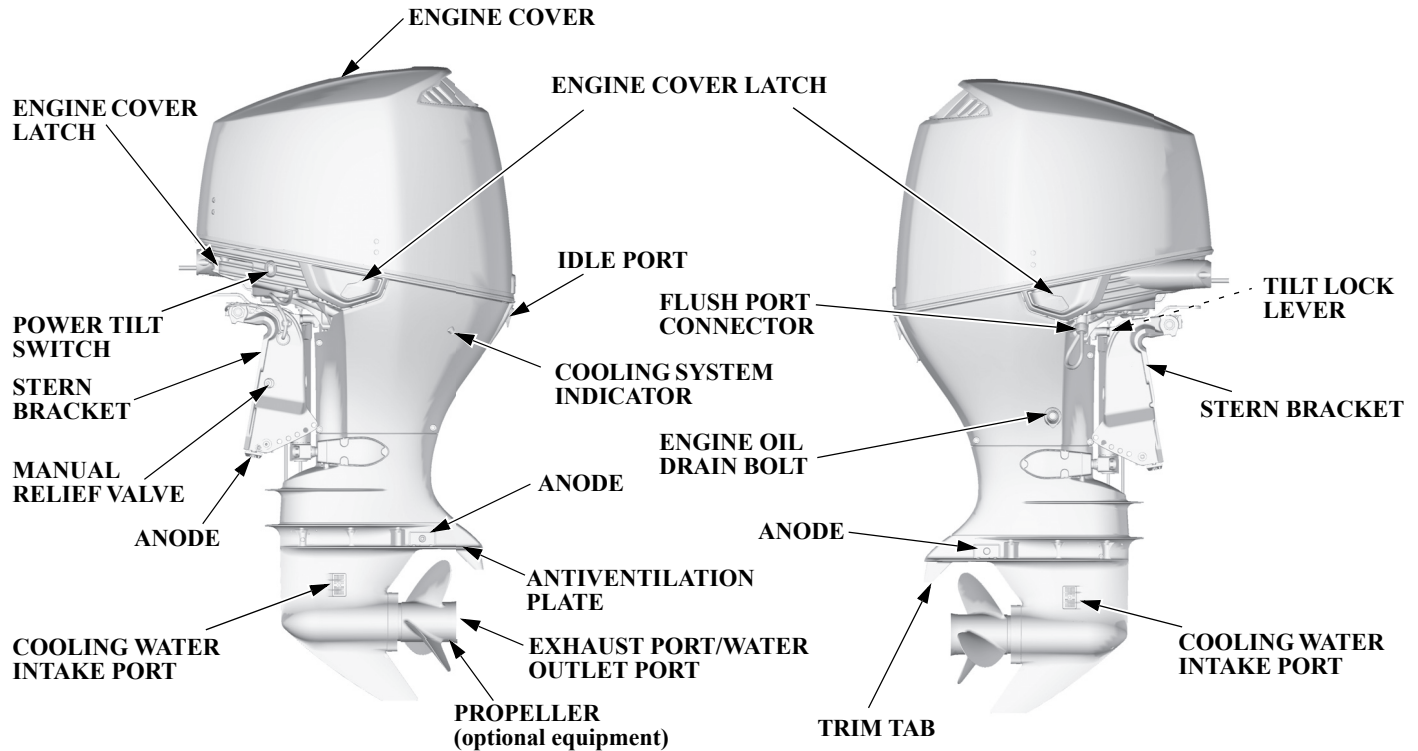




# CONTROLS AND FEATURES

---

## JRA Type

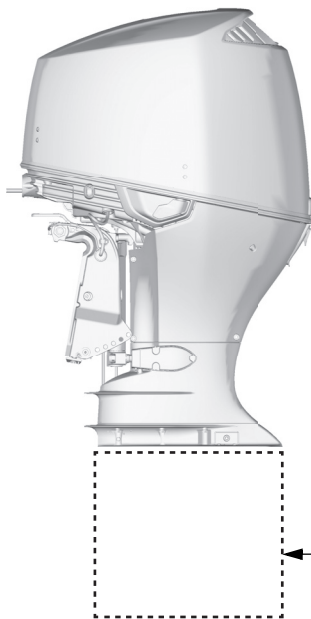


- Jet driven Honda outboard engines are shipped without the lower gear case.
- The jet drive unit must be assembled and attached to the outboard motor by an authorized Honda Marine dealer.
- For assistance with the jet drive unit on your Honda outboard, contact the jet drive manufacturer through an authorized Honda Marine dealer.

← Jet drive unit



## CONTROLS AND FEATURES

---

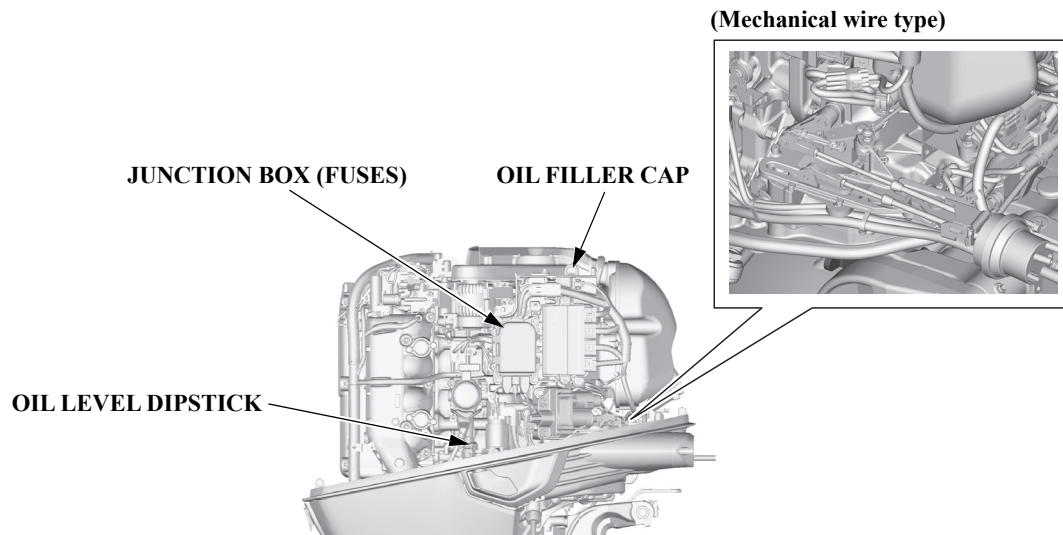




# CONTROLS AND FEATURES


---

**(Mechanical wire type)**

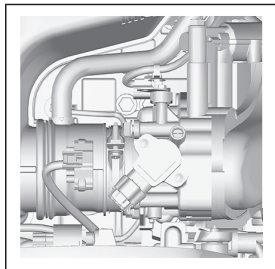


**FUEL FILTER WITH WATER SEPARATOR**

**SPARK PLUG  
(under coil)**

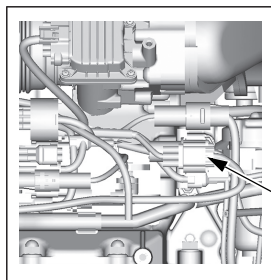

**NMEA INTERFACE COUPLER**

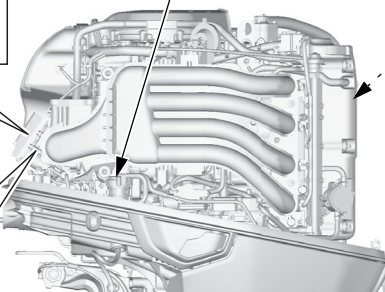





# CONTROLS AND FEATURES

## DBW Remote Control Box (optional equipment)


### (FLUSH-MOUNT REMOTE CONTROL)

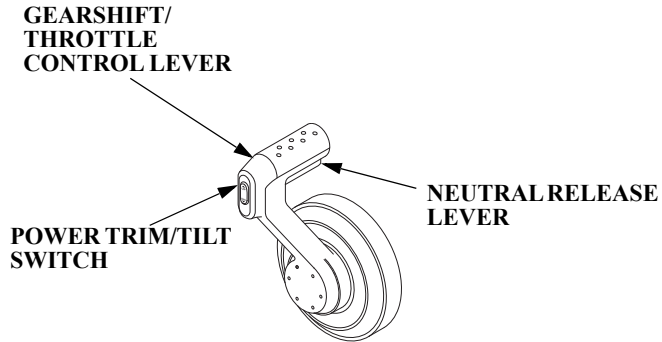

### (SINGLE TOP-MOUNT REMOTE CONTROL)

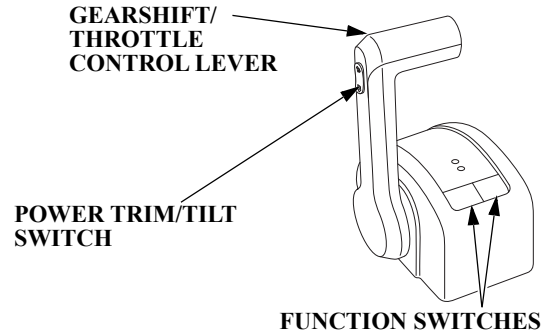

### (DUAL TOP-MOUNT REMOTE CONTROL)

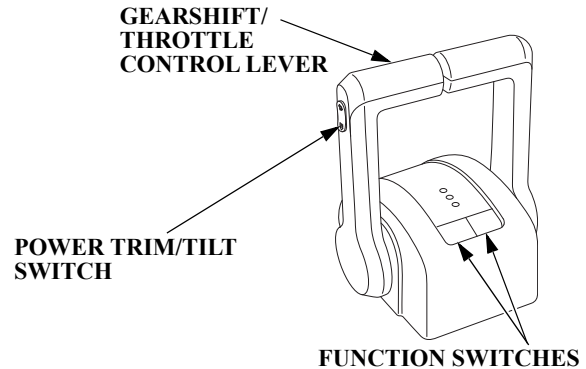





# CONTROLS AND FEATURES

## Key Switch Panel (optional equipment)


(Normal Key with START/STOP switch type)  
(Horizontal type)

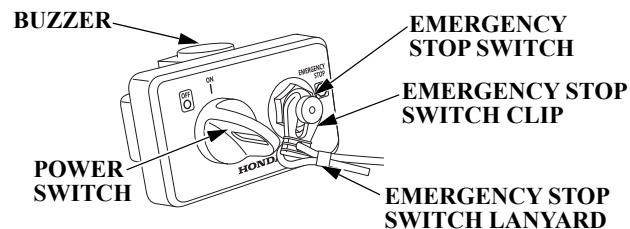

(Normal Key without START/STOP switch type)  
(Horizontal type)

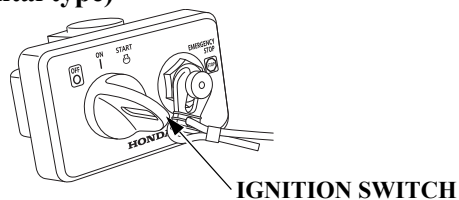


(Honda Smart Key type)  
(Horizontal type)

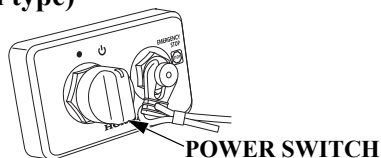


## START/STOP Switch Panel (optional equipment)


START/STOP SWITCH

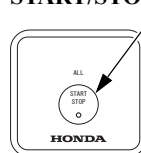


START/STOP SWITCH

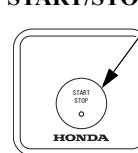

START/STOP SWITCH

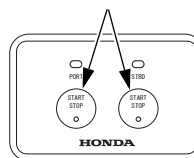

START/STOP SWITCH

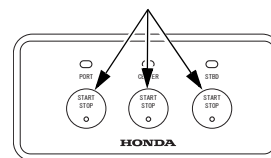

DUAL TYPE  
OUTBOARD MOTOR

TRIPLE TYPE  
OUTBOARD MOTOR


PORT: Port side engine  
CENTER: Center engine  
STBD: Starboard side engine



## CONTROLS AND FEATURES


### PTT Switch Panel (optional equipment)

#### POWER TRIM/TILT SWITCH

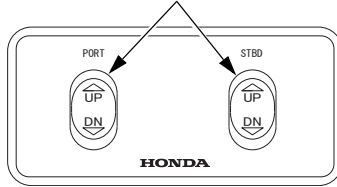

#### DUAL TYPE

#### POWER TRIM/TILT SWITCH

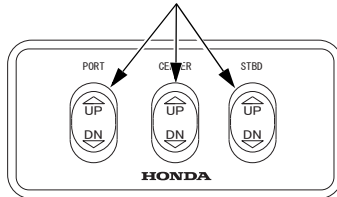


#### TRIPLE TYPE

**PORT:** Port side engine  
**CENTER:** Center engine  
**STBD:** Starboard side engine

### Function Switch Panel (optional equipment) (for FLUSH-MOUNT type)


#### FUNCTION SWITCHES

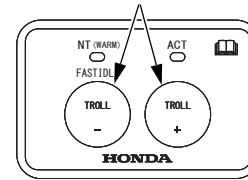

### Emergency Stop Switch Panel (optional equipment)


#### EMERGENCY STOP SWITCH

EMERGENCY STOP  
SWITCH CLIP

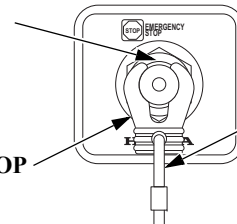

EMERGENCY STOP  
SWITCH LANYARD

### Display Assy (optional equipment)

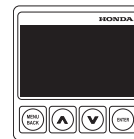




# CONTROLS AND FEATURES

---

## Remote Controls (optional equipment)

### (SIDE-MOUNT REMOTE CONTROL)

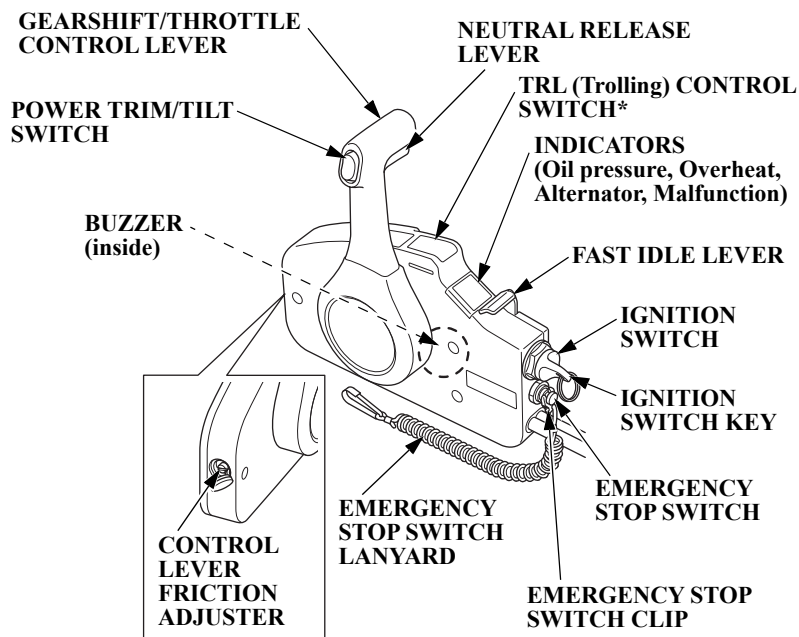

\* For TRL (Trolling) control switch equipped type.



## CONTROLS AND FEATURES


### (FLUSH-MOUNT REMOTE CONTROL)

GEARSHIFT/THROTTLE  
CONTROL LEVER

NEUTRAL RELEASE  
LEVER

POWER TRIM/TILT  
SWITCH

FAST IDLE BUTTON

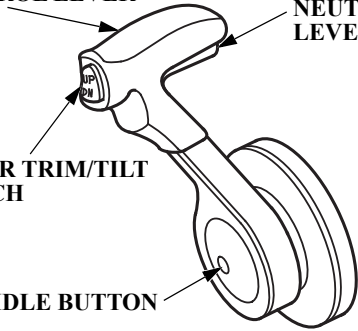


### (SINGLE TOP-MOUNT REMOTE CONTROL)

GEARSHIFT/THROTTLE  
CONTROL LEVER

POWER TRIM/  
TILT SWITCH

FAST IDLE BUTTON

TRL (Trolling)  
CONTROL SWITCH\*

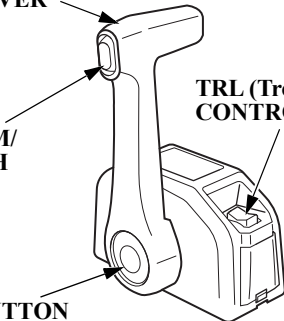

### (DUAL TOP-MOUNT REMOTE CONTROL)

POWER TRIM/TILT SWITCH  
(Left and right operations are  
interlocked)

GEARSHIFT/THROTTLE  
CONTROL LEVERS


POWER TRIM/  
TILT SWITCH  
(Right side  
operation only)

POWER TRIM/  
TILT SWITCH  
(Left side  
operation only)

FAST IDLE BUTTON  
(On both sides)

TRL (Trolling)  
CONTROL SWITCH\*  
(Left-side adjustment  
only)

TRL (Trolling)  
CONTROL SWITCH\*  
(Right-side adjustment  
only)

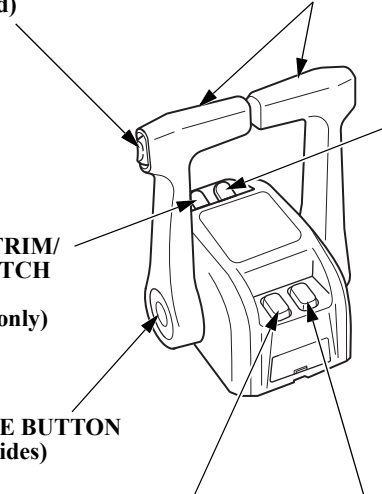


\* For TRL (Trolling) control switch equipped type.




# CONTROLS AND FEATURES


## CONTROL PANEL (for FLUSH-MOUNT/TOP-MOUNT SINGLE types)

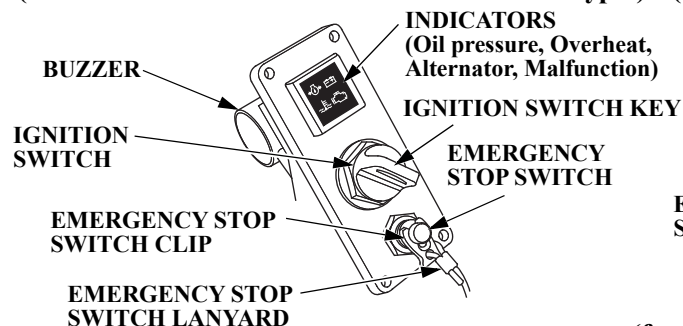


(for DUAL OUTBOARD MOTORS type)

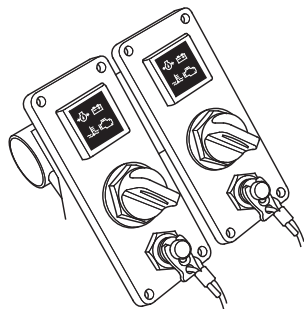


## CONTROL PANEL without indicators type (for FLUSH-MOUNT/TOP-MOUNT SINGLE types)

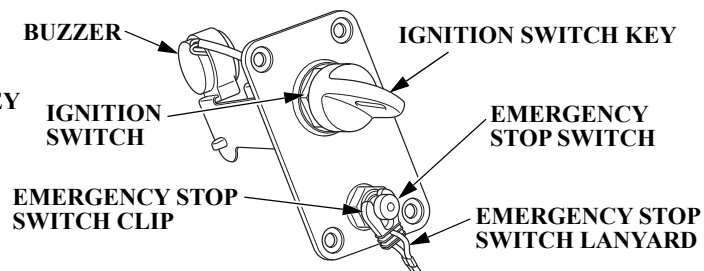

(for DUAL OUTBOARD  
MOTORS type)

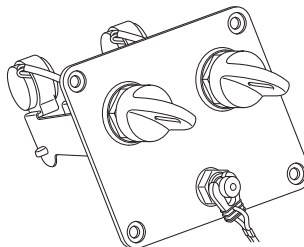

(for TRIPLE OUTBOARD  
MOTORS type)

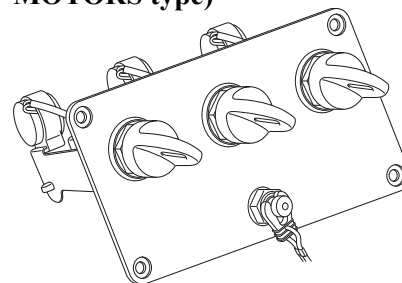


For the control panel without indicators type, use it  
along with the NMEA2000-compatible device.




## Instruments (optional equipment)


### Tachometer

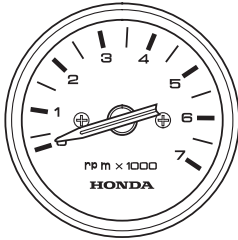

### Trim Meter

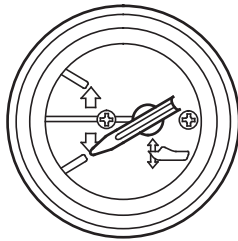

### Trolling Control Switch Panel

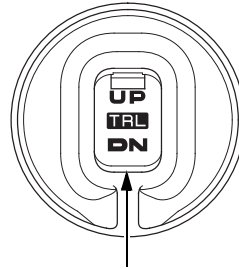

TRL (Trolling)  
CONTROL SWITCH




# CONTROLS AND FEATURES

## CONTROLS

### Flush-Mount/Top-Mount Types (DBW type)

#### *Ignition Switch (without START/STOP switch)*

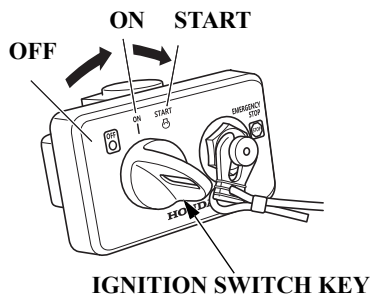

The ignition switch controls the ignition system and the starter motor.


Turning the ignition switch key to the START position starts the engine. The key automatically returns to the ON position when released from the START position.

The engine will not start unless the gearshift/throttle control lever is in the N (neutral) position (p. 63) and the emergency stop switch clip is in the emergency stop switch.


Turning the ignition switch to the OFF position stops the engine.



### **Power Switch (with START/STOP switch)**

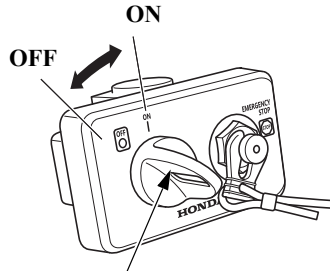

**POWER SWITCH  
(normal key type)**

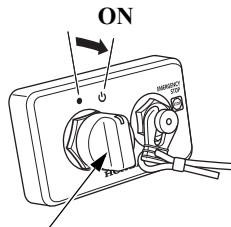

**POWER SWITCH  
(Honda Smart Key type)**

This remote control is equipped with a start/stop switch.

#### **<Normal Key Type>**

**ON:** This position allows the engine to start and run.

**OFF:** This position stops the engine (Ignition OFF).

#### **<Honda Smart Key Type>**

Turn the power switch clockwise and then release to turn the power ON.


Turn and release the power switch again to turn the power OFF.

#### **NOTICE**

**Turn the power off after the engine is stopped. If the power is not turned off after the engine is stopped, the battery will continue to drain until it is depleted.**

For the Honda Smart Key type, electrical power cannot be supplied to the boat unless the Smart Key and remote control are properly paired (authenticated).

### **Honda Smart Key (optional equipment)**

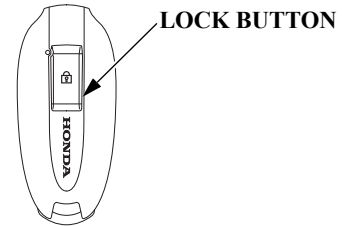

The Honda Smart Key has an immobilizer system. The immobilizer system helps to protect against boat theft. Refer to the Honda Smart Key Owner's Manual for complete information on the Smart Key system.


The Honda Smart Key is available in certain areas.



# CONTROLS AND FEATURES

---

## *START/STOP Switch*

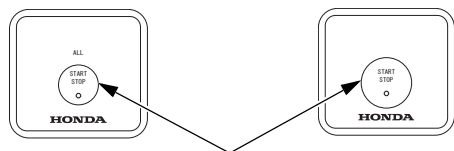


**START/STOP SWITCH**

**ALL ENGINE START  
FOR MULTIPLE  
OUTBOARD MOTORS**

To start the engine, be sure the power switch is in the ON position, and then press the start/stop switch button.

**SINGLE TYPE  
OUTBOARD MOTOR**

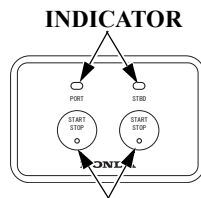


**START/STOP SWITCH**

**DUAL TYPE  
OUTBOARD MOTORS**

For boats with multiple outboard motors and equipped with the All Engine Start key switch, all motors can be started at the same time at the press of one button.

For boats equipped with multiple outboard motors and either the Dual Type or Triple Type key switches, each outboard on the boat may be started individually and the corresponding indicator light will turn on after the engine has started.

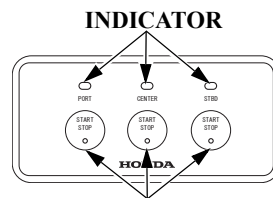

**START/STOP SWITCH**


**TRIPLE TYPE  
OUTBOARD MOTORS**

The starter motor will not work unless the gearshift/throttle control lever is in the NEUTRAL position, and the clip is in the emergency stop switch.




### ***Emergency Stop Switch Clip and Emergency Stop Switch***

**EMERGENCY  
STOP SWITCH**

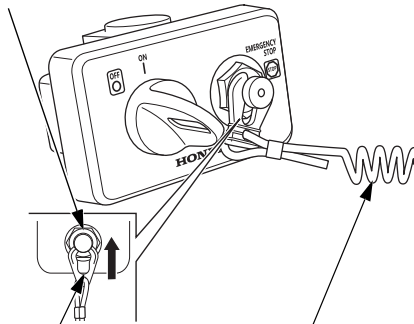

**EMERGENCY STOP  
SWITCH CLIP**

**EMERGENCY  
STOP SWITCH  
LANYARD**

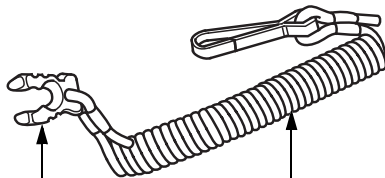


**EMERGENCY  
STOP SWITCH  
CLIP**

**EMERGENCY  
STOP SWITCH  
LANYARD**

The emergency stop switch clip must be inserted in the emergency stop switch in order for the engine to start and run. The emergency stop switch lanyard must be attached securely to the operator or to the operator's PFD (Personal Flotation Device).

When used as described, the emergency stop switch clip and emergency stop switch lanyard system stops the engine if the operator falls away from the controls.

A spare switch clip (optional equipment) can be stored in the tool bag.

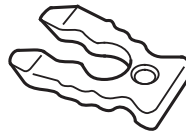


**SPARE SWITCH CLIP  
(optional equipment)**




## CONTROLS AND FEATURES

### *Gearshift/Throttle Control Lever (Flush-Mount type)*

GEARSHIFT/THROTTLE  
CONTROL LEVER

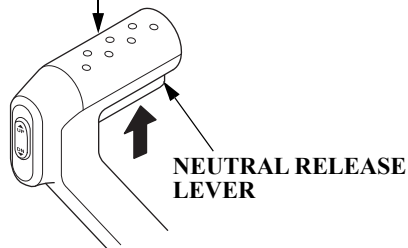

The gearshift/throttle control lever controls engine speed and selects F (forward), N (neutral), or R (reverse) gears.

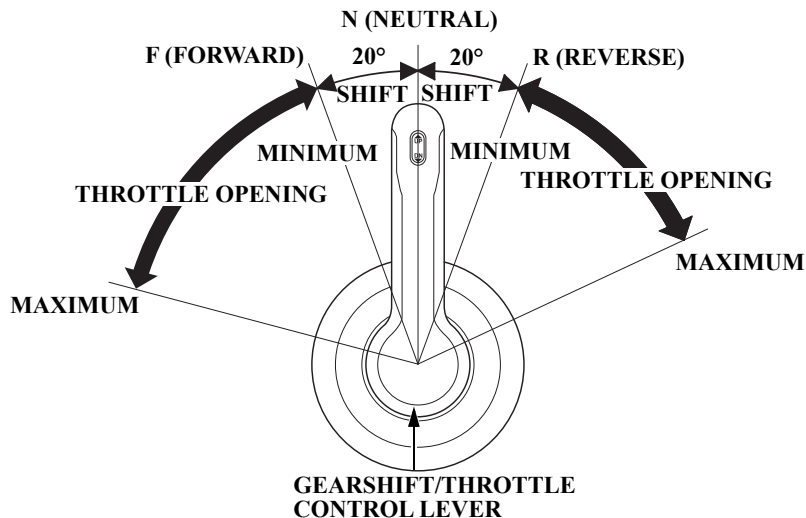

Moving the control lever 20° from N (neutral) selects the gear, and further movement increases engine speed.

The control lever automatically locks itself in the N (neutral) position. To move the lever out of the N (neutral) position, you must squeeze the neutral release lever on the underside of the lever handle.


A friction adjuster near the base of the control lever adjusts the operating resistance of the control lever. Refer to p. 80.

Less friction allows easier control lever movement. More friction helps to hold a steady throttle setting while cruising.




### ***Gearshift/Throttle Control Lever (Top-Mount type (DBW type))***


#### **SINGLE TYPE**

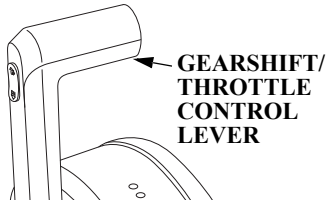

#### **DUAL TYPE**

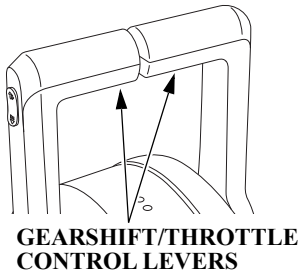

The gearshift/throttle control lever(s) controls engine speed and selects F (forward), N (neutral), or R (reverse) gears.

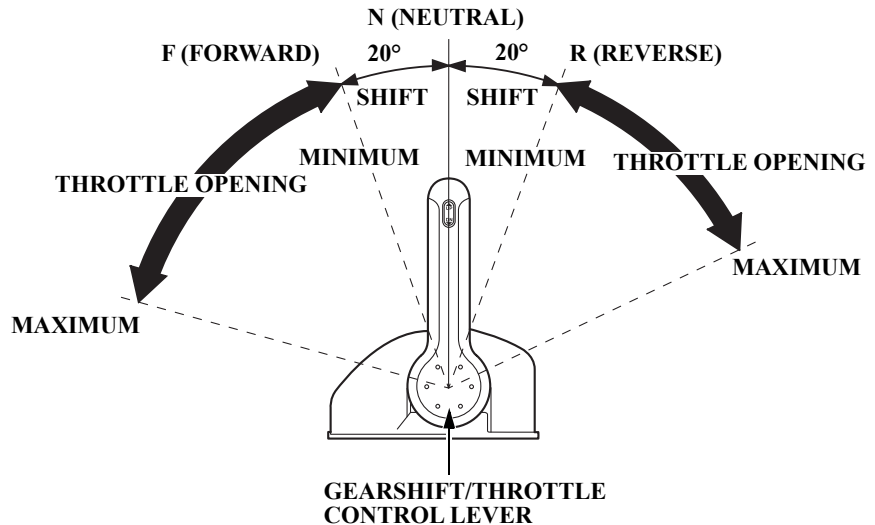

Moving the control lever 20° from N (neutral) selects the gear, and further movement increases engine speed.


A friction adjuster inside the control box adjusts the operating resistance of the control lever(s). Refer to p. 80.

Less friction allows easier control lever movement. More friction helps to hold a steady throttle setting while cruising.



# CONTROLS AND FEATURES

## Function Switches (Flush-Mount type)

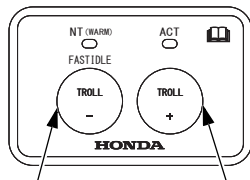

**[-] SWITCH**

**[+] SWITCH**

Function switches are used for operations in the fast idle mode and trolling mode.

### NT (WARM)

Lights: The shift is in neutral.

Blinks: It is in the fast idle mode.

### ACT


Lights: The shift and throttle operations are possible.

Off: The shift and throttle operations are not possible.

## <Fast Idle Mode>

After the engine starts and if the outside temperature is below 41°F (5°C), the fast idle mode can be used to accelerate engine warm up.

See page 65 for engine warm-up instructions.

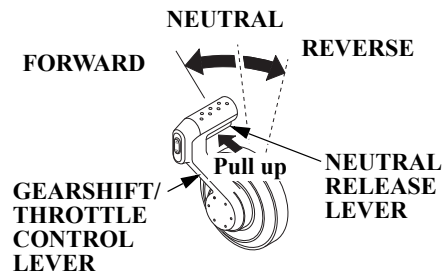

Use the [-] switch and the gearshift/throttle control lever to adjust the engine speed without gearshift when warming up the engine.

Keeping the [-] switch pressed when the gearshift/throttle control lever is in the NEUTRAL position, turn the lever forward. Keep turning the lever forward. The throttle opens and the engine speed increases after the lever passed the shift point.

Note that the gearshift mechanism does not function when the [-] switch is pushed once and then released after the gearshift/throttle control lever is moved. The control lever does not operate unless the neutral release lever is pulled.

To release the fast idle mode, press and hold the [-] switch.



### <Trolling Mode>


The engine speed can be adjusted with the [-] switch and [+] switch when in trolling mode.

If you press and hold the [+] switch while cruising with the throttle closed, the mode changes to trolling mode.

**Engine speed adjusting range:**  
650 rpm – 900 rpm (every 50 rpm)

To release the trolling mode, press and hold the [+] switch.

### Function Switches (Top-Mount type (DBW type))

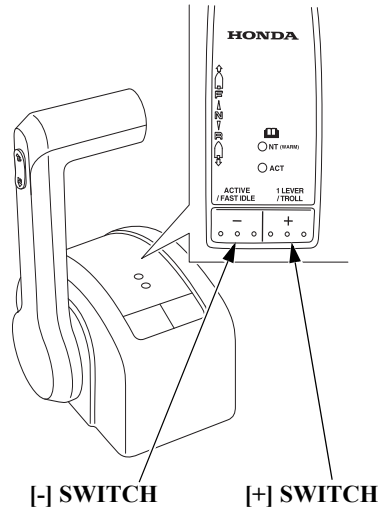

Function switches are used for operations in the fast idle mode, trolling mode, one-lever mode and station select mode.

### NT (WARM)

Lights: The shift is in neutral.

Blinks: It is in the fast idle mode.

### ACT

Lights: The shift and throttle operations are possible.

Off: The shift and throttle operations are not possible.


### <Fast Idle Mode>

After the engine starts and if the outside temperature is below 41°F (5°C), the fast idle mode can be used to accelerate engine warm up.

See page 65 for engine warm-up instructions.



## CONTROLS AND FEATURES

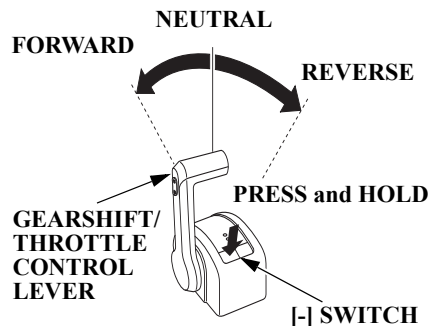

Use the [-] switch and the gearshift/throttle control lever to adjust the engine speed without gearshift when warming up the engine.

Keeping the [-] switch pressed when the gearshift/throttle control lever is in the NEUTRAL position, turn the lever forward. Keep turning the lever forward. The throttle opens and the engine speed increases after the lever passed the shift point.

Note that the gearshift mechanism does not function when the [-] switch is pushed once and then released after the gearshift/throttle control lever is moved. To release the fast idle mode, press and hold the [-] switch.

### <Trolling Mode>

The engine speed can be adjusted with the [-] switch and [+] switch when in trolling mode.

If you press and hold the [+] switch while cruising with the throttle closed, the mode changes to trolling mode.

**Engine speed adjusting range:**  
650 rpm – 900 rpm (every 50 rpm)

To release the trolling mode, press and hold the [+] switch.

### <One-Lever Mode>

(For multiple outboard motors type)  
Shifting gear and the engine speed adjustment of the all outboard motors can be performed with one gearshift/throttle control lever when in one-lever mode.

If you press and hold the [+] switch when all gearshift/throttle control lever is in the NEUTRAL position, the mode changes to one-lever mode. To release one-lever mode, press and hold the [+] switch.

### <Station Select Mode>


For multiple station type, use the [-] switch to change the operating station.

If you press and hold the [-] switch of the inactive station when all gearshift/throttle control lever is in the NEUTRAL position, you can operate the outboard motors using this station.



### Side-Mount Type

#### *Ignition Switch*

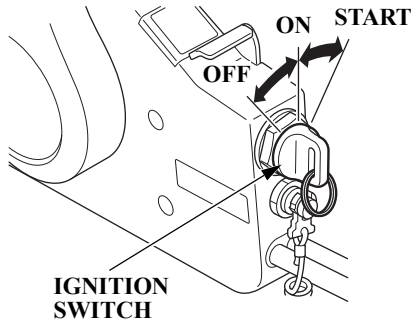

The ignition switch controls the ignition system and the starter motor.

Turning the ignition switch key to the START position starts the engine. The key automatically returns to the ON position when released from the START position.

The engine will not start unless the gearshift/throttle control lever is in the N (neutral) position (p. 66) and the emergency stop switch clip is in the emergency stop switch.



Turning the ignition switch to the OFF position stops the engine.



## CONTROLS AND FEATURES

### *Emergency Stop Switch Clip and Emergency Stop Switch*


**EMERGENCY  
STOP SWITCH**

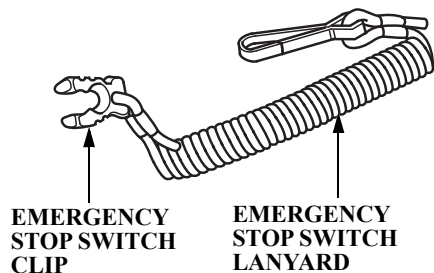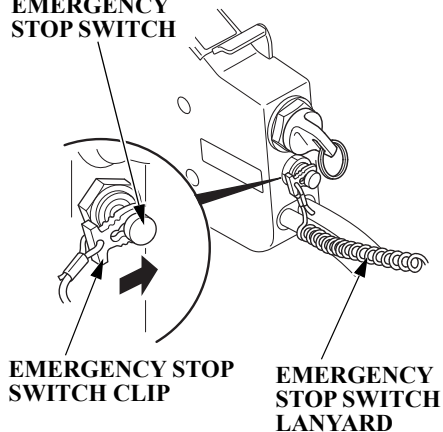

The emergency stop switch clip must be inserted in the emergency stop switch in order for the engine to start and run. The emergency stop switch lanyard must be attached securely to the operator or to the operator's PFD (Personal Flotation Device).

When used as described, the emergency stop switch clip and emergency stop switch lanyard system stops the engine if the operator falls away from the controls.


A spare switch clip (optional equipment) can be stored in the tool bag.

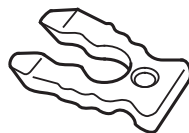

**SPARE SWITCH CLIP  
(optional equipment)**

### *Gearshift/Throttle Control Lever*

**GEARSHIFT/THROTTLE  
CONTROL LEVER**

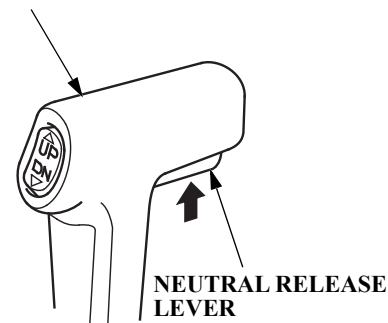

The gearshift/throttle control lever controls engine speed and selects F (forward), N (neutral), or R (reverse) gears.




## CONTROLS AND FEATURES

Moving the control lever  $32^\circ$  from N (neutral) selects the gear, and further movement increases engine speed.

The control lever automatically locks itself in the N (neutral) position. To move the lever out of the N (neutral) position, you must squeeze the neutral release lever on the underside of the lever handle.

A friction adjuster adjusts the operating resistance of the control lever(s). Refer to p. 81.


Less friction allows easier control lever movement. More friction helps to hold a steady throttle setting while cruising.

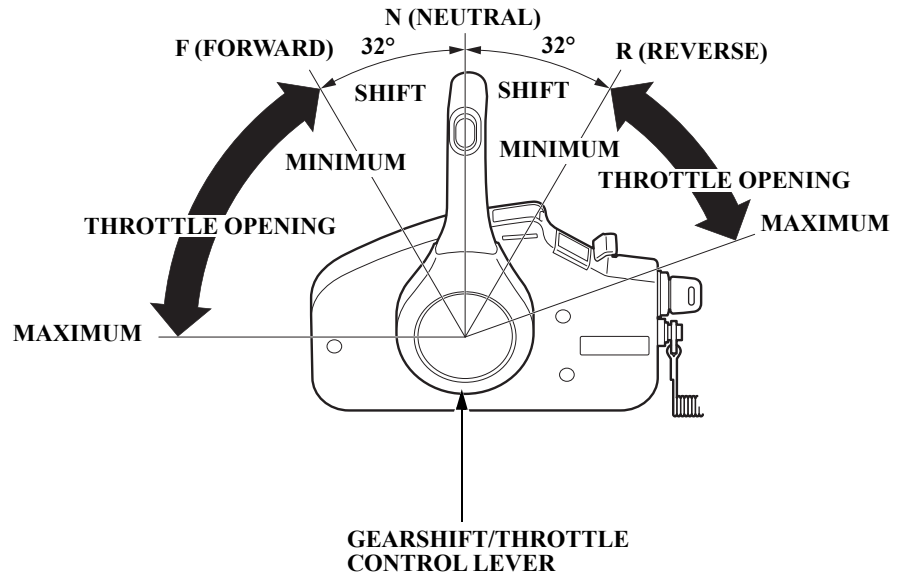




## CONTROLS AND FEATURES

### *Fast Idle Lever*

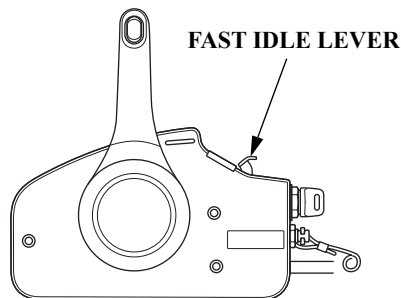

Use the fast idle lever to accelerate engine warm-up after starting the engine. Do not use the fast idle lever when starting the engine.


See page 68 for engine warm-up instructions.

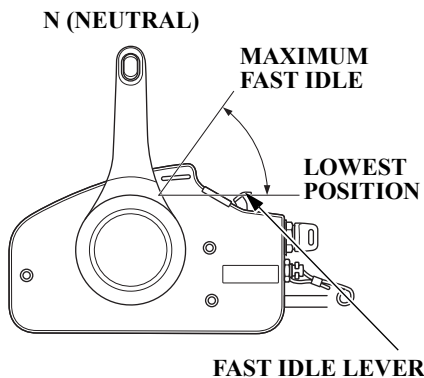

The fast idle lever allows you to increase the idle speed only when the control lever is in the N (neutral) position. Place the fast idle lever in its lowest position to cancel the fast idle and return the control lever to normal operation.

### **Flush-Mount Type (Mechanical wire type)**

#### *Ignition Switch*

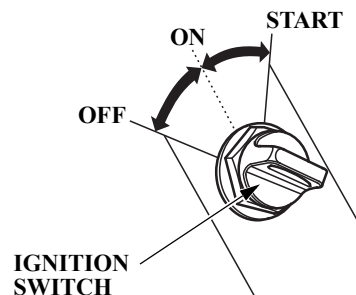

The ignition switch controls the ignition system and the starter motor.





Turning the ignition switch key to the START position starts the engine. The key automatically returns to the ON position when released from the START position.

The engine will not start unless the gearshift/throttle control lever is in the N (neutral) position (p. 69) and the emergency stop switch clip is in the emergency stop switch.

Turning the ignition switch to the OFF position stops the engine.

### ***Emergency Stop Switch Clip and Emergency Stop Switch***


**EMERGENCY STOP SWITCH**

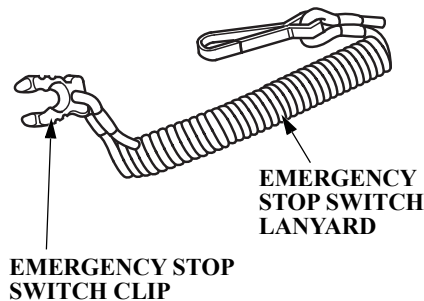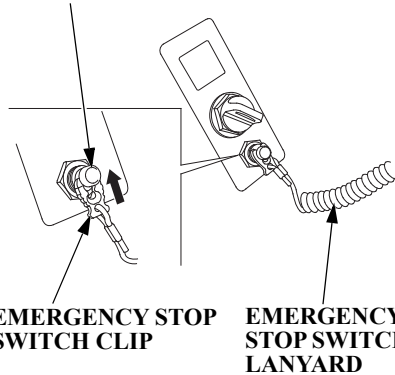

The emergency stop switch clip must be inserted in the emergency stop switch in order for the engine to start and run. The emergency stop switch lanyard must be attached securely to the operator or to the operator's PFD (Personal Flotation Device).

When used as described, the emergency stop switch clip and emergency stop switch lanyard system stops the engine if the operator falls away from the controls.

A spare switch clip (optional equipment) can be stored in the tool bag.

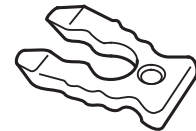


**SPARE SWITCH CLIP  
(optional equipment)**




# CONTROLS AND FEATURES

## *Gearshift/Throttle Control Lever*

GEARSHIFT/THROTTLE  
CONTROL LEVER

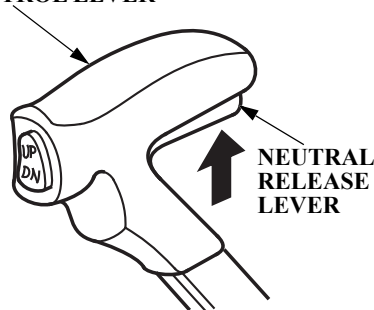

The gearshift/throttle control lever controls engine speed and selects F (forward), N (neutral), or R (reverse) gears.

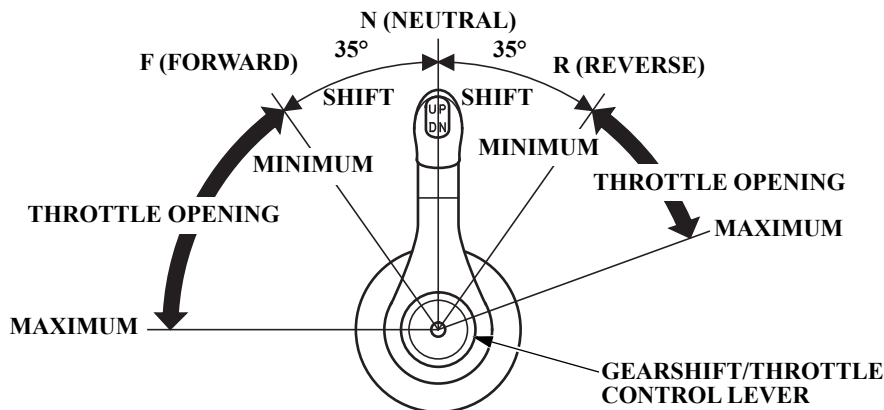

Moving the control lever 35° from N (neutral) selects the gear, and further movement increases engine speed.


The control lever automatically locks itself in the N (neutral) position. To move the lever out of the N (neutral) position, you must squeeze the neutral release lever on the underside of the lever handle.

A friction adjuster near the base of the control lever adjusts the operating resistance of the control lever. Refer to p. 82.

Less friction allows easier control lever movement. More friction helps to hold a steady throttle setting while cruising.




### ***Fast Idle Button***

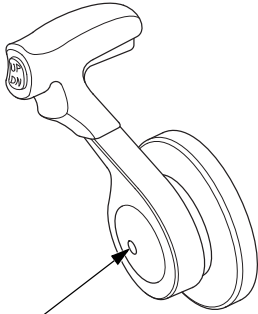

**FAST IDLE BUTTON**

Use the fast idle button to accelerate engine warm-up after starting the engine. Do not use the fast idle button when starting the engine.

See page 70 for engine warm-up instructions.

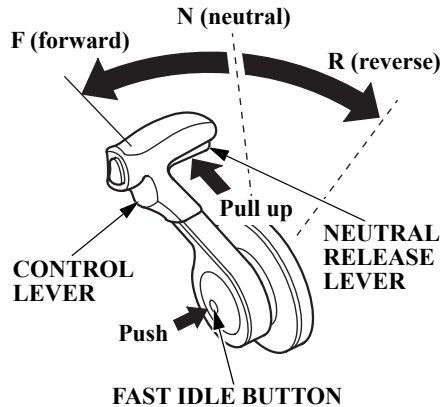

The fast idle button allows you to increase the idle speed without engaging the drive gears. Move the control lever forward or reverse after pushing in the fast idle button to increase the idle speed.

It is necessary to position the control lever in the N (neutral) position to push in the fast idle button.


Return the control lever to N (neutral) position to cancel the fast idle operation.



# CONTROLS AND FEATURES

## Top-Mount Type (Mechanical wire type)

### *Ignition Switch*

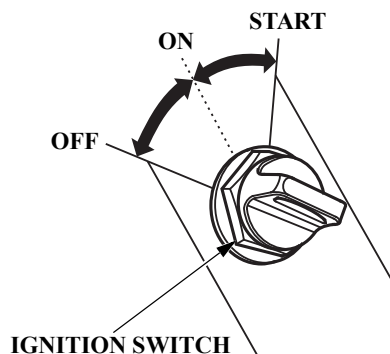


The ignition switch controls the ignition system and the starter motor.

Turning the ignition switch key to the START position operates the starter motor. The key automatically returns to the ON position when released from the START position.

The engine will not start unless the gearshift/throttle control lever is in the N (neutral) position (p. 72) and the emergency stop switch clip is in the emergency stop switch.

Turning the ignition switch to the OFF position stops the engine.

## *Emergency Stop Switch Clip and Emergency Stop Switch*

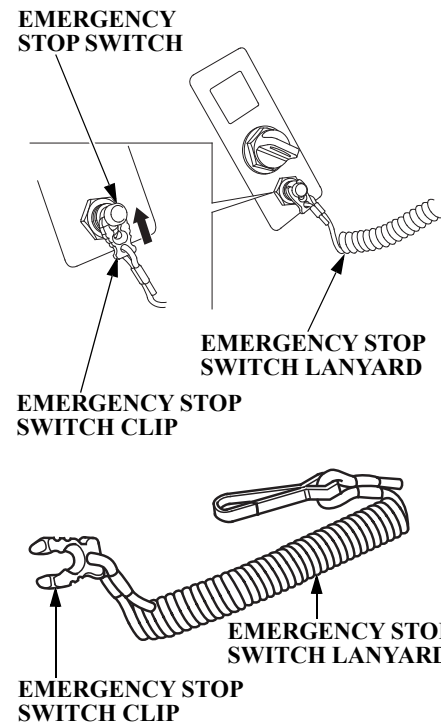




The emergency stop switch clip must be inserted in the emergency stop switch in order for the engine to start and run. The emergency stop switch lanyard must be attached securely to the operator or to the operator's PFD (Personal Flotation Device).

When used as described, the emergency stop switch clip and emergency stop switch lanyard system stops the engine if the operator falls away from the controls.

A spare switch clip (optional equipment) can be stored in the tool bag.

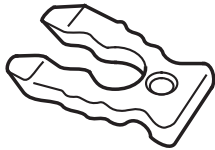


**SPARE SWITCH CLIP**  
(optional equipment)

### ***Gearshift/Throttle Control Lever***

#### **SINGLE TYPE**



#### **DUAL TYPE**

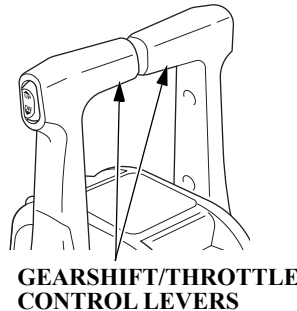

The gearshift/throttle control lever(s) controls engine speed and selects F (forward), N (neutral), or R (reverse) gears.




## CONTROLS AND FEATURES

Moving the control lever 35° from N (neutral) selects the gear, and further movement increases engine speed.


A friction adjuster inside the control box adjusts the operating resistance of the control lever(s). Refer to p. 82.

Less friction allows easier control lever movement. More friction helps to hold a steady throttle setting while cruising.

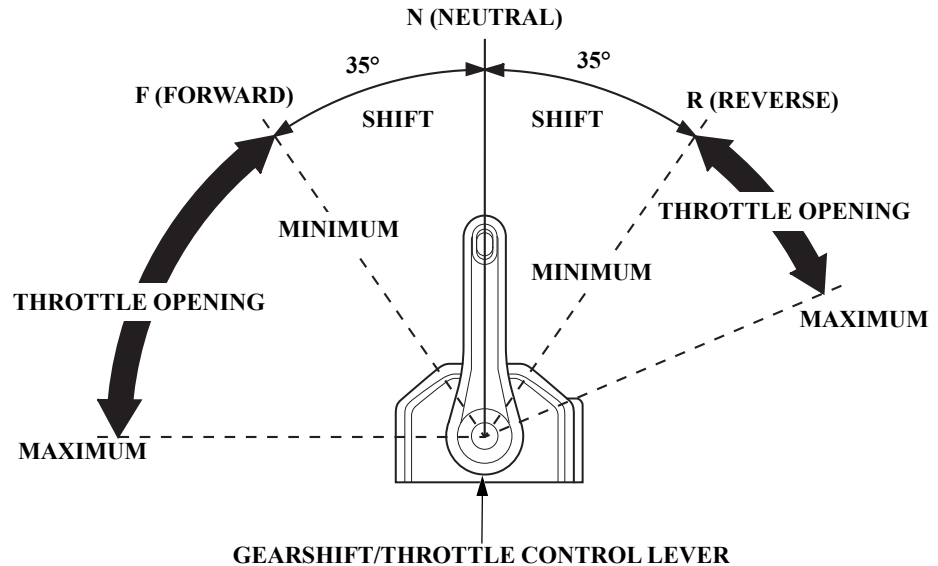




### *Fast Idle Button*

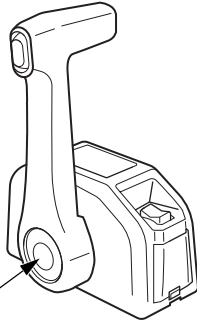

**FAST IDLE BUTTON**

Use the fast idle button to accelerate engine warm-up after starting the engine. Do not use the fast idle button when starting the engine.

See page 73 for engine warm-up instructions.

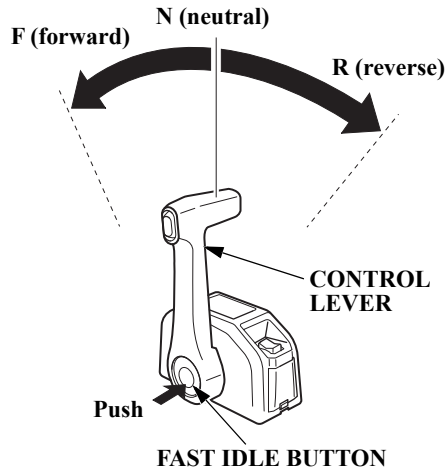

The fast idle button allows you to increase the idle speed without engaging the drive gears. Move the control lever forward or reverse after pushing in the fast idle button to increase the idle speed.

It is necessary to position the control lever in the N (neutral) position to push in the fast idle button.

Return the control lever to N (neutral) position to cancel the fast idle operation.




# CONTROLS AND FEATURES

---


## Common Controls

### Power Trim/Tilt Switch


(flush-mount type)

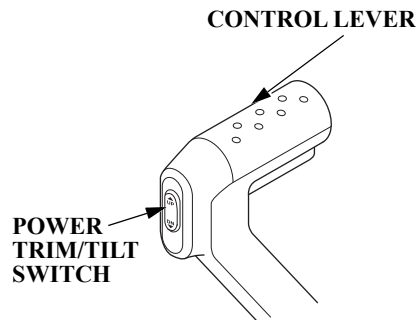



(top-mount type  
(DBW type))

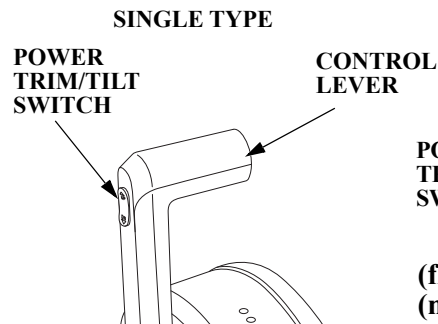

(side-mount type)

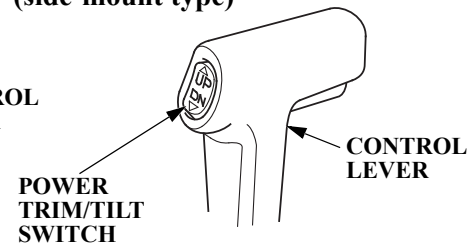

(flush-mount type  
(mechanical wire type))

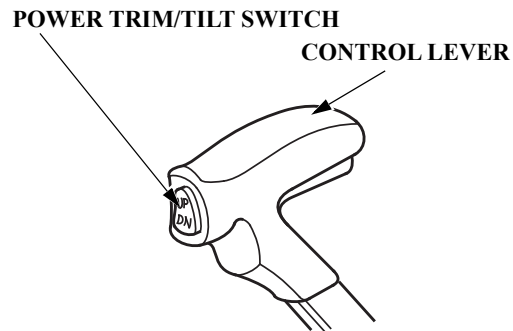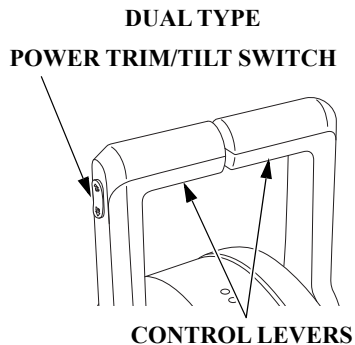




## CONTROLS AND FEATURES

**(top-mount type  
(mechanical wire type))**  
**SINGLE TYPE**


**POWER TRIM/TILT SWITCH**

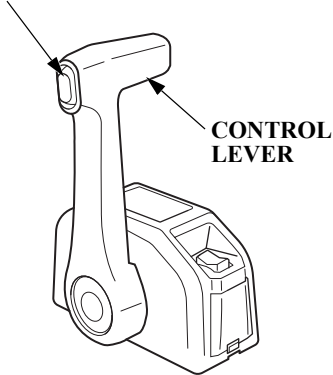

**DUAL TYPE**

**POWER TRIM/TILT SWITCH (Left  
and right operations are interlocked)**

**CONTROL LEVERS**

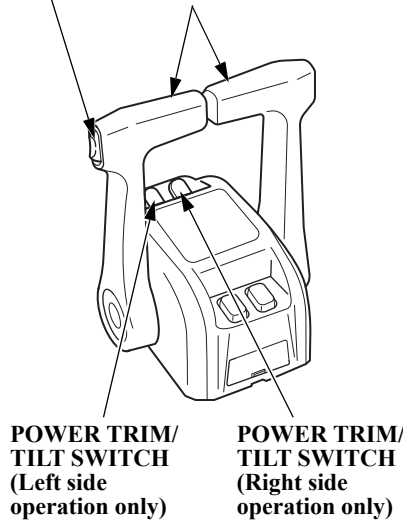

The power trim/tilt switch is located on the control lever. It is a rocker switch with UP and DN (down) positions for changing the angle of the outboard motor.

You can use the power trim/tilt switch anytime whether the boat is underway, stopped, or the ignition switch is in the OFF position. It is necessary for the ignition switch to be in the ON position for the trim meter to indicate the outboard motor angle.

Trim the outboard motor to obtain the best performance and stability (p. 82).

Tilt the outboard motor for shallow water operation, beaching, launching, or mooring.


For dual mount outboard motors, tilt them up at the same time.



# CONTROLS AND FEATURES


## *PTT Switch Panel*

### POWER TRIM/TILT SWITCH PANEL

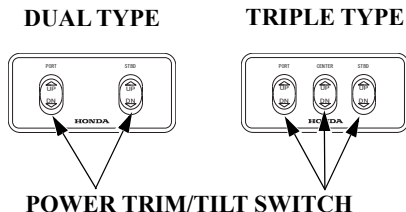

For multiple outboard motors, the trim/tilt angle of all outboard motors is adjusted at the same time by using the power trim/tilt switch on the remote control lever and the trim/tilt angle of each outboard motor is adjusted by using each power trim/tilt switch on the panel.

## Power Tilt Switch

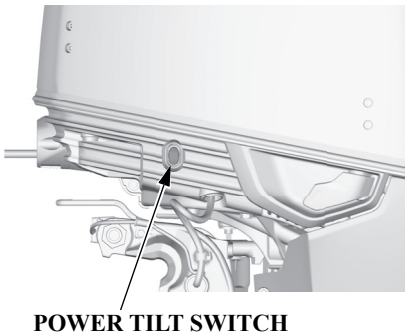


The power tilt switch is located on the engine pan. It is a rocker switch with UP and DN (down) positions for changing the angle of the outboard motor.

The power tilt switch will operate without turning the ignition switch ON.

This switch is used with the engine stopped to raise the outboard motor for mooring, trailering, or maintenance.

## Manual Relief Valve

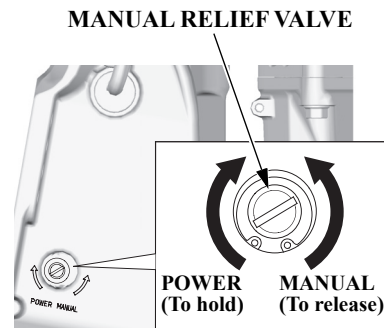


The outboard motor can be tilted manually after opening the manual relief valve. This allows the outboard motor to be tilted up or down when no battery is connected.

Check that nobody is under the outboard motor before opening the manual relief valve. If the manual relief valve is loosened (turned counterclockwise) when the outboard motor is tilted up, the outboard motor will suddenly tilt down.



### Tilt Lock Lever

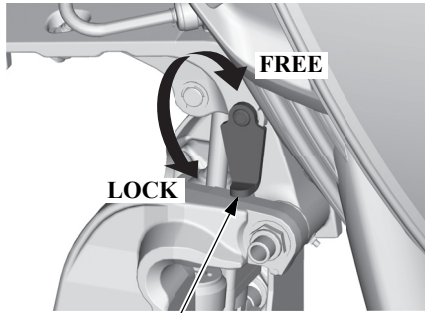


**TILT LOCK LEVER**

The tilt lock lever is used to support the outboard motor in the fully-raised position.

When the boat is to be moored for a long time, tilt the outboard motor up as far as it will go. Then move the tilt lock lever to the LOCK position, and gently lower the outboard motor until the lever contacts the stern bracket.

### TRL (Trolling) Control Switch (optional equipment; based on control box)


#### *Remote Control Box (Side-mount type)*

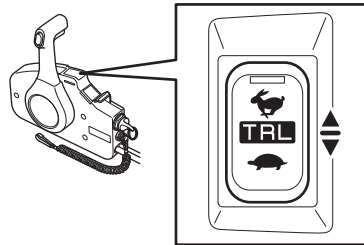

**TRL (Trolling)  
CONTROL SWITCH**

For TRL (Trolling) control switch equipped type.

#### *Remote Control Box (Top-mount single type)*

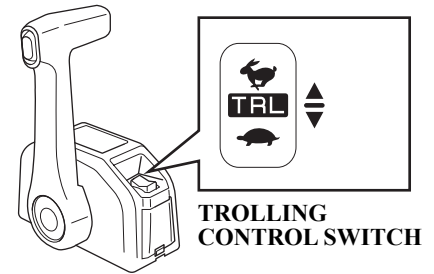


For TRL (Trolling) control switch equipped type.




## CONTROLS AND FEATURES

### *Remote Control Box (Top-mount dual type)*

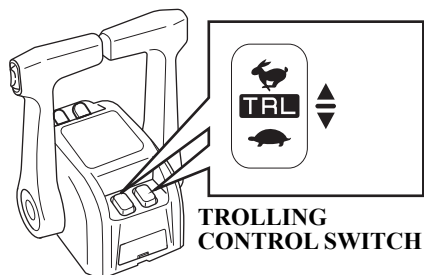

For TRL (Trolling) control switch equipped type.

### *Trolling Control Switch Panel (optional equipment)*

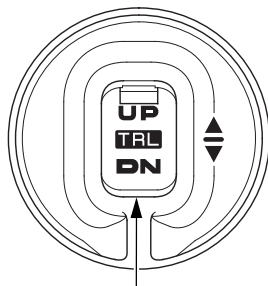

#### **TRL (Trolling) CONTROL SWITCH**

The TRL (Trolling) control switch is a rocker switch with UP and DN (down) positions to adjust the trolling speed up or down in 50 rpm increments within the range of 650 to 900 rpm.


If you press and hold the TRL control switch while cruising with the throttle closed, the mode changes to trolling mode (p. 85).

### **Engine Cover Latches**

#### **Front**




#### **Side**

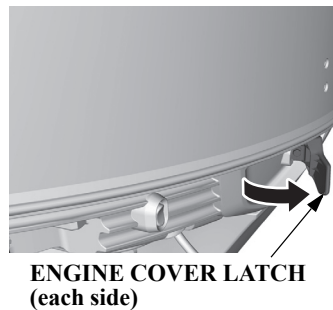

The engine cover latches fasten the engine cover to the outboard motor.



### Trim Tab

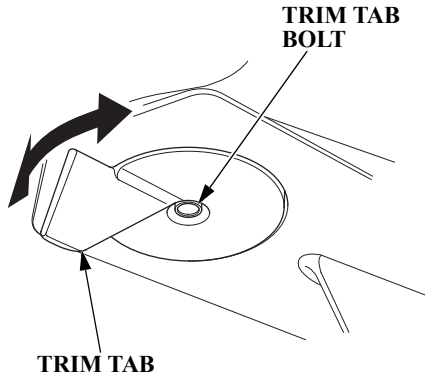


The trim tab compensates for “torque steer,” which is a reaction of the outboard motor to propeller rotation.

If uncompensated, torque steer would make the outboard motor tend to turn to one side.

When the trim tab is correctly adjusted (p. 96), steering effort is equal in both directions.

### INSTRUMENTS


#### Trim Meter (optional equipment)

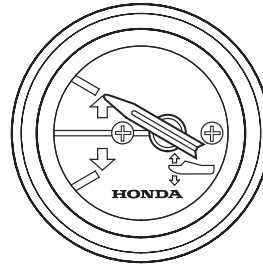

The trim meter indicates the relative trim angle of the outboard motor.

Refer to the trim meter when using the power trim/tilt switch to achieve the best performance from the boat.

#### Tachometer (optional equipment)

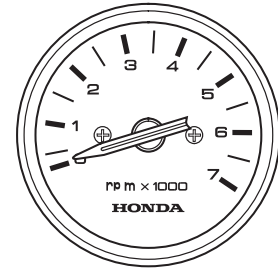

The tachometer shows engine speed in revolutions per minute.


Refer to the tachometer when using the throttle and power trim/tilt controls to achieve the best performance from the boat.



# CONTROLS AND FEATURES

## NMEA Interface Coupler

The NMEA2000® interface coupler can provide information regarding engine speed, fuel consumption, and various warnings to an existing NMEA2000 network via an optional interface cable. Contact your dealer for more information.

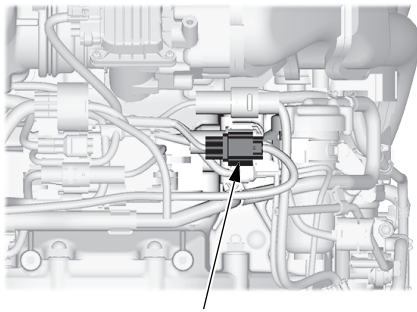

**NMEA INTERFACE COUPLER**

## Operating Hour Notification System

This outboard motor engine counts the number of operating hours since the last periodic maintenance. When the next periodic maintenance is due, the engine notifies the NMEA2000 network, and a maintenance indication is displayed on an NMEA2000-compatible device.

After periodic maintenance is performed, reset the hour counter by:

DBW type:

1. Turning ON the power switch or ignition switch. (The buzzer will sound twice.)
  - Wait at least 1 second.
2. With the control lever of the outboard motor, shifting to the "F" (forward) or "R" (reverse) gear.
3. Turning OFF the power switch or ignition switch.

4. Turning ON the power switch or ignition switch. (The buzzer will sound twice.)
5. Inserting and removing the emergency stop switch clip five times within 20 seconds.
  - When reset, the buzzer will sound once.

Mechanical wire type:

1. Stopping the engine.
2. Setting the gearshift at F or R.
3. Turning the ignition switch ON. The buzzer will sound once.
4. Pressing the emergency stop switch 5 times within 20 seconds. When using the control panel without indicators type, within 20 seconds, pull and insert the emergency stop switch clip, or remove the clip and pull the emergency stop switch 5 times. The buzzer will sound once when the hour counter is reset.




Periodic maintenance is required when either the operating hours or the time since last maintenance reaches the prescribed limit. Therefore, periodic maintenance may be required based on the number of months since the last maintenance before the alert based on engine operating hours displays (see *MAINTENANCE SCHEDULE* on page 94).

Reset the hour counter whenever maintenance is performed, whether based on the time interval or the number of operating hours.



# CONTROLS AND FEATURES





## <Operating hour notification timing>

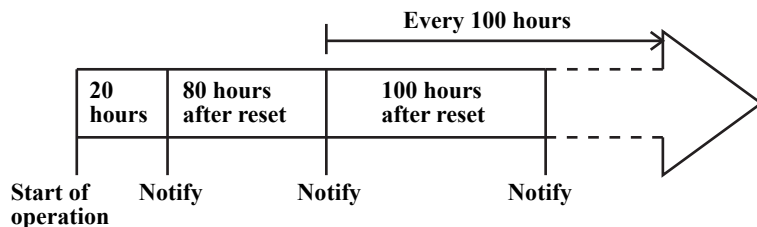

NMEA2000-compatible display:

- Follow instructions for the display.
- If the display allows selection of notification to be preset, select “Notify” (or equivalent).
- Turn on the power supply to the display before turning on the ignition switch of the outboard motor.
- The indication may differ, depending on the type of display.

## <Display>

   Steps	1	2	3	4
Outboard motor	—	Ignition switch ON	Start engine	Gear at F or R
Display	Switch ON	—	—	—
Maintenance indication on display	Not shown 	Shown 	Shown 	Not shown 



When “Periodic Maintenance” is indicated:

1. Have the periodic maintenance performed without delay after returning to port.
2. Reset the hour counter.  
If not reset, the maintenance indication will remain in the display, and the hour count until the next maintenance will be in error.

When the periodic maintenance is conducted before “Periodic Maintenance” is indicated, reset the hour counter.

If not reset, the hour count until the next maintenance will be in error.

### How to reset the Hour Counter

1. Be sure to turn OFF the engine before beginning the reset procedure. Pull the emergency stop switch clip out of the emergency stop switch by pulling the emergency stop switch lanyard.
2. Put the shift lever in “F” (Forward) or “R” (Reverse).
3. Turn the ignition switch ON. Do not start the engine. The buzzer will sound once.
4. Press the emergency stop switch 5 times within 20 seconds.

When using the control panel without indicators type, within 20 seconds, pull and insert the emergency stop switch clip, or remove the clip and pull the emergency stop switch 5 times.

The buzzer will sound once indicating the hour counter is reset.

### INDICATORS

The indicator lights come on and the buzzer sounds when you turn the ignition switch ON, allowing you to see that they are working. If an indicator does not light during this test, it cannot alert you if that system develops a problem. Have your Marine dealer check for burned-out bulbs or other problems. Under normal conditions, the following occur when the ignition switch is turned ON:

1. The ACG, Malfunction, Oil Pressure, and Overheat indicators light.
2. The buzzer will beep twice.
3. The Malfunction, Oil Pressure, and Overheat indicators will go out after the second beep.
4. The ACG indicator will go out after the engine starts.
5. The Oil Pressure indicator will light again after the engine starts and will stay lit to indicate the oil pressure is normal.




## CONTROLS AND FEATURES


If using a flush-mount or top-mount control panel without indicators, check the indicators displayed on an NMEA2000-compatible device. For information about NMEA2000-compatible device displays, refer to the display device's manual.

### Alternator (ACG) Indicator


(side-mount type)

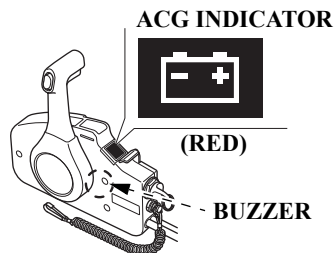

(flush-mount/top-mount types  
(mechanical wire type))

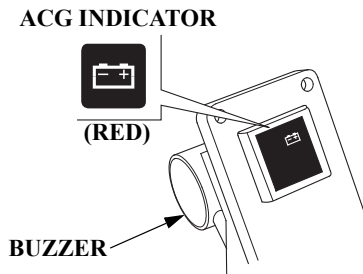

### Display assy

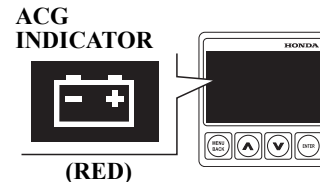


The ACG indicator turns on and the buzzer sounds in one-second intervals when the charging system is faulty.




## Malfunction Indicator

(side-mount type)

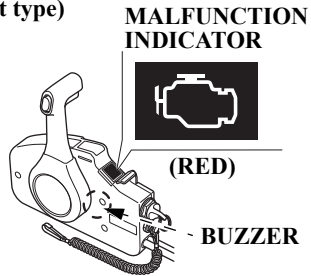


(flush-mount/top-mount types  
(mechanical wire type))

## MALFUNCTION INDICATOR

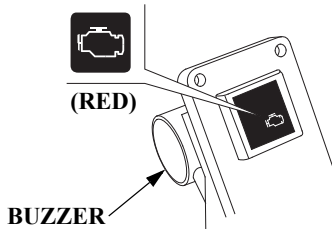

## Display assy


## MALFUNCTION INDICATOR

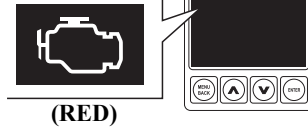

When the engine control system detects an engine control system malfunction, the malfunction indicator turns on and the buzzer sounds at one-second intervals.


## Oil Pressure Indicator

(side-mount type)

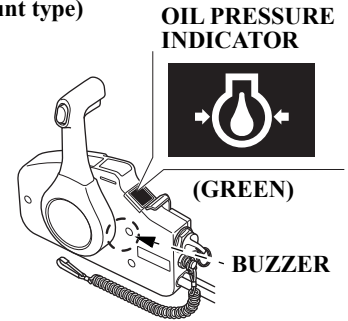

(flush-mount/top-mount types  
(mechanical wire type))

## OIL PRESSURE INDICATOR

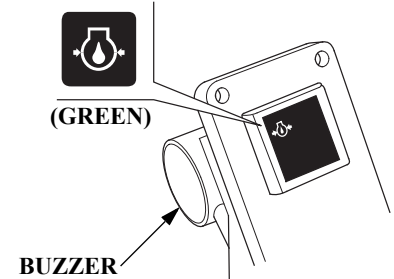



## CONTROLS AND FEATURES


When the oil pressure indicator is lit, oil pressure is OK.

If oil pressure becomes low, the indicator will go off, and the engine protection system will limit engine speed. Refer to *TAKING CARE OF UNEXPECTED PROBLEMS*, on p. 134.

All models are equipped with a buzzer that sounds continuously when the oil pressure indicator goes off.


Low oil pressure indicates that the engine oil level is low or that there is a problem with the engine lubrication system.

### Display assy

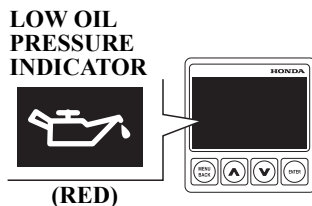


### Overheat Indicator


(side-mount type)

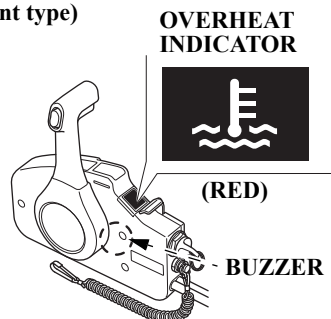

(flush-mount/top-mount types  
(mechanical wire type))

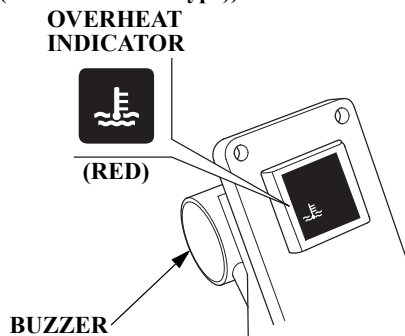

### Display assy

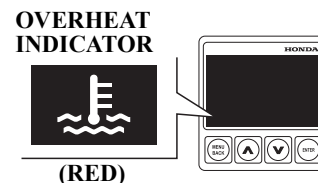

When the alert triggers, the overheat indicator comes on and the buzzer sounds a steady tone as the engine speed is reduced to 1,800 rpm. If the condition persists for another 20 seconds, the engine shuts off. Refer to *TAKING CARE OF UNEXPECTED PROBLEMS*, on p. 136.


All models are equipped with a buzzer that sounds continuously when the red overheat indicator light comes on.

Engine overheating may be the result of clogged water intakes.



### Cooling System Indicator

#### COOLING SYSTEM INDICATOR

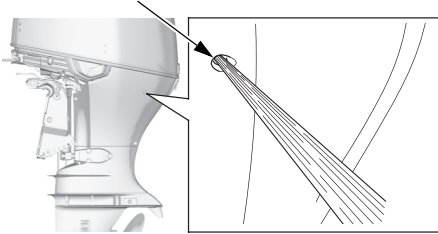

Water should flow from the cooling system indicator while the engine is running. This shows that water is circulating through the cooling system.


If water stops flowing while the engine is running, it indicates a cooling system problem, such as clogged water intakes, which will cause engine overheating.

The cooling system indicator discharge port can also become plugged.

### OTHER FEATURES

#### Water Separator Buzzer

The water separator buzzer sounds a rapid, repeating signal when water has accumulated in the water separator.

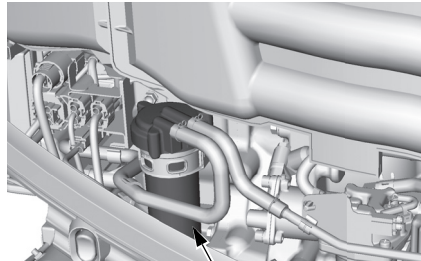

WATER SEPARATOR

#### Rev Limiter

The engine is equipped with a rev limiter to prevent the possibility of mechanical damage from excessive engine speed.

The rev limiter may be activated during operation, limiting engine speed, if the outboard motor is trimmed or tilted up excessively, or when propeller ventilation occurs during a sharp turn.


If the rev limiter is activated, check the trim angle of the outboard motor.

Check to see if the correct propeller is installed.



# CONTROLS AND FEATURES


## Anodes

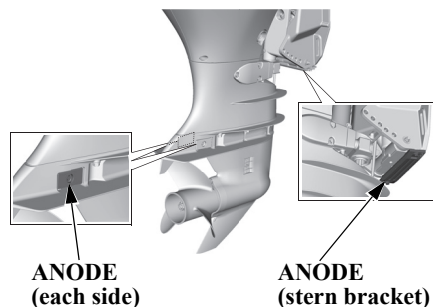

The anodes are made of a sacrificial material that helps to protect the outboard motor from corrosion.

There are two anodes on the gear case, one on the stern bracket and two small anodes in the water passages of the engine block.

## Fuel Priming Bulb

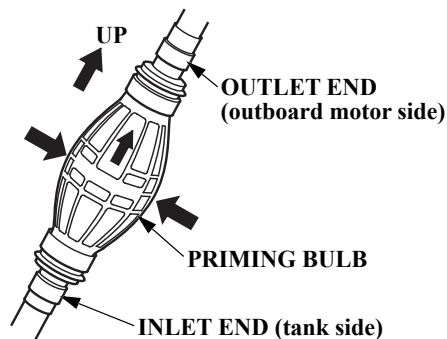

A priming bulb is built into the fuel hose that connects the fuel tank to the outboard motor.

Before starting the engine, hold the priming bulb up in the direction of the arrow; then squeeze the priming bulb until it feels firm. This will ensure that fuel is supplied to the engine (p. 62).

## Battery Switch OFF Notification

This function alerts the operator that the battery switch is OFF and must be turned to the ON position. If the battery switch is OFF, a buzzer will sound three times during the following situations.

- When starting the engine
- When using the power trim/tilt switch
- When turning the battery switch OFF while the ignition switch or power switch is ON



## ARE YOU READY TO GET UNDERWAY?

Your safety is your responsibility. A little time spent in preparation will significantly reduce your risk of injury.

### Knowledge

Read and understand this manual. Know what the controls do and how to operate them.

Familiarize yourself with the outboard motor and its operation before you get underway. Know what to do in case of an emergency.

Familiarize yourself with all laws and regulations relating to boating and the use of outboard motors.

### Safety

Always wear a PFD (Personal Flotation Device) while on the boat.

Attach the emergency stop switch lanyard securely to the operator or to the PFD worn by the operator.

## IS YOUR OUTBOARD MOTOR READY TO GO?

For your safety, and to maximize the service life of your equipment, it is very important to take a few moments before you operate the outboard motor to check its condition. Be sure to take care of any problem you find, or have your authorized Marine dealer correct it, before you operate the outboard motor.

## BEFORE OPERATION

### WARNING

Failure to properly maintain this outboard motor, or failing to correct a problem before operation, could result in a significant malfunction.

Some malfunctions can cause serious injuries or death.

Always perform a pre-operation inspection before each operation and correct any problems.

### **(Normal Key without START/STOP Switch Type)**

Before beginning your pre-operation checks, be sure the IGNITION switch key is in the OFF position.

### **(Normal Key with START/STOP Switch Type)**

Before beginning your pre-operation checks, be sure the power switch is in the OFF position.

### **(Honda Smart Key type)**

Before beginning your pre-operation checks, be sure the power switch is in the power OFF.



# BEFORE OPERATION

---

## Safety Inspection

- Before each use, look around and underneath the engine for signs of oil or gasoline leaks.
- Check that the fuel hose is undamaged and properly connected.
- Wipe up any spills before starting the engine.
- Check the stern bracket to be sure the outboard motor is securely installed.
- Check that all controls are operating properly.
- Replace any damaged parts.
- Check that all fasteners are in place and securely tightened.
- Check the emergency stop switch for proper operation. Start the engine (p. 63, 69 or 71). Make sure

the engine stops by pulling the emergency stop switch clip from the emergency stop switch.

## Maintenance Inspection

- Check the engine oil level (p. 99). Running the engine with a low oil level can cause engine damage. Overfilling the engine can cause the engine to smoke or have oil leaks which can cause engine damage.
- Check to be sure the propeller is undamaged and the castle nut is secured with the cotter pin (p. 116).
- Check that the anodes are securely attached to the stern bracket and the gear case (p. 116) and are not excessively worn. The anodes help protect the outboard motor from corrosion.
- Make sure the tool kit is onboard (p. 93). Replace any missing items.

- Check the fuel level in the fuel tank (p.109).
- Check that the battery fluid is between the upper and lower levels, and the battery leads are connected securely.
- Check the fuel filter for water or sediment accumulation (p. 112).



## SAFE OPERATING PRECAUTIONS

To safely realize the full potential of this outboard motor, you need a complete understanding of its operation and a certain amount of practice with its controls.

Before operating the outboard motor for the first time, please review the *IMPORTANT SAFETY INFORMATION* on page 7 and the chapter titled *BEFORE OPERATION*.

For your safety, do not start or run the engine in a confined or partly enclosed area. Your engine's exhaust contains poisonous carbon monoxide, a colorless, odorless gas that can collect rapidly. Breathing carbon monoxide can cause loss of consciousness and may lead to death.

## WARNING

Exhaust contains poisonous carbon monoxide gas that can build up to dangerous levels in closed areas.

Breathing carbon monoxide can cause unconsciousness or death.

Never run this product's engine in a closed, or even partly closed area.

## BREAK-IN PROCEDURE

### Break-in period: 10 hours

Proper break-in operation allows the moving parts to wear in smoothly for best performance and long service life. Avoid continuous operation at a steady speed.

#### First 15 minutes:

Run the engine at trolling speed. Use the minimum throttle opening necessary to operate the boat at a safe trolling speed.

#### Next 45 minutes:

Run the engine up to a maximum of 2,000 ~ 3,000 rpm, which is about 10% to 30% of maximum throttle opening. Operating at maximum 2,000 ~ 3,000 rpm should be limited to 50% of the 45 minutes.



## OPERATION

### Next 60 minutes:

Run the engine up to a maximum of 4,000 ~ 5,000 rpm, which is about 50% to 80% of maximum throttle opening. Operating at maximum 4,000 ~ 5,000 rpm should be limited to 50% of the 60 minutes.


30-second full-throttle bursts are OK, but do not operate the engine continuously at full throttle.

For boats that plane easily, bring the boat up on plane, and then reduce the throttle opening to the recommended rpm range.

### Next 8 hours:

Do not run the engine at full throttle for more than 5 minutes at a time.

## FUEL PRIMING

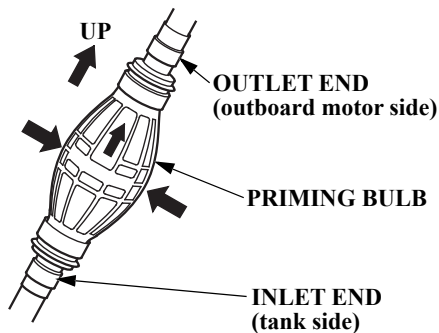

Hold the priming bulb up in the direction of the arrow; then squeeze the priming bulb several times until it feels firm, indicating that fuel has reached the engine.

Check to be sure there are no fuel leaks before starting the engine.

Do not touch the priming bulb with the engine running or when tilting up the outboard motor. The vapor separator could overflow.

## ⚠ WARNING

Gasoline is highly flammable and explosive.

You can be burned or seriously injured when handling fuel.

- Stop the engine and let it cool before handling fuel.
- Keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Keep away from your vehicle.
- Wipe up spills immediately.

## INFREQUENT OR OCCASIONAL USE

If your outboard motor will be used on an infrequent or intermittent basis, please refer to the fuel section of the *STORAGE* chapter (p. 120) for additional information regarding fuel deterioration.



## STARTING THE ENGINE

### Control


Flush-Mount/Top-Mount Types (DBW type) .....	P. 63
Side-Mount Type .....	P. 66
Flush-Mount type (Mechanical wire type) .....	P. 69
Top-Mount Type (Mechanical wire type) .....	P. 71

### NOTICE

- *Make sure the battery switch is ON before turning ON the ignition switch or power switch. If the battery switch is OFF while attempting to start the engine, the buzzer will sound three times.*

## Flush-Mount/Top-Mount Types (DBW type)

### EMERGENCY STOP SWITCH

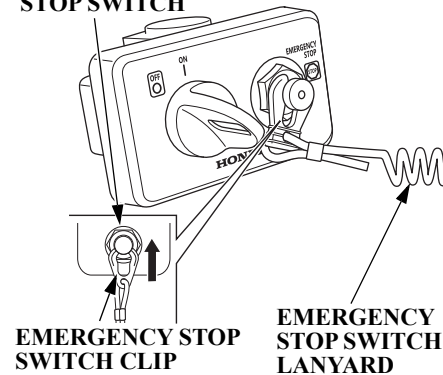

1. Put the emergency stop switch clip in the emergency stop switch, and attach the emergency stop switch lanyard securely to the operator or to the operator's PFD (Personal Flotation Device).

The engine will not start or run unless the emergency stop switch clip is in the emergency stop switch.


The emergency stop switch clip and emergency stop switch lanyard system is a safety device that will stop the engine if you fall away from the controls while operating the boat.

Always attach the emergency stop switch lanyard securely to the operator or to the operator's PFD before starting the engine.




# OPERATION

## Flush-Mount Type (DBW type)

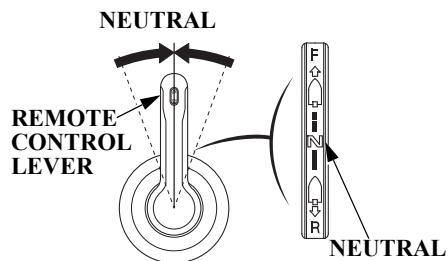


## Top-Mount Type (DBW type)

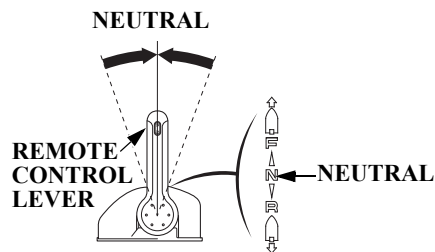

2. Set the control lever in the N (neutral) position.

The engine will not start if the F (forward) or R (reverse) gears are engaged.

## (Normal Key without START/STOP Switch Type)

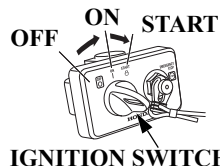

3. Turn the ignition switch key to the START position until the engine starts.


When the engine starts, release the key, allowing it to return to the ON position.

Go to step 5.

### NOTICE


- Do not turn the IGNITION switch key to the START position while the engine is running.

## (Normal Key with START/STOP Switch Type)

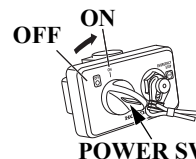

3. Insert the key to the power switch and turn it to the ON position.
4. Push the start/stop switch.

### START/STOP SWITCH

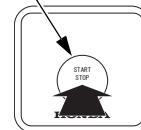



### (Honda Smart Key Type)



**POWER SWITCH**

3. Turn the power switch to the right.  
The power will not be turned ON unless the Honda Smart Key is authenticated.
4. Push the start/stop switch.  
When the boat is mounted with the two outboard motors, push the all engine start switch.

5. Before getting underway, allow the engine to warm-up sufficiently to ensure good performance.

Above 41°F (5°C), warm-up the engine for 2 or 3 minutes.

Below 41°F (5°C), warm-up the engine for at least 10 minutes at 2,000 rpm. Raise the fast idle lever to achieve approximately 2,000 rpm.

#### **NOTICE**

- *If the engine is not properly warmed up before raising the engine speed, the buzzer and overheat indicator may activate and the engine speed will be automatically reduced.*
- *The cooling system may freeze in areas where the temperature reaches 32°F (0°C) or below. Cruising at high speed without warming the engine up may cause engine damage.*

During the warm-up period, check the oil pressure indicator (p. 55), overheat indicator (p. 56), and cooling system indicator (p. 57).

If the indicators show any abnormal condition, immediately stop the engine and determine the cause of the problem. Refer to *TAKING CARE OF UNEXPECTED PROBLEMS* on p. 126.


6. If the fast idle lever was used to warm-up the engine, gradually lower the lever as the engine warms up.



# OPERATION

## Side-Mount Type

### EMERGENCY STOP SWITCH

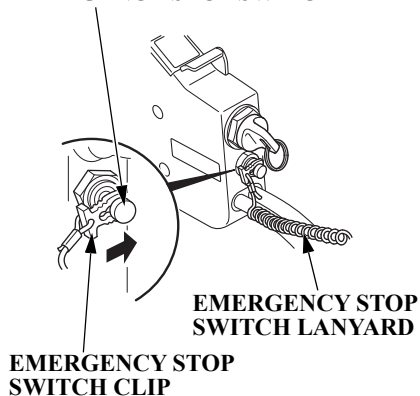


1. Put the emergency stop switch clip in the emergency stop switch, and attach the emergency stop switch lanyard securely to the operator or to the operator's PFD (Personal Flotation Device).

The engine will not start or run, unless the emergency stop switch clip is in the emergency stop switch.

The emergency stop switch clip and emergency stop switch lanyard system is a safety device that will stop the engine if you fall away from the controls while operating the boat.

Always attach the emergency stop switch lanyard securely to the operator or to the operator's PFD before starting the engine.


Before leaving the dock, check the operation of the emergency stop switch.

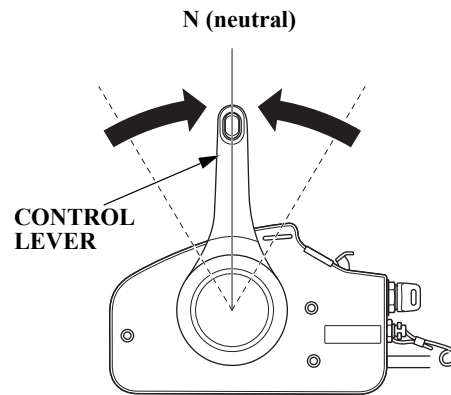

2. Set the control lever in the N (neutral) position.

The engine will not start if the F (forward) or R (reverse) gears are engaged.




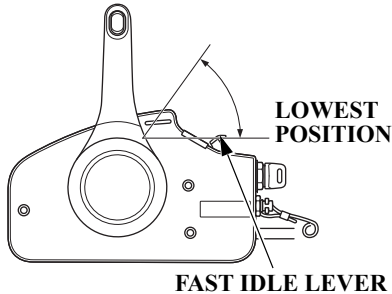

3. Leave the fast idle lever in the OFF (fully lowered) position.

The fast idle lever cannot be raised unless the control lever is in the N (neutral) position.

The control lever cannot be moved away from the N (neutral) position unless the fast idle lever is lowered.

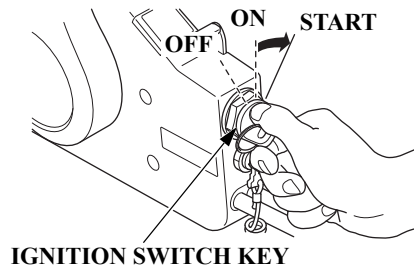

4. Turn the ignition switch key to the ON position; the buzzer will sound twice.
5. Turn the ignition switch key to the START position until the engine starts.  
When the engine starts, release the key, allowing it to return to the ON position.


If the engine fails to start within 5 seconds, release the key and wait at least 10 seconds before operating the starter again.

### NOTICE

- Using the electric starter for more than 5 seconds at a time will overheat the starter motor and can damage it.
- Turning the ignition switch key to the START position while the engine is running can damage the starter motor and flywheel.



## OPERATION

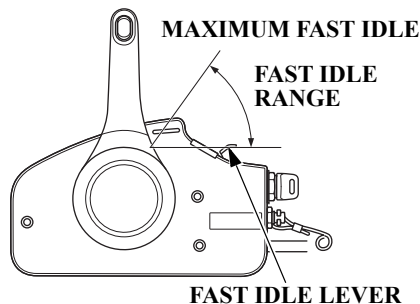

6. Before getting underway, allow the engine to warm-up sufficiently to ensure good performance.

Above 41°F (5°C), warm-up the engine for at least 3 minutes.

Below 41°F (5°C), warm-up the engine for at least 5 minutes at 2,000 rpm. Raise the fast idle lever to achieve approximately 2,000 rpm.

### NOTICE

- *If the engine is not properly warmed up before raising the engine speed, the buzzer and overheat indicator may activate and the engine speed will be automatically reduced.*
- *The cooling system may freeze in areas where the temperature reaches 32°F (0°C) or below. Cruising at high speed without warming the engine up may cause engine damage.*

During the warm-up period, check the oil pressure indicator (p. 55), overheat indicator (p. 56), and cooling system indicator (p. 57).

If using a control panel without indicators type, check the oil pressure indicator and overheat indicator displayed on an NMEA2000-compatible device.

If the indicators show any abnormal condition, immediately stop the engine and determine the cause of the problem. Refer to *TAKING CARE OF UNEXPECTED PROBLEMS* on p. 133 – 136.


7. If the fast idle lever was used to warm-up the engine, gradually lower the lever as the engine warms up.

When the fast idle lever is fully lowered, the control lever can be moved away from the N (neutral) position.



### Flush-Mount Type (Mechanical wire type)

#### EMERGENCY STOP SWITCH

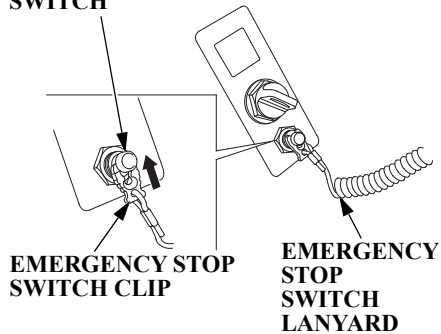


1. Put the emergency stop switch clip in the emergency stop switch, and attach the emergency stop switch lanyard securely to the operator or to the operator's PFD (Personal Flotation Device).

The engine will not start or run, unless the emergency stop switch clip is in the emergency stop switch.

The emergency stop switch clip and emergency stop switch lanyard system is a safety device that will stop the engine if you fall away from the controls while operating the boat.

Always attach the emergency stop switch lanyard securely to the operator or to the operator's PFD before starting the engine.

Before leaving the dock, check the operation of the emergency stop switch.

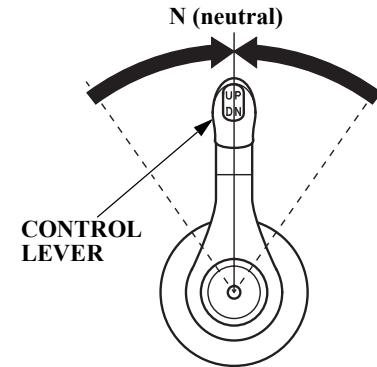


2. Set the control lever in the N (neutral) position.

The engine will not start if the F (forward) or R (reverse) gears are engaged.



## OPERATION

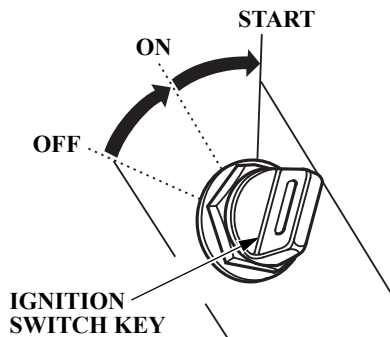


3. Turn the ignition switch key to the ON position; the buzzer will sound twice.
4. Turn the ignition switch key to the START position until the engine starts.  
When the engine starts, release the key, allowing it to return to the ON position.

If the engine fails to start within 5 seconds, release the key and wait at least 10 seconds before operating the starter again.

### NOTICE

- *Using the electric starter for more than 5 seconds at a time will overheat the starter motor and can damage it.*
- *Turning the ignition switch key to the START position while the engine is running can damage the starter motor and flywheel.*

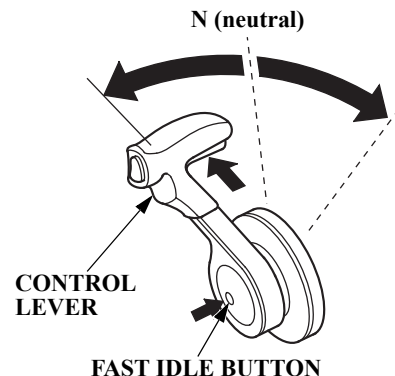

5. Before getting underway, allow the engine to warm-up sufficiently to ensure good performance.

Above 41°F (5°C), warm-up the engine for at least 3 minutes.

Below 41°F (5°C), warm-up the engine for at least 5 minutes at 2,000 rpm. Push the fast idle button, and then move the control lever forward or reverse to open the throttle and achieve approximately 2,000 rpm.



## NOTICE

- *If the engine is not properly warmed up before raising the engine speed, the buzzer and overheat indicator may activate and the engine speed will be automatically reduced.*
- *The cooling system may freeze in areas where the temperature reaches 32°F (0°C) or below. Cruising at high speed without warming the engine up may cause engine damage.*

During the warm-up period, check the oil pressure indicator (p. 55), overheat indicator (p. 56), and cooling system indicator (p. 57).


If using a control panel without indicators type, check the oil pressure indicator and overheat indicator displayed on an NMEA2000-compatible device.

If the indicators show any abnormal condition, immediately stop the engine and determine the cause of the problem. Refer to *TAKING CARE OF UNEXPECTED PROBLEMS* on p. 133 – 136.

6. If the fast idle control was used to warm-up the engine, gradually return the control lever to the N (neutral) position as the engine warms up.

## Top-Mount Type (Mechanical wire type)

### EMERGENCY STOP SWITCH

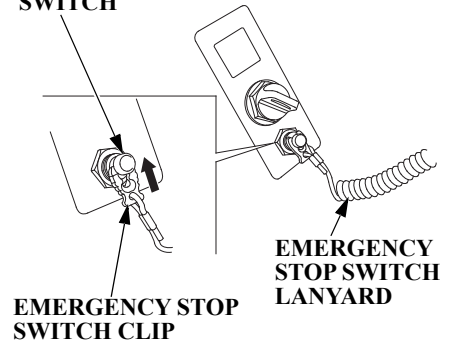

1. Put the emergency stop switch clip in the emergency stop switch, and attach the emergency stop switch lanyard securely to the operator or to the operator's PFD (Personal Flotation Device).




## OPERATION

The engine will not start or run, unless the emergency stop switch clip is in the emergency stop switch.

The emergency stop switch clip and emergency stop switch lanyard system is a safety device that will stop the engine if you fall away from the controls while operating the boat.


Always attach the emergency stop switch lanyard securely to the operator or to the operator's PFD before starting the engine.

Before leaving the dock, check the operation of the emergency stop switch.

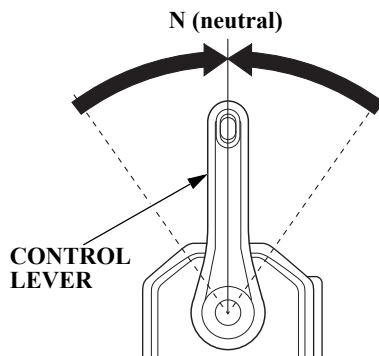

2. Set the control lever in the N (neutral) position.

The engine will not start if the F (forward) or R (reverse) gears are engaged.

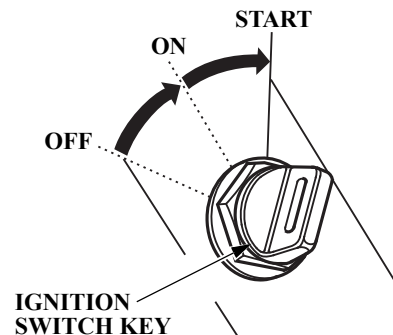


3. Turn the ignition switch key to the ON position; the buzzer will sound twice.
4. Turn the ignition switch key to the START position until the engine starts.  
When the engine starts, release the key, allowing it to return to the ON position.



If the engine fails to start within 5 seconds, release the key and wait at least 10 seconds before operating the starter again.

### NOTICE

- Using the electric starter for more than 5 seconds at a time will overheat the starter motor and can damage it.
- Turning the ignition switch key to the START position while the engine is running can damage the starter motor and flywheel.

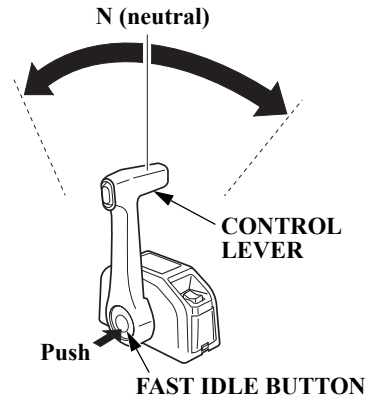

5. Before getting underway, allow the engine to warm-up sufficiently to ensure good performance.

Above 41°F (5°C), warm-up the engine for at least 3 minutes.

Below 41°F (5°C), warm-up the engine for at least 5 minutes at 2,000 rpm. Push the fast idle button, and then move the control lever forward or reverse to open the throttle and achieve approximately 2,000 rpm.

### NOTICE

- If the engine is not properly warmed up before raising the engine speed, the buzzer and overheat indicator may activate and the engine speed will be automatically reduced.
- The cooling system may freeze in areas where the temperature reaches 32°F (0°C) or below. Cruising at high speed without warming the engine up may cause engine damage.



## OPERATION


During the warm-up period, check the oil pressure indicator (p. 55), overheat indicator (p. 56), and cooling system indicator (p. 57).

If using a control panel without indicators type, check the oil pressure indicator and overheat indicator displayed on an NMEA2000-compatible device.

If the indicators show any abnormal condition, immediately stop the engine and determine the cause of the problem. Refer to *TAKING CARE OF UNEXPECTED PROBLEMS* on p. 133 – 136.

6. If the fast idle control was used to warm-up the engine, gradually return the control lever to the N (neutral) position as the engine warms up.

### Station Select Mode

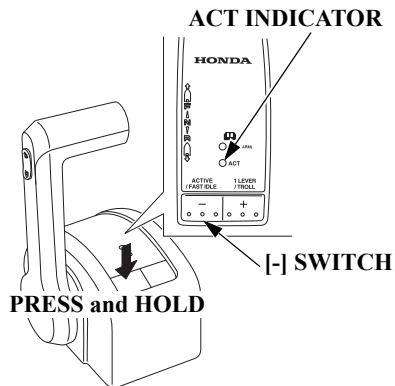

For multiple station type, use the [-] switch to change the operating station.

If you press and hold the [-] switch of the inactive station when all remote control lever is in the NEUTRAL position, you can operate the outboard motors using this station. A long buzz sounds once and the ACT indicator comes on when the station can be operated.


## STOPPING THE ENGINE

### NOTICE

- After stopping the engine, be sure to turn OFF the ignition switch or power switch before turning OFF the battery switch. If the battery switch is turned OFF while the ignition switch or power switch is ON, the buzzer will sound three times briefly.


### Emergency Engine Stopping

#### *Flush-Mount/Top-Mount Types (DBW type)*

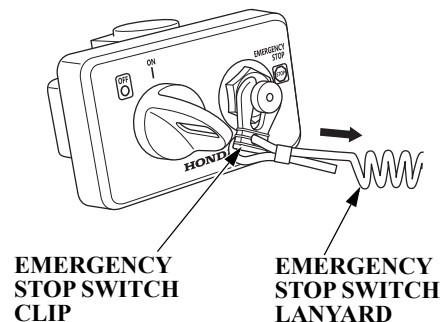




## Side-Mount Type

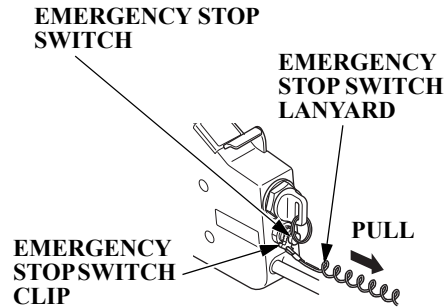

## Flush-Mount/Top-Mount Types (Mechanical wire type)

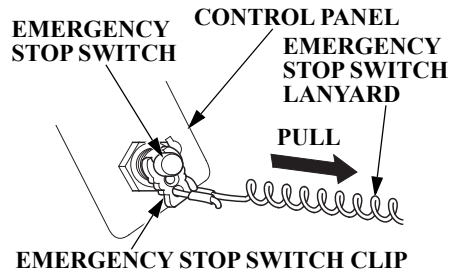

To stop the engine in an emergency, pull the emergency stop switch clip out of the emergency stop switch by pulling the emergency stop switch lanyard.

If the emergency stop switch is activated while the engine is running, the engine will shut down abruptly and the boat will quickly decelerate, potentially causing occupants and objects to be thrown forward and/or overboard. If the emergency stop switch is activated, the emergency stop switch clip must be reinserted before the engine can be restarted.


We suggest that you stop the engine this way occasionally to verify that the emergency stop switch is operating properly.

Before leaving the dock, check the operation of the emergency stop switch.


Turn the ignition switch key to the OFF position after verifying the emergency stop switch operation.

## Normal Engine Stopping (Flush-Mount/Top-Mount Types (DBW type))

### Flush-Mount Type

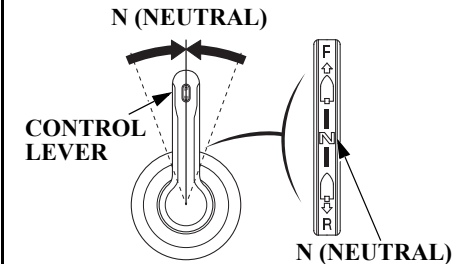

### Top-Mount Type (DBW type)

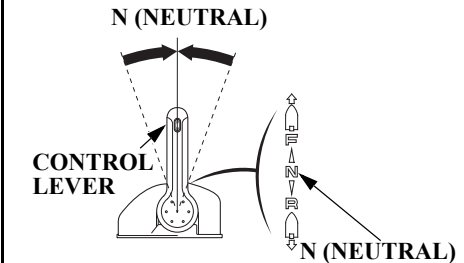




## OPERATION


1. Move the control lever(s) to the N (neutral) position.

After cruising at full throttle, cool down the engine by idling for a few minutes before stopping the engine.

**START/STOP SWITCH**

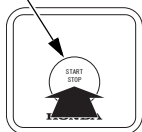

**(with START/STOP switch)**

 

**IGNITION SWITCH KEY**

**(without START/STOP switch)**


**(with START/STOP switch)**

2. Push the start/stop switch to stop the engine.

In the event that the engine does not stop when the start/stop switch is pushed, disconnect the fuel line connector from the outboard motor.


**(without START/STOP switch)**

2. Turn the ignition switch key to the OFF position to stop the engine. In the event that the engine does not stop when the ignition switch key is turned to the OFF position, pull the emergency stop switch clip out of the emergency stop switch by pulling the emergency stop switch lanyard (p. 74).

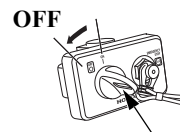

**POWER SWITCH**

**(Normal Key type)**

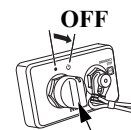

**POWER SWITCH**

**(Honda Smart Key type)**



### (with START/STOP switch)

#### (Normal Key type)

3. Turn the power switch key to the OFF position, and then remove and store it.

### (with START/STOP switch)

#### (Honda Smart Key type)


3. Turn the power switch to the right or press the lock button on the Honda Smart Key to turn the power OFF.

### (without START/STOP switch)


3. When the boat is not in use, remove and store the ignition switch key and the emergency stop switch clip and lanyard.

### Normal Engine Stopping (Side-Mount/Flush-Mount/Top Mount Types (Mechanical wire type))

#### *Side-Mount Type*

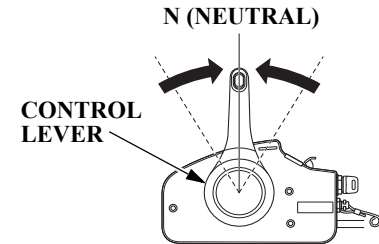


#### *Flush-Mount Type (Mechanical wire type)*

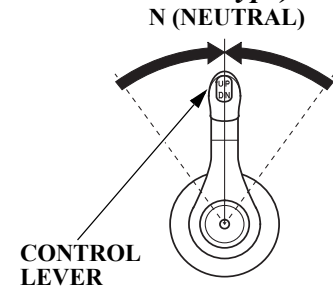



## OPERATION


### *Top-Mount Type (Mechanical wire type)*

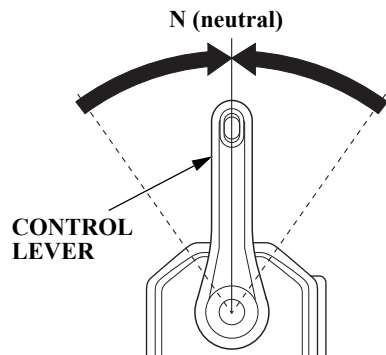


1. Move the control lever(s) to the N (neutral) position.

After cruising at full throttle, cool down the engine by idling for a few minutes before stopping the engine.

### *Side-Mount Type*

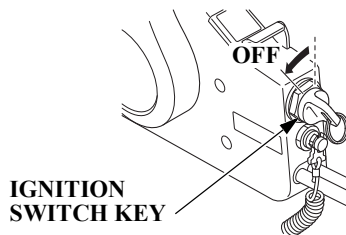

### *Flush-Mount/Top-Mount Types (Mechanical wire type)*

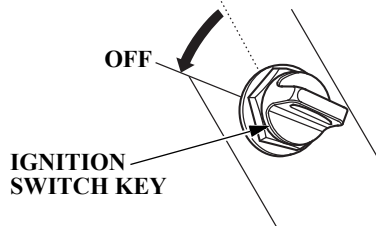


2. Turn the ignition switch key to the OFF position to stop the engine. In the event that the engine does not stop when the ignition switch key is turned to OFF, pull the emergency stop switch clip out of the emergency stop switch by pulling the emergency stop switch lanyard.
3. When the boat is not in use, remove and store the ignition switch key and the emergency stop switch clip and lanyard.




## GEARSHIFT AND THROTTLE OPERATION



### *Flush-Mount Type (DBW type)*

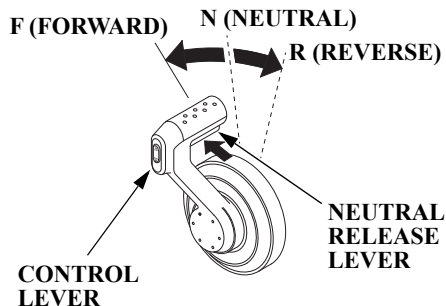


### *Top-Mount Type (DBW type)*

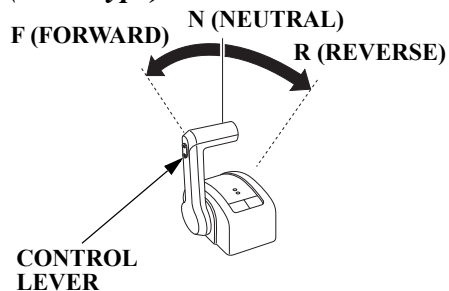


### *Side-Mount Type*

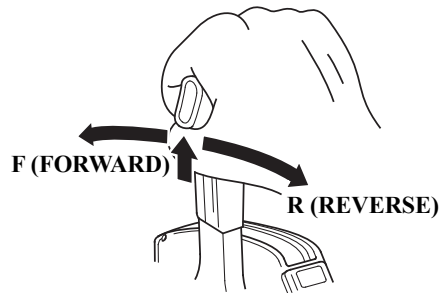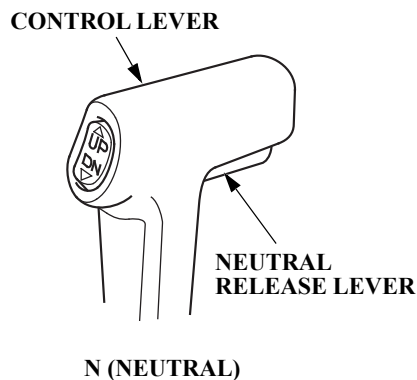

### *Flush-Mount Type (Mechanical wire type)*

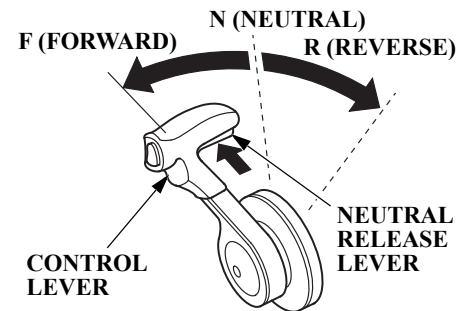

### *Top-Mount Type (Mechanical wire type)*

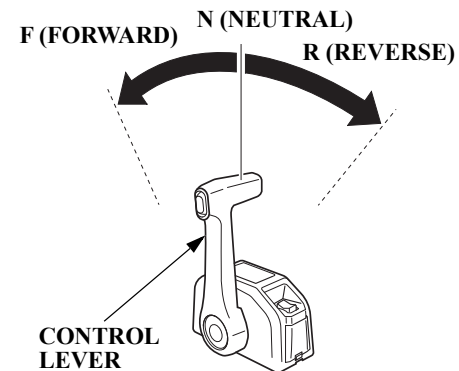




## OPERATION

To shift gears, move the control lever to select the F (forward), N (neutral), or R (reverse) gear.


The control lever cannot be moved from the N (neutral) position unless the neutral release lever is squeezed (side-mount/flush-mount types).

Moving the control lever beyond the gear selection range increases engine speed.

### *Flush-Mount Type (DBW type)*

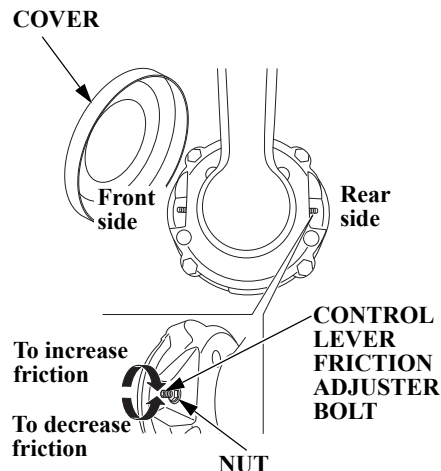

### *Top-Mount Type (DBW type)*

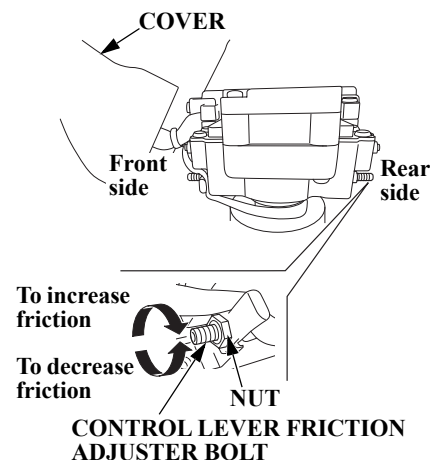


Check whether the control lever moves smoothly.


1. Remove the cover of the control lever.
2. Loosen the nut.
3. Adjust the lever friction when increasing throttle opening and boat speed by turning the control lever friction adjuster bolt right or left.
4. Tighten the nut to lock the lever friction.
5. Reinstall the cover of the control lever.



## Side-Mount Type

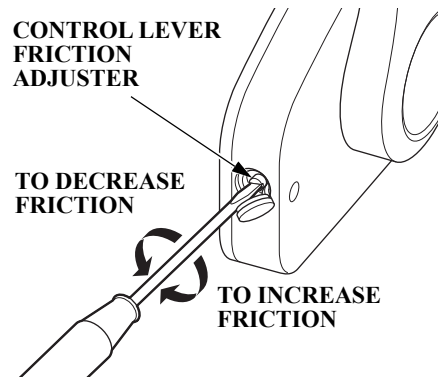


## Flush-Mount Type (Mechanical wire type)

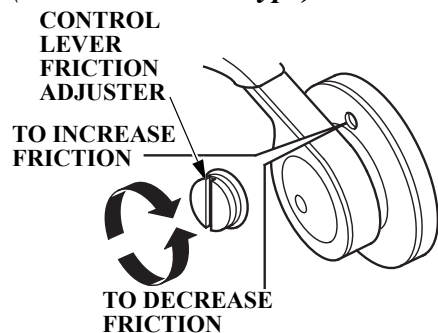


## Top-Mount Type (Mechanical wire type)

(single type)

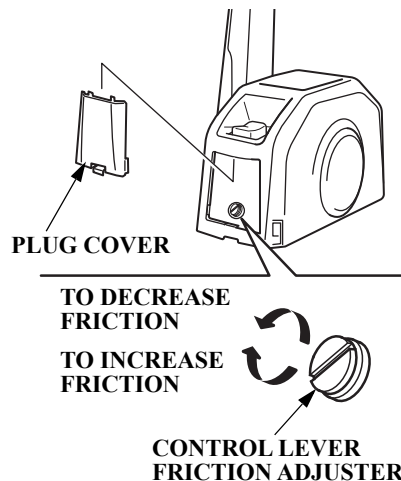

(dual type)

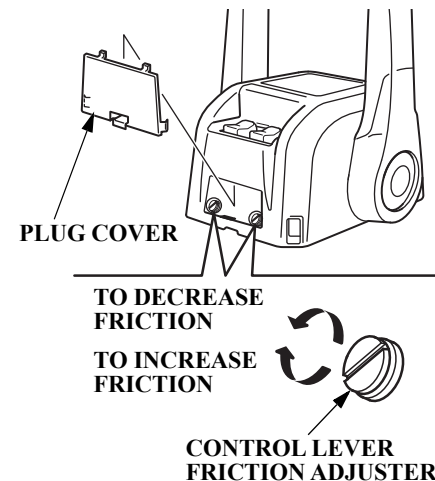

Adjust the control lever friction adjuster so the control lever will hold a constant throttle setting while cruising.



# OPERATION

---

## STEERING

Steer the boat in the same manner as an automobile.

## CRUISING

### Engine Speed

For best fuel economy, limit the throttle opening to 80%. Use the throttle friction control (p. 82) to help you hold a steady speed.

For rough water conditions or large waves, slow down to prevent the propeller from rising out of the water.

The engine is equipped with a rev limiter to prevent the possibility of mechanical damage from excessive engine speed.

If, for example, the outboard motor is tilted excessively or propeller ventilation occurs during a sharp turn, the engine may overrev, activating the rev limiter.

If engine speed becomes unstable at high speed due to activation of the rev limiter, reduce speed and check the trim angle of the outboard motor.

## Trim

Use the power trim/tilt switch to trim the outboard motor for the best performance and stability.

You can use the power trim/tilt switch at any time, whether the boat is underway or stopped.

Press the UP or DN (down) side of the switch to adjust the angle of the outboard motor.

Refer to the trim meter (p. 49) for an indication of whether the outboard motor is trimmed high or low.

It is necessary to trim the angle of the outboard motor to compensate for changes in boat load, weight distribution, water conditions, or propeller selection.




Under normal conditions, the boat will perform best when the antiventilation plate is level with the water surface.

When cruising into a high wind, trim the outboard motor down slightly to level the boat and improve stability. With a tail wind, trim the outboard motor up slightly.


### NOTICE

*Excessive trim/tilt angle during operation can cause propeller ventilation, overheating, and water pump damage.*


### *Flush-Mount Type (DBW type)*

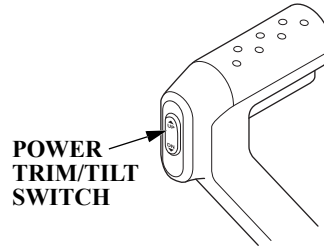

### *Single Top-Mount Type (DBW type)*

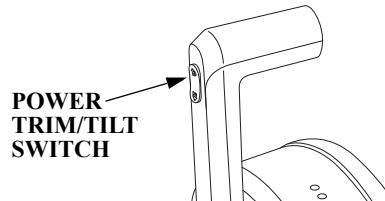


### *Dual Top-Mount Type (DBW type)*

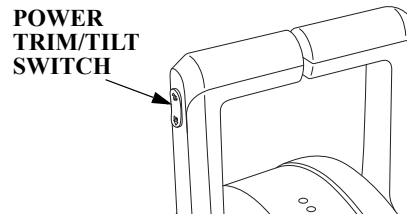


### *Side-Mount Type*

#### POWER TRIM/TILT SWITCH

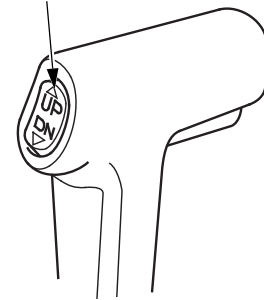

### *Flush-Mount Type (Mechanical wire type)*

#### POWER TRIM/TILT SWITCH

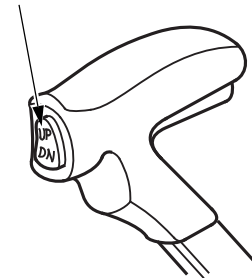




# OPERATION


## Single Top-Mount Type (Mechanical wire type)

POWER TRIM/TILT SWITCH

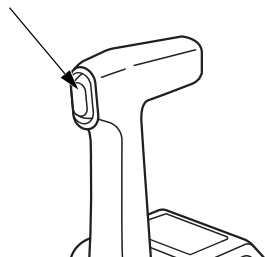

## Dual Top-Mount Type (Mechanical wire type)

POWER TRIM/TILT SWITCH

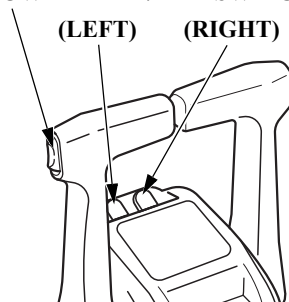


## PTT Switch Panel

### DUAL TYPE

Press UP to raise bow

Press DN to lower bow.

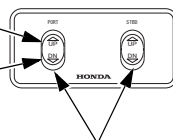


POWER TRIM/TILT SWITCH

### TRIPLE TYPE

Press UP to raise bow


Press DN to lower bow.

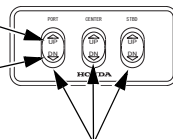

POWER TRIM/TILT SWITCH

For multiple outboard motors, the trim/tilt angle of all outboard motors is adjusted at the same time by using the power trim/tilt switch on the remote control lever and the trim/tilt angle of each outboard motor is adjusted by using each power trim/tilt switch on the panel.


**OUTBOARD MOTOR TRIMMED TOO LOW**

 


**OUTBOARD MOTOR TRIMMED TOO HIGH**



 
**OUTBOARD MOTOR TRIMMED CORRECTLY**



**BOW TOO LOW DUE TO**  
**1. LOAD IN THE FRONT**  
**2. OUTBOARD MOTOR TRIMMED TOO LOW**

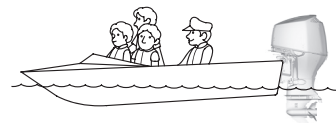


**BOW TOO HIGH DUE TO**  
**1. LOAD IN THE REAR**  
**2. OUTBOARD MOTOR TRIMMED TOO HIGH**

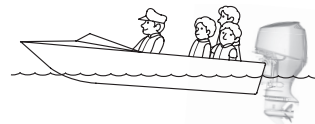




## Trolling Speed Control

### *Remote Control Box (Side-mount type) (optional equipment)*

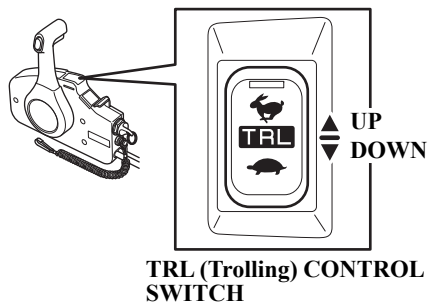


For TRL (Trolling) control switch equipped type.

### *Remote Control Box (Top-mount single type) (optional equipment)*

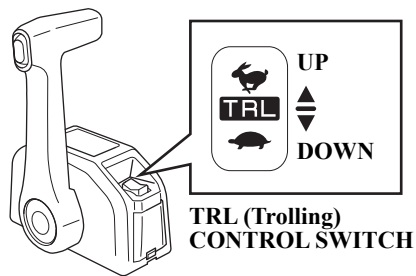

For TRL (Trolling) control switch equipped type.

### *Remote Control Box (Top-mount dual type) (optional equipment)*

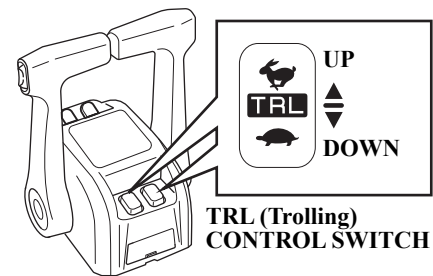


For TRL (Trolling) control switch equipped type.



## OPERATION

### ***Trolling Control Switch Panel (optional equipment)***

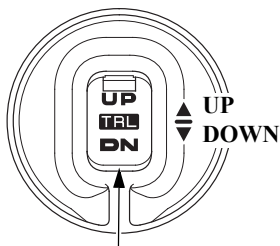

**TRL (Trolling) CONTROL SWITCH**

DN: Reduce engine speed

UP: Increase engine speed

The engine must be fully warmed up before you can activate the Trolling Speed Control.

Place the outboard motor in-gear with the throttle control in the fully closed (idle) position. Press and hold the UP or DN side of the TRL control switch to activate the Trolling Speed Control. The buzzer will make one long sound indicating activation. The initial trolling speed is set at 650 rpm.

The engine speed can be adjusted in 50 rpm increments by pressing the UP or DN side of the TRL control switch. A short sound of the buzzer occurs each time the engine speed is adjusted.


In Trolling Speed Control mode, the engine speed can be adjusted between 650 and 900 rpm.

Continuing to press the switch when at either of these limits will result in two short sounds from the buzzer.

The throttle control will operate when in the Trolling Speed Control mode, but once the speed reaches 3,000 rpm, the Trolling Speed Control is deactivated. If 3,000 rpm is not reached and the throttle is closed, the engine speed will decrease to the Trolling Speed Control setting.

### **TRIM TAB**

If steering effort is not equal in both directions, adjust the trim tab to compensate for “torque steer,” which is the reaction of the outboard motor to propeller rotation.

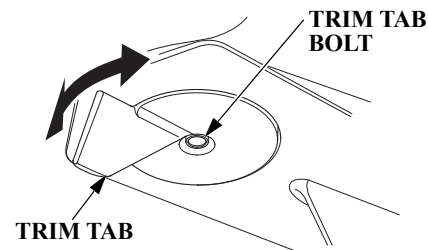


Adjust the trim tab with the engine stopped. Loosen the bolt above the trim tab, turn the trim tab, and then tighten the bolt securely.

When the trim tab is correctly adjusted, steering effort will be equal in both directions.


Refer to *TRIM TAB ADJUSTMENT* on p. 96.



## TROLLING MODE

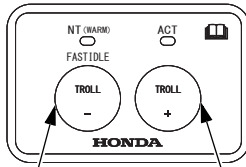

**[-] SWITCH**      **[+] SWITCH**  
(Flush-Mount Type)

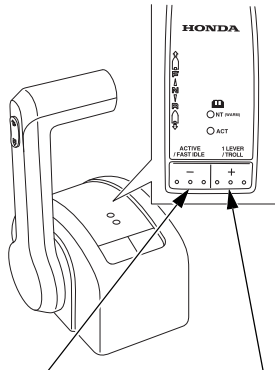

**[-] SWITCH**      **[+] SWITCH**  
(Top-Mount Type (DBW type))

**[-] Switch:** Reduce engine speed  
**[+] Switch:** Increase engine speed

After the engine has warmed up, keeping **[+]** switch pushed when cruising with the throttle fully closed, changes the mode to trolling mode.

A long buzz sounds once. When the mode is changed to trolling mode, the engine speed is 650 rpm.

You can adjust the engine speed by 50 rpm every time you press the switch once. You will hear a short buzz.

The engine speed can be adjusted within the range of 650 – 900 rpm.

Continuing to press the switch will not decrease or increase the engine speed beyond the lower (650 rpm) or higher (900 rpm) limit.

If you try to do this, a short buzz sounds twice.


The throttle may be operated while in trolling mode. The trolling mode is cancelled when you reach 3,000 rpm.



# OPERATION

## ONE-LEVER MODE

(For multiple outboard motors type)

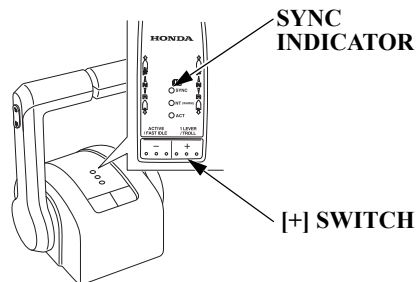

Shifting gear and the engine speed adjustment of the all outboard motors can be performed with one remote control lever when in one-lever mode.

If you press and hold the [+] switch when all remote control lever is in the NEUTRAL position, the mode changes to one-lever mode.

A long buzz sounds once and SYNC indicator comes on.


## SHALLOW WATER OPERATION

When operating in shallow water, use the power trim/tilt switch (p. 83) to tilt the outboard motor so that the propeller and gear case won't hit the bottom.

Proceed at low speed, and monitor water flow from the cooling system indicator (p. 57) to be sure the outboard motor is not tilted so high that the water intakes are out of the water.

### NOTICE

*An excessive trim/tilt angle during operation can cause propeller ventilation, overheating, and water pump damage. This type of damage is not covered by the Distributor's Limited Warranty (U.S.) / Distributor's Warranty (CA.) (p. 152).*

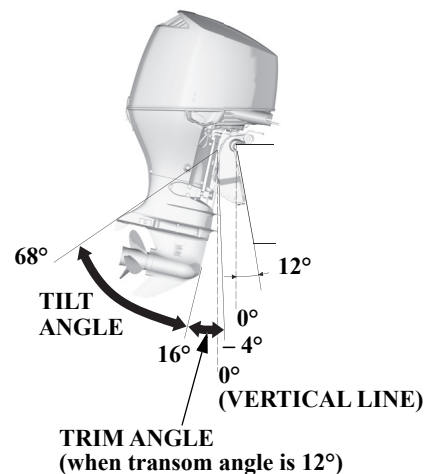




### MOORING, BEACHING, LAUNCHING

Before tilting up, leave the outboard motor in the running position for one minute after stopping the engine to drain the water from inside the engine.

Stop the engine and disconnect the fuel hose from the outboard motor before tilting the outboard motor.

To raise the outboard motor out of the water while the engine is stopped and the boat is moored, or for maximum clearance when beaching or launching, use the power tilt switch on the engine pan to tilt the outboard motor up as far as it will go. Move the tilt lock lever to the LOCK position, and then gently lower the outboard motor until the lever contacts the stern bracket. Use the power tilt switch to fully shorten the trim rods.

TRIM RODS

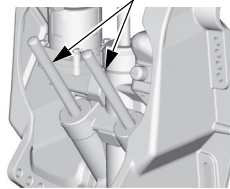


To lower the outboard motor, tilt up using the power tilt switch, then move the tilt lock lever to the FREE position, and then lower the outboard motor to the desired position.


#### NOTICE

*Do not attempt to use the power tilt switch to tilt the outboard motor down while the tilt lock lever is in the LOCK position. Damage to the power tilt system may occur.*

POWER TILT SWITCH

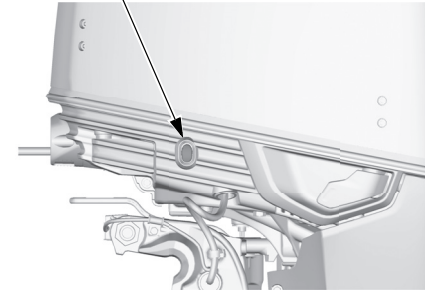


TILT LOCK LEVER  
(Lock position)

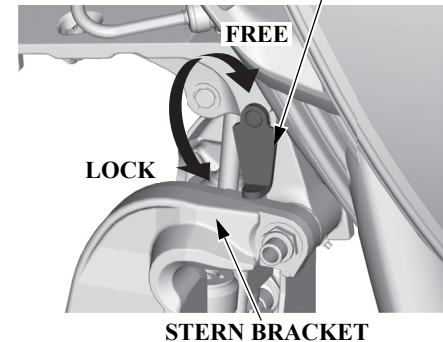



## OPERATION

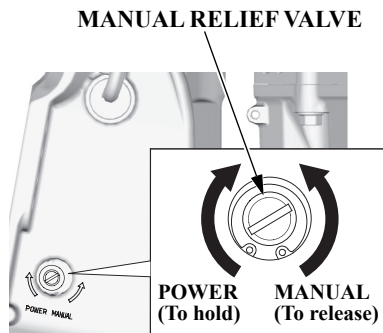

The outboard motor can also be tilted manually after opening the manual relief valve. This feature enables the outboard motor to be tilted up or down when no battery is connected.

For manual tilting, use a screwdriver to turn the valve counterclockwise 1 or 2 turns. Close the valve firmly after positioning the engine.

Be sure the valve is closed before operating the outboard motor. If the valve is not closed, the outboard motor will tilt up when operated in reverse.

Check that nobody is under the outboard motor before opening the manual relief valve. If the manual relief valve is loosened (turned counterclockwise) when the outboard motor is tilted up, the outboard motor will suddenly tilt down.

## MULTIPLE OUTBOARD MOTORS

On boats equipped with more than one outboard motor, all motors normally operate at the same time.

If one or more motor(s) is stopped while the other(s) is running, put the stopped motor in “N” (neutral) and tilt it up so its propeller is above the water’s surface.

If the propeller of the stopped motor is left in the water, it may turn as the boat moves through the water, causing a reverse flow of water from the exhaust side. This reverse flow will happen if the stopped engine’s propeller is in the water, its gearshift is in “R” (reverse), and the boat is moving forward. Reverse flow can cause an engine malfunction.



# SERVICING YOUR OUTBOARD MOTOR

## THE IMPORTANCE OF MAINTENANCE

Proper maintenance is essential for safe, economical, and trouble-free operation. It will also help reduce air pollution.

### WARNING

Failure to properly maintain this outboard motor, or failing to correct a problem before operation, could result in a significant malfunction.

Some malfunctions can cause serious injuries or death.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

To help you properly care for your outboard motor, the following pages include a maintenance schedule, routine inspection procedures, and simple maintenance procedures using basic hand tools. Other service tasks that are more difficult or require special tools are best handled by professionals and are normally performed by a Honda technician or other qualified mechanic.

The maintenance schedule applies to normal operating conditions. If you operate your outboard motor under unusual conditions, consult an authorized Honda Marine dealer for recommendations applicable to your individual needs and use.

Remember that your authorized Honda Marine dealer knows your outboard motor best and is fully equipped to maintain and repair it.

To ensure the best quality and reliability, use only new, Honda Genuine parts or their equivalents for repair and replacement.

**Maintenance, replacement, or repair of the emission control devices and systems may be performed by any marine engine repair establishment or individual, using parts that are “certified” to EPA standards.**



# SERVICING YOUR OUTBOARD MOTOR

## MAINTENANCE SAFETY

Some of the most important safety precautions follow. However, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

### **WARNING**

Improper maintenance can cause an unsafe condition.

Failure to properly follow maintenance instructions and precautions can cause serious injuries or death.

Always follow the procedures and precautions in this owner's manual.

## Safety Precautions


- Make sure the engine is off before you begin any maintenance or repairs. This will eliminate several potential hazards:
  - **Carbon monoxide poisoning from engine exhaust.**  
Do not start or run the engine in a confined or partly enclosed area.
  - **Burns from hot parts.**  
Let the engine and exhaust system cool before touching.
  - **Injury from moving parts.**  
Do not run the engine unless instructed to do so.
- Read the instructions before you begin, and make sure you have the tools and skills required.
- To reduce the possibility of fire or explosion, be careful when working around gasoline. Use only a nonflammable solvent, not gasoline, to clean parts. Keep cigarettes, sparks, and flames away from all fuel-related parts.
- Wear gloves when handling the propeller to protect your hands from sharp edges.



# SERVICING YOUR OUTBOARD MOTOR

## TOOL KIT and OWNER'S MANUAL

(Tool kit does not come with Counter Rotation Types)

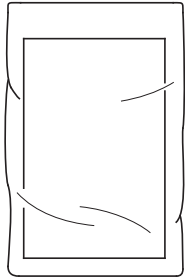

OWNER'S MANUAL



 
PHILLIPS/FLAT  
SCREWDRIVER



SPARK PLUG WRENCH




GRIP



6 mm HEX. WRENCH



 19 mm EYE WRENCH




TOOL BAG

The tool kit can be used for simple maintenance procedures and emergency repairs. Keep these items on the boat so that they will always be available if you need them.

If your tool kit needs replacement, it is not available as a kit and each item must be ordered individually.

## SPARE EMERGENCY STOP SWITCH CLIP (optional equipment)

 

Always carry a spare emergency stop switch clip onboard. The spare clip may either be stored in the tool bag or in an easily accessible location on the boat.



# SERVICING YOUR OUTBOARD MOTOR

## MAINTENANCE SCHEDULE

Follow the MAINTENANCE SCHEDULE table and service your outboard motor accordingly. Please note, a claim for warranty coverage will not be denied simply because the maintenance schedule for your outboard motor was not followed. However, any part(s) that fails specifically due to lack of maintenance, or improperly performed maintenance, would not be covered under the *Distributor's Limited Warranty (U.S.) / Distributor's Warranty (CA.)*.

REGULAR SERVICE PERIOD (3) Perform at every indicated month or operating hour interval, whichever comes first.		Each use	After use	First month or 20 hrs.	Every 6 months or 100 hrs.	Every year or 200 hrs.	Every 2 years or 400 hrs.	Refer to page
ITEM								
Engine oil	Check level	o						99
	Change			o	o			
Engine oil filter	Replace					o (2)		102
Gear case oil	Change			o (2)	o (2)			—
ACG belt	Check-adjust					o (2)		—
Throttle linkage and Control Cable (9)	Check-adjust			o (2)	o (2)			—
Idle speed	Check-adjust			o (2)	o (2)			—
Valve clearance	Check-adjust					o (2)		—
Spark plug (nickel)	Check-adjust/Replace				o			106 – 107
Spark plug (iridium) (Optional part)	Check					o		
	Replace						o	
Propeller and cotter pin	Check	o						116
Anode metal (Outside engine)	Check	o						115
Anode metal (Inside engine)	Check/Replace						o (2) (6)	—
Lubrication	Grease			o (1)	o (1)			104 – 105
Fuel filter with water separator (Low pressure side)	Check	o			o			111 – 113
	Replace						o	

- (1) Lubricate more frequently when used in salt water.
- (2) These items should be serviced by your servicing dealer, unless you have the proper tools and are mechanically proficient. Refer to the Honda Shop Manual for service procedures. See “Honda Publications” on page 149 for ordering information.
- (3) For professional commercial use, log hours of operation to determine proper maintenance intervals.
- (6) Replace the anodes when they have been reduced to about two-thirds of their original size, or if they are crumbling.
- (9) Mechanical Remote Control type only.



## SERVICING YOUR OUTBOARD MOTOR

REGULAR SERVICE PERIOD (3) Perform at every indicated month or operating hour interval, whichever comes first.		Each use	After use	First month or 20 hrs.	Every 6 months or 100 hrs.	Every year or 200 hrs.	Every 2 years or 400 hrs.	Refer to page
ITEM								
Fuel filter (High pressure side)	Replace						o (2)	—
Thermostat and thermostat cover	Check/Replace					o (2)		—
Fuel line	Check	o (7)						60
	Replace	Every 2 years (If necessary) (2) (8)						—
Battery and cable connection	Check level-tightness	o						60
Bolts and nuts	Check-tightness			o (2)	o (2)			—
Crankcase breather tube	Check					o (2)		—
Cooling water passages	Clean		o (4)					—
Coolant leak	Check	o						—
Water pump	Check					o (2)		—
Emergency stop switch	Check	o						60
Engine oil leak	Check	o						—
Each operation part	Check	o						—
Engine condition (5)	Check	o						—
Power Trim/Tilt	Check				o (2)			—
Shift Cable (9)	Check-adjust			o (2)	o (2)			—

(2) These items should be serviced by your servicing dealer, unless you have the proper tools and are mechanically proficient. Refer to the Honda Shop Manual for service procedures. See “Honda Publications” on page 149 for ordering information.

(3) For professional commercial use, log hours of operation to determine proper maintenance intervals.

(4) When operating in salt water, turbid or muddy water, the engine should be flushed with clean water after each use.

(5) Upon starting, check for unusual engine sounds and cooling water flowing freely from the check hole.

(7) Check the fuel line for leaks, cracks or damage. If it is leaking, cracked or damaged, take it to your servicing dealer for replacement before using your outboard.

(8) Replace the fuel line if there are signs of leaks, cracks or damage.

(9) Mechanical Remote Control type only.



# SERVICING YOUR OUTBOARD MOTOR


## TRIM TAB ADJUSTMENT

The trim tab compensates for “torque steer,” which is a reaction of the outboard motor to propeller rotation.


If uncompensated, torque steer would make the outboard motor tend to turn to one side.

When the trim tab is correctly adjusted, steering effort is equal in either direction.

If steering effort is unequal, loosen the trim tab bolt and adjust the angle of the trim tab. Retighten the trim tab bolt securely.

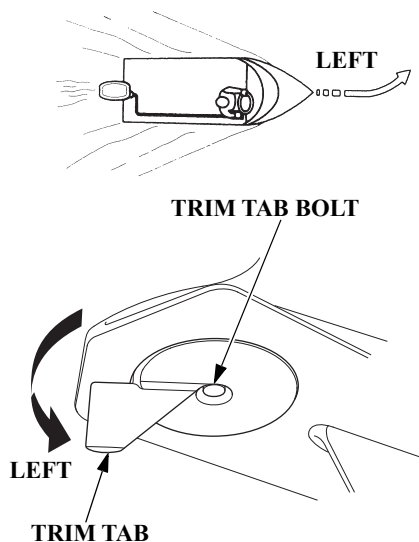

If less effort is required to make left turns, move the back of the trim tab left.

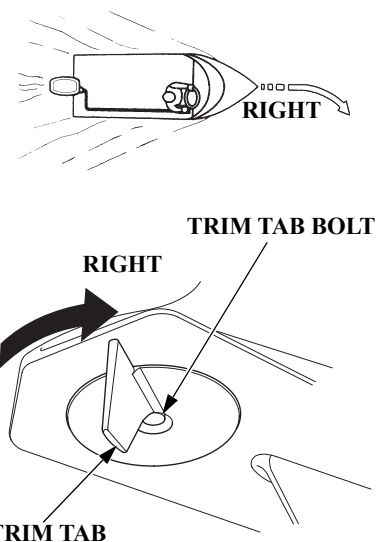

If less effort is required to make right turns, move the back of the trim tab right.


Adjust the trim tab in small increments, and retest steering effort with the boat evenly loaded and running at cruising speed.



# SERVICING YOUR OUTBOARD MOTOR

## MANUAL RELIEF VALVE

### MANUAL RELIEF VALVE

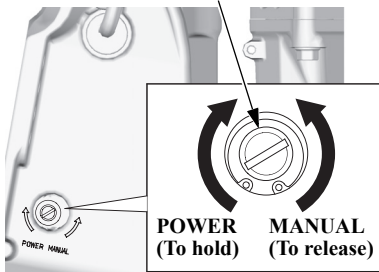

The outboard motor can be tilted manually after opening the manual relief valve. This feature enables the outboard motor to be tilted up or down when no battery is connected.

For manual tilting, use a screwdriver to turn the valve counterclockwise 1 or 2 turns. Close the valve firmly after positioning the outboard motor.


Be sure the valve is closed before operating the outboard motor. If the valve is not closed, the outboard motor will tilt up when operated in reverse.

Check that nobody is under the outboard motor before opening the manual relief valve. If the manual relief valve is loosened (turned counterclockwise) when the outboard motor is tilted up, the outboard motor will suddenly tilt down.

## ENGINE COVER REMOVAL AND INSTALLATION


### Removal

Front

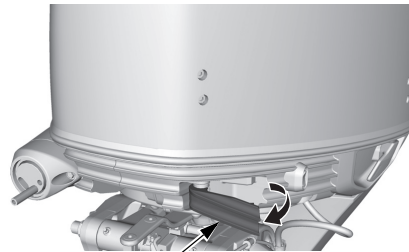

ENGINE COVER LATCH

Side

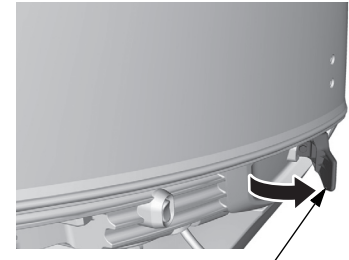


ENGINE COVER LATCH (each side)

1. Pull all the engine cover latches.
2. Remove the engine cover by lifting it straight up from the outboard motor.



# SERVICING YOUR OUTBOARD MOTOR

## Installation

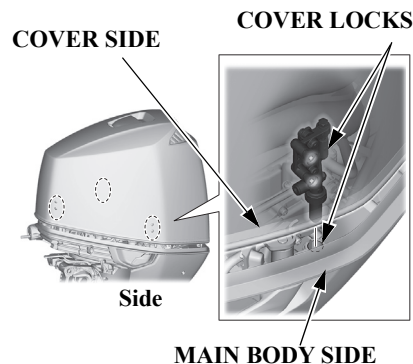

1. Place the engine cover on the main body.
2. Slide the engine cover so that the cover lock on the cover aligns with the lock in the main body.

Front



Side



ENGINE COVER LATCH (each side)

3. Push the engine cover until any gap between the engine cover and main body is eliminated.
4. Push all the engine cover latches to lock them.

Lubricate the engine cover rubber sealing ring with silicone spray to make installation easier.

The cover should be tight at the mid-case point. If the cover is loose or difficult to secure, an adjustment may be necessary. Please see the shop manual or your Marine dealer for adjustment.




# SERVICING YOUR OUTBOARD MOTOR

## Engine Oil Level Check

Check the engine oil level with the engine stopped and the outboard motor in the vertical position.


1. Unlock and remove the engine cover (p. 97).
2. Remove the oil level dipstick by pulling it. Wipe the oil level dipstick clean.

### OIL LEVEL DIPSTICK

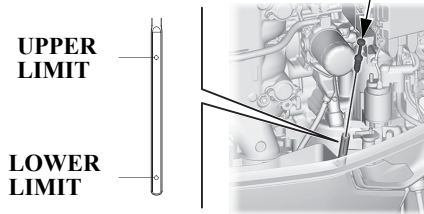

3. Insert the dipstick all the way in, then remove it and check the oil level shown on the dipstick.

### OIL FILLER CAP

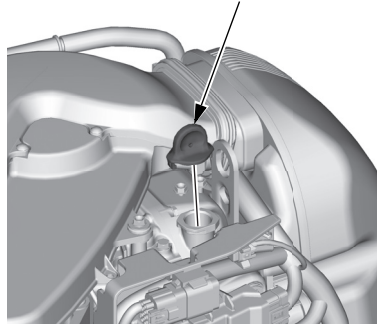

4. If the oil level is near or below the lower limit mark on the dipstick, remove the oil filler cap, and add oil to reach the upper limit mark shown on the dipstick. Use the oil recommended on p. 103.

### NOTICE

- *Running the engine with a low oil level can cause engine damage.*
- *Do not overfill. Overfilling the engine will cause it to smoke or have oil leaks.*

5. Insert the dipstick all the way in. Install the oil filler cap and tighten it securely. Do not overtighten.
6. Install and lock the engine cover.



# SERVICING YOUR OUTBOARD MOTOR

When you check the oil level with the dipstick, you might notice the engine oil appears milky or the oil level has increased. If you notice either condition, change the engine oil. See the following table for an explanation of these conditions.


Operating Method	Result	Effect
Running the engine below 3,000 rpm for more than 30% of the time so the engine does not warm up.	<ul style="list-style-type: none"><li>• Water condenses in the engine and mixes with the oil, resulting in a milky appearance.</li><li>• Unburned fuel mixes with the oil, increasing the volume of oil.</li></ul>	The engine oil deteriorates, becomes less efficient as a lubricant, and causes an engine malfunction.
Frequent starting and stopping without allowing the engine to warm up.		

## Engine Oil Change

An engine oil evacuation/filling device may be used to remove/add the engine oil.

Drain the used oil while the engine is warm. Warm oil drains quickly and completely.

1. Unlock and remove the engine cover (p. 97).

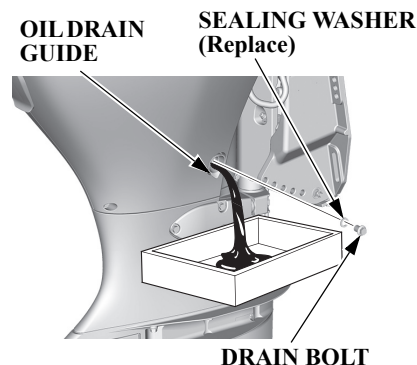



## SERVICING YOUR OUTBOARD MOTOR

2. Place a suitable container below the oil drain guide to catch the used oil, and then remove the oil filler cap, drain bolt, and sealing washer.
3. Allow the used oil to drain completely. Use a new sealing washer, and then reinstall the engine oil drain bolt and washer. Tighten the drain bolt securely.

TIGHTENING TORQUE:  
17 lbf·ft (23 N·m, 2.3 kgf·m)

### NOTICE

*Improper disposal of engine oil can be harmful to the environment. If you change your own oil, please dispose of the used oil properly. Put it in a sealed container, and take it to a recycling center. Do not throw it in the trash, pour it on the ground or down a drain.*



4. With the outboard motor in a vertical position, fill to the upper limit mark on the dipstick (p. 99) with the recommended oil.  
Engine oil refill capacity:  
Without oil filter change:  
6.9 US qt (6.5 L)  
With oil filter change:  
7.1 US qt (6.7 L)
5. Install the oil filler cap and tighten it securely.
6. Install and lock the engine cover (p. 97).



# SERVICING YOUR OUTBOARD MOTOR

## Oil Filter Change

1. Drain the engine oil, and then reinstall the drain bolt and sealing washer.
2. Tilt the outboard motor, and place a suitable container below the oil drain guide to catch the used oil.
3. Use a suitable tool to remove the oil filter, and thoroughly drain the filter into the used oil container.

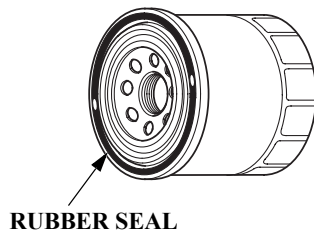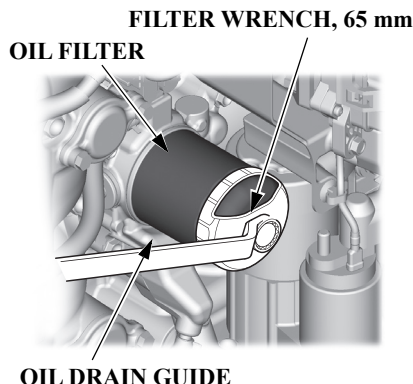

4. Clean the oil filter mounting base, and coat the rubber seal of the new oil filter with clean engine oil.

### NOTICE

*Use only a Honda Genuine oil filter or a filter of equivalent quality specified for your model. Using the wrong filter, or a non-Honda filter which is not of equivalent quality, may cause engine damage.*

5. Screw on the new filter by hand until it contacts the engine, then use a suitable tool to tighten the filter an additional 3/4 turn.

**TIGHTENING TORQUE:**  
9 lbf·ft (12 N·m, 1.2 kgf·m)

6. Return the outboard motor to the vertical position, and fill the crankcase with the specified amount of the recommended oil.



### NOTICE

*Do not overfill. Overfilling the engine will cause it to smoke or have oil leaks.*

7. Start the engine and check for leaks (be sure the water level is at least 2 inches (5 cm) above the antiventilation plate).

If you are changing the oil filter while the outboard motor is out of the water, use commercially available ear muffs and water hose to supply water.


### NOTICE

*Running the outboard motor without sufficient cooling water will damage the water pump and overheat the engine.*

8. Stop the engine, and check the oil level as described on page 99. If necessary, add oil to bring the oil level to the upper limit mark on the dipstick.

### Engine Oil Recommendations

Oil is a major factor affecting performance and service life. Use 4-stroke detergent oil.

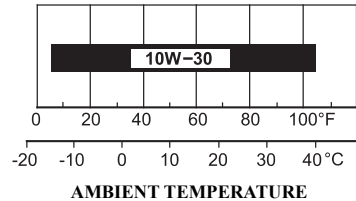

Honda 10W-30 FC-W<sup>®</sup> outboard motor oil is recommended for general use.

FC-W<sup>®</sup> is a registered trademark of the National Marine Manufacturers Association.

If Honda 10W-30 FC-W oil is not available, Honda recommends that you use API service category SG, SH, SJ or SL oil. The SAE oil viscosity and service category are in the API label on the oil container.



# SERVICING YOUR OUTBOARD MOTOR


## Lubrication Points

Apply Honda Marine waterproof grease to the parts shown below:


### NOTICE

*Apply anticorrosion oil to pivot surfaces where grease cannot penetrate.*


**THROTTLE LINK/PIVOT/  
PLATE  
(MECHANICAL WIRE TYPE)**

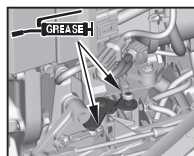


**THROTTLE ROD/LINK  
(MECHANICAL WIRE TYPE)**

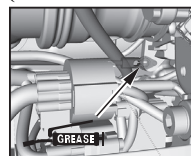

**TILT BRACKET**


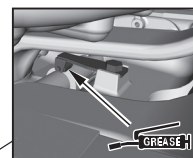


**ENGINE COVER  
LOCK PLATE**

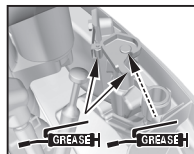


Apply grease to the back of the engine cover lock plate as well.


**TILT SHAFT**

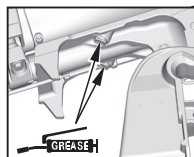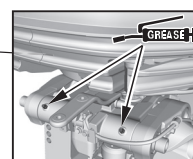

**PTT THRUST  
RECEIVER**

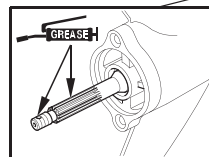

**PROPELLER SHAFT**

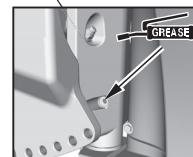


**SWIVEL CASE**

Apply Honda Marine Corrosion Inhibitor (or equivalent) to all areas under the engine cover and any exposed metal surfaces except the belts.




# SERVICING YOUR OUTBOARD MOTOR



**THROTTLE ARM/SHIFT ARM/PIVOT  
PLATE/NEUTRAL SWITCH/CLICK ARM  
ROLLER (MECHANICAL WIRE TYPE)**

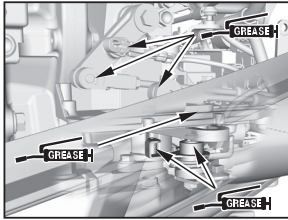


**SHIFT PIVOT/BRACKET/SHIFT ARM/  
CLICK ARM ROLLER (DBW TYPE)**

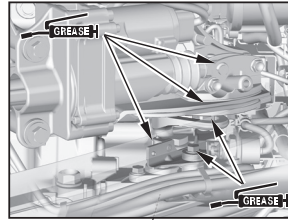


**TILT LOCK LEVER**

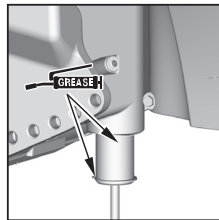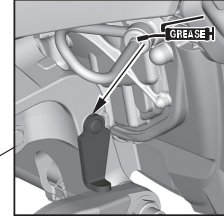


**SWIVEL SHAFT**

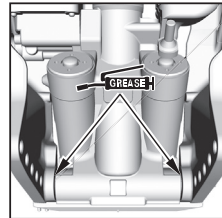

**LOWER CYLINDER  
BUSH/COLLAR**

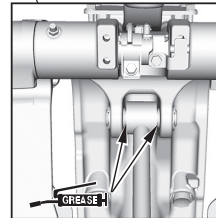

**UPPER CYLINDER PIN/  
BUSH**

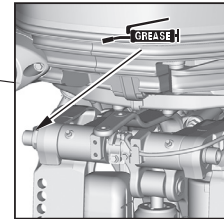

**TILT SHAFT THREAD**



# SERVICING YOUR OUTBOARD MOTOR

## Spark Plug Service <Standard Spark Plug>


RECOMMENDED SPARK PLUGS:  
ZFR6K-11 (NGK)  
KJ20DR-M11 (DENSO)

### NOTICE


*Incorrect spark plugs can cause engine damage.*

See page 109 for instructions of handling the Iridium spark plugs (optional parts).

1. Disconnect the battery negative (–) terminal.
2. Unlock and remove the engine cover (p. 97).

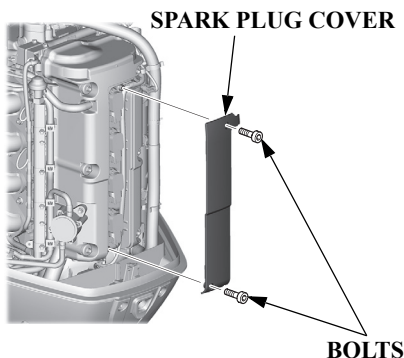

3. Remove the two bolts with the 6 mm hex. wrench, and remove the spark plug cover.

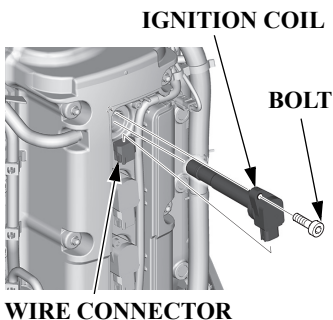


4. Use a 6 mm hex. wrench to remove the bolt holding the ignition coil. Move the ignition coil to a position that allows removal of the wire connector easily.
5. Disconnect the wire connector from the ignition coil by pushing on the lock tab and pulling on the connector. Pull on the plastic connector, not the wires.
6. Remove the ignition coil by pulling it up slightly.

### NOTICE

*Do not strike or drop the ignition coil, or it may be damaged and require replacement.*



## SERVICING YOUR OUTBOARD MOTOR

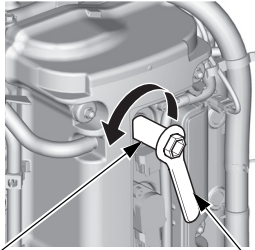


**SPARK PLUG  
WRENCH**


**19 mm EYE  
WRENCH**

7. Remove the spark plugs with a spark plug wrench and 19 mm eye wrench.


**New plug**

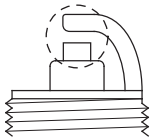

**Plug needing  
replacement**

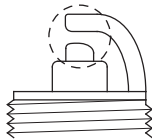

8. Inspect the spark plugs. Replace them if the electrodes are worn, or if the insulators are cracked or chipped.

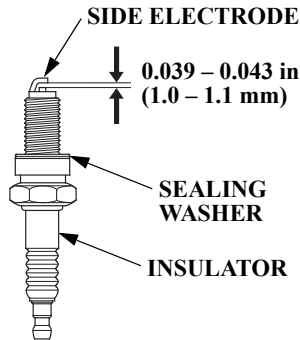

9. Measure the spark plug electrode gap with a wire-type feeler gauge. Correct the gap, if necessary, by carefully bending the side electrode.

The gap should be:  
0.039 – 0.043 in (1.0 – 1.1 mm)

10. Install the spark plugs carefully, by hand, to avoid cross-threading.

11. After each spark plug seats, tighten with the spark plug wrench supplied in the tool kit to compress the sealing washer.

If reinstalling used spark plugs, tighten 1/8 – 1/4 turn after the spark plugs seat.

If installing new spark plugs, tighten 1/2 turn after the spark plugs seat.

**TIGHTENING TORQUE:**  
13 lbf·ft (18 N·m , 1.8 kgf·m)

### **NOTICE**

*Loose spark plugs can overheat and damage the engine.*

*Overtightening the spark plugs can damage the threads in the cylinder head.*

12. Push the wire connector onto the ignition coil. Make sure it locks in place.



## SERVICING YOUR OUTBOARD MOTOR

---

13. Install the ignition coil. Reinstall the bolt.
14. Repeat this procedure for the other three spark plugs.
15. Reinstall the covers. When reinstalling the covers, make sure not to jam the wire harnesses between the covers and engine case.



### <Optional Parts: Iridium Spark Plug>

RECOMMENDED SPARK PLUGS:  
IZFR6K11 (NGK)  
SKJ20DR-M11 (DENSO)

#### NOTICE

*Incorrect spark plugs can cause engine damage.*

Installation and removal procedure of the Iridium spark plugs are the same as the standard spark plugs.

These spark plugs have an iridium coated center electrode.

Be sure to observe the following when servicing iridium spark plugs.

- Do not clean the spark plugs. If an electrode is contaminated with accumulated objects or dirt, replace the spark plug with a new one.
- Use only a “wire-type feeler gauge” to check the spark plug gap if necessary. To prevent damaging the iridium coating of the center

electrode, never use a “leaf-type feeler gauge.”

The gap should be 0.039 – 0.051 inches (1.0 – 1.3 mm).

- Do not adjust the spark plug gap. If the gap is out of specification, replace the spark plug with a new one.

### REFUELING

If you do not anticipate cycling through at least one complete tank of fuel within a 30 day period, we recommend adding Honda Marine Fuel Stabilizer each time you refuel.

Check the fuel level and refill if necessary. Do not fill the fuel tank above the UPPER LIMIT. Refer to the boat manufacturer's instructions.



# SERVICING YOUR OUTBOARD MOTOR

## ⚠ WARNING

Gasoline is highly flammable and explosive.

You can be burned or seriously injured when handling fuel.

- Stop the engine and let it cool before handling fuel.
- Keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Keep away from your vehicle.
- Wipe up spills immediately.

Never refill the fuel tank inside a building where gasoline fumes may reach flames or sparks. Keep gasoline away from appliance pilot lights, barbecues, electric appliances, power tools, etc.

Spilled fuel is not only a fire hazard, it causes environmental damage. Wipe up spills immediately.

## NOTICE

*Fuel can damage paint and plastic. Be careful not to spill fuel when filling your fuel tank. Damage caused by spilled fuel is not covered under the Distributor's Limited Warranty (U.S.) / Distributor's Warranty (CA.).*

## FUEL RECOMMENDATIONS

**Use unleaded gasoline with a pump octane rating of 86 or higher.**

Your outboard motor is certified to operate on unleaded gasoline. Unleaded gasoline produces fewer engine and spark plug deposits and extends exhaust system life.

Never use gasoline that is stale, contaminated, or mixed with oil. Avoid getting dirt or water in the fuel tank.

You may use unleaded gasoline containing no more than 10% ethanol (E10) or 5% methanol by volume. In addition, methanol must contain cosolvents and corrosion inhibitors. Use of fuels with content of ethanol or methanol greater than shown above may cause starting and/or performance problems. It may also damage metal, rubber, and plastic parts of the fuel system.




# SERVICING YOUR OUTBOARD MOTOR

Engine damage or performance problems that result from using a fuel with percentages of ethanol or methanol greater than shown above are not covered under warranty.

If your outboard motor will be used on an infrequent or intermittent basis, please refer to the fuel section of the *STORAGE* chapter (p. 120) for additional information regarding fuel deterioration.

## Fuel Filter with Water Separator Inspection and Replacement

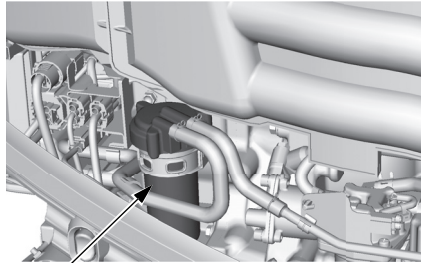

### FUEL FILTER with WATER SEPARATOR

The fuel filter with water separator is located below the intake manifold.

Water or sediment accumulation in the fuel filter with water separator can cause loss of power or hard starting. To prevent engine malfunction, inspect the fuel filter with water separator and replace when necessary. Clean it or consult with an authorized Honda outboard motor dealer for cleaning.

## **⚠ WARNING**

Gasoline is highly flammable and explosive.

You can be burned or seriously injured when handling fuel.

- Stop the engine and let it cool before handling fuel.
- Keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Keep away from your vehicle.
- Wipe up spills immediately.



# SERVICING YOUR OUTBOARD MOTOR


## <Inspection>

Front




**ENGINE COVER LATCH**

Side

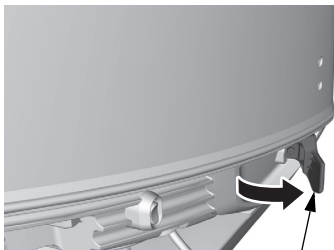

**ENGINE COVER LATCH (each side)**

1. Remove the engine cover (p. 97).

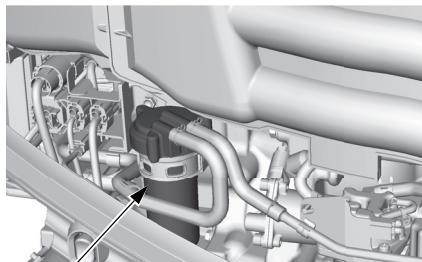

**FUEL FILTER with WATER SEPARATOR**

2. Looking through the translucent strainer cup, check the fuel filter with water separator for water accumulation or sediment.


If the fuel filter with water separator is clogged, refer to fuel filter with water separator replacement procedure (p. 113) to remove the filter and clean it.

If water is present in the fuel filter with water separator, refer to fuel

filter with water separator replacement procedure to remove the strainer cup and empty the water from the inside of the cup.




## SERVICING YOUR OUTBOARD MOTOR

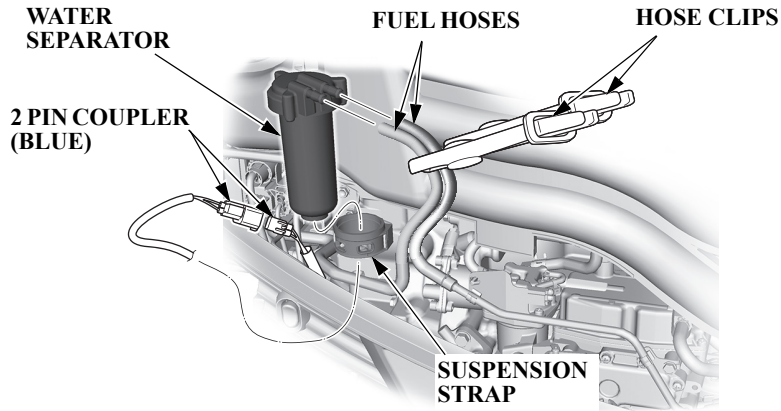

### <Replacement>

1. Remove the engine cover (p. 97).
2. Disconnect the 2 pin coupler (blue).
3. Remove the suspension strap from the fuel filter with water separator bracket, and then remove the suspension strap from the fuel filter with water separator.

4. Bind the two fuel hoses with hose clips to prevent fuel leakage, and disconnect the fuel hoses.

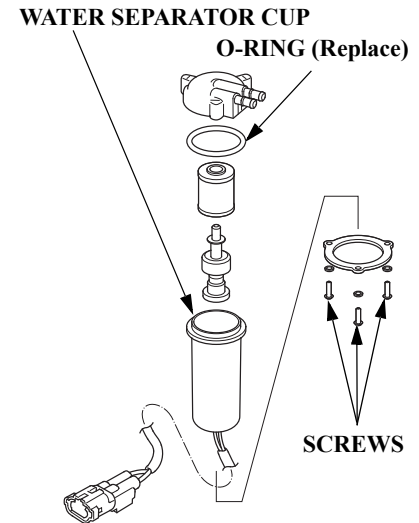


5. Remove the three screws holding the fuel filter with water separator, empty the water or deposits from the inside of the cup.



## SERVICING YOUR OUTBOARD MOTOR

---

6. Thoroughly clean the cup, and replace with a new fuel filter.
  7. Reassemble the fuel filter with water separator in the reverse order of removal. Use a new O-ring.
- TIGHTENING TORQUE:**  
2.5 lbf·ft (3.4 N·m, 0.35 kgf·m)

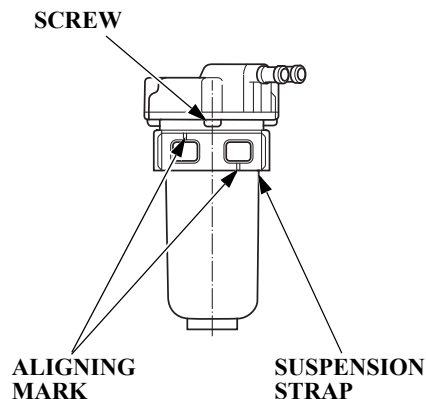


8. Position the aligning mark as shown in the figure when installing the suspension strap on the fuel filter with water separator.
9. Prime the engine using the priming bulb (p.62). Check for fuel leaks. Repair any fuel leaks if necessary.

If the buzzer sounds or water or sediment accumulation is found in the fuel filter with water separator, inspect the fuel tank.

Clean the fuel tank and tank filter if necessary. It may be necessary to drain the fuel tank completely and refill with fresh gasoline.



## Anode Replacement

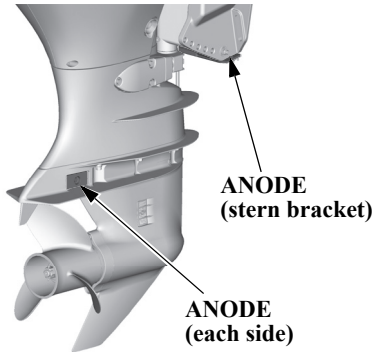

The anodes are located on each side of the gear case and on the stern bracket. They are made of a sacrificial material that helps to protect the outboard motor from corrosion.

Replace the anodes when they have been reduced to about one third their original size, or if they are crumbling.

### NOTICE


*Painting or coating the anodes will defeat their purpose and will lead to rust and corrosion damage to the outboard motor. The anodes must be exposed to the water in order to protect the outboard motor.*

## Propeller Replacement [Except for JRA type]

Before replacing the propeller, remove the emergency stop switch clip from the emergency stop switch to prevent any possibility of the engine being started while you are working with the propeller.

The propeller blades may have sharp edges, so wear heavy gloves to protect your hands.

When replacing the propeller, put a suitable chip of wood between the propeller and the antiventilation plate to prevent the propeller from rotating.

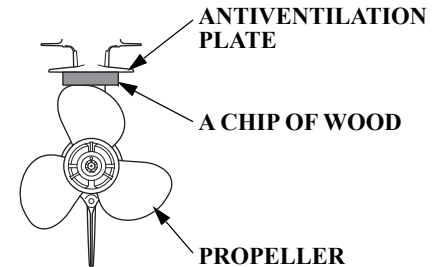



# SERVICING YOUR OUTBOARD MOTOR

---

Operating the outboard motor at higher altitudes will reduce available power. This may require decreasing the propeller pitch to maintain correct engine RPM.

## ***Removal***

1. Remove the cotter pin, unscrew the castle nut, remove the washer, and then remove the propeller and thrust washer.
2. Inspect the propeller shaft for any fishing line or debris.

## ***Installation***

Some propeller brands require specific mounting hardware. Refer to your specific propeller manufacturer's instructions for proper installation.

1. Apply marine grade grease to the propeller shaft.
2. Install the thrust washer with the grooved side toward the gear case.
3. Install the propeller.
4. Install the washer with as shown.
5. Lightly tighten the castle nut by hand or wrench until the propeller has no free play.
6. Tighten the castle nut using a torque wrench.  
TIGHTENING TORQUE:  
41 lbf·ft (56 N·m, 5.7 kgf·m)
7. Then, using a torque wrench, tighten the castle nut until the first

available groove in the castle nut aligns with the cotter pin hole. Do not tighten past the first alignment of the castle nut groove and the cotter pin hole.

## **NOTICE**

***TIGHTENING TORQUE LIMIT:***  
94 lbf·ft (128 N·m, 13 kgf·m)  
*Do not tighten the castle nut above the TIGHTENING TORQUE LIMIT, or the propeller and shaft may be damaged.*




## SERVICING YOUR OUTBOARD MOTOR

8. Be sure to replace the cotter pin with a new one.

- Use a Honda Genuine stainless steel cotter pin or equivalent cotter pin and bend the pin ends as shown.

Note that these wrenches are not included with the tool set that comes with the outboard motor. Contact your authorized Honda Marine dealer for additional tool information.

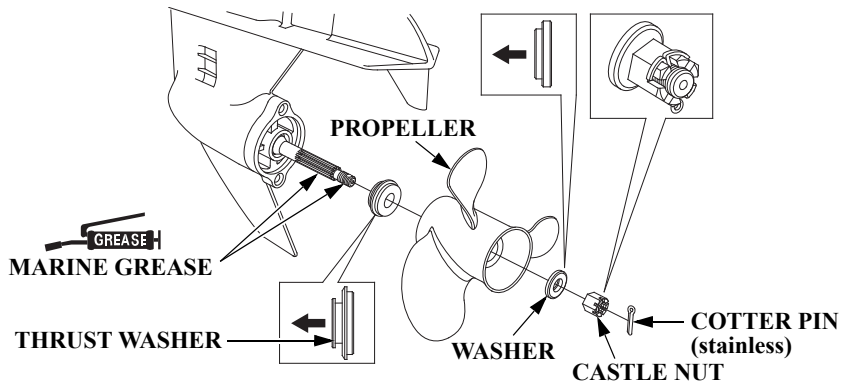



# CLEANING AND FLUSHING

## Cleaning and Flushing

After each use in salt water or dirty water, thoroughly clean and rinse the outboard motor with fresh water.

Touch up any damaged paint, and coat areas that may rust with Honda Corrosion Inhibitor, or equivalent. Lubricate controls with a silicone spray lubricant.


### NOTICE

*Do not apply water or corrosion inhibitor directly to the electrical components under the engine cover, such as the AC generator, HO2S sensor, or the AC generator belt. If water or corrosion inhibitor penetrates these components, they may be damaged. Before applying a corrosion inhibitor, cover the AC generator, belt and HO2S sensor with a protective material to prevent damage.*

## Cleaning

Wash the outside of the outboard motor with clean, fresh water, and flush the cooling system as follows.

Cleaning of the outside of the outboard motor should be performed with the engine cover installed.

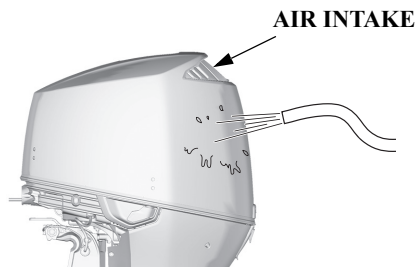

### NOTICE

*Be careful not to spray water into the air intake. If water penetrates inside the engine cover from the air intake, it may cause malfunction.*

## Flushing With a Garden Hose (commercially available)

### NOTICE

*Do not run the engine when flushing the outboard motor with a garden hose or the outboard motor may be damaged.*




For safety, remove the emergency stop switch clip so the engine cannot be started while you are standing near the propeller.

1. Disconnect the fuel hose from the outboard motor.
2. Tilt down the outboard motor.
3. Clean and wash the outside of the outboard motor with fresh water.



**FLUSH PORT  
CONNECTOR**

4. Disconnect the flush port connector.

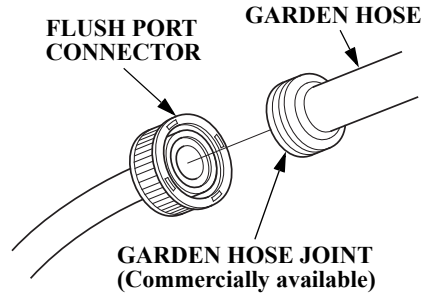


5. Screw the flush port connector onto the garden hose.
6. Turn on the fresh water supply and flush the outboard motor for at least 10 minutes.  
Check that water is draining from the cooling system indicator, the cooling water intake port and the exhaust port.

### NOTICE

*Do not start the engine while flushing.*

### COOLING WATER INTAKE PORT

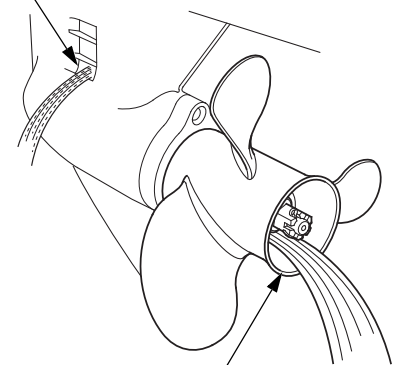

**EXHAUST PORT**

7. After flushing, disconnect the garden hose and reconnect the flush port connector.
8. Tilt up the outboard motor and move the tilt lock lever to the LOCK position.



# STORAGE

## Fuel

### NOTICE

*Depending on the region where you operate your outboard, fuel formulations may deteriorate and oxidize rapidly. Fuel deterioration and oxidation can occur in as little as 15 days and may cause damage to the fuel system. Please check with your servicing dealer for local storage recommendations.*

Gasoline will oxidize and deteriorate in storage. Old gasoline will cause hard starting, and it leaves gum deposits that clog the fuel system. If the gasoline in your fuel tank and vapor separator deteriorates during storage, you may need to have the vapor separator and other fuel system components serviced or replaced.

The length of time that gasoline can be left in your fuel tank and vapor separator without causing functional problems will vary with such factors

as gasoline blend, your storage temperatures, and whether the fuel tank is partially or completely filled. The air in a partially filled fuel tank promotes fuel deterioration. Very warm storage temperatures accelerate fuel deterioration. Fuel deterioration problems may occur in less than 15 days, if the gasoline was not fresh when you filled the fuel tank.

You can extend fuel storage life by adding a gasoline stabilizer that is formulated for that purpose, or you can avoid fuel deterioration problems by draining all the fuel from the fuel tank and vapor separator.

*The Distributor's Limited Warranty (U.S.) / Distributor's Warranty (CA.)* (p. 152) does not cover fuel system damage or engine performance problems resulting from neglected storage preparation. See page 110 for additional information on fuel recommendations.

### ***Adding a Fuel Stabilizer***


When adding a fuel stabilizer, fill the fuel tank with fresh gasoline. If only partially filled, air in the tank will promote fuel deterioration during storage. If you keep an additional container of gasoline for refueling, be sure that it contains only fresh gasoline.

1. Drain the vapor separator before adding fuel stabilizer.
2. Add Honda Marine fuel stabilizer or equivalent following the instructions on the label.
3. After adding a fuel stabilizer, run the engine in water for 10 minutes to be sure that the treated gasoline has replaced the untreated gasoline in the vapor separator.
4. Turn the engine OFF.



### *Draining the Fuel System*

You can avoid fuel deterioration problems by draining the fuel tank and vapor separator.

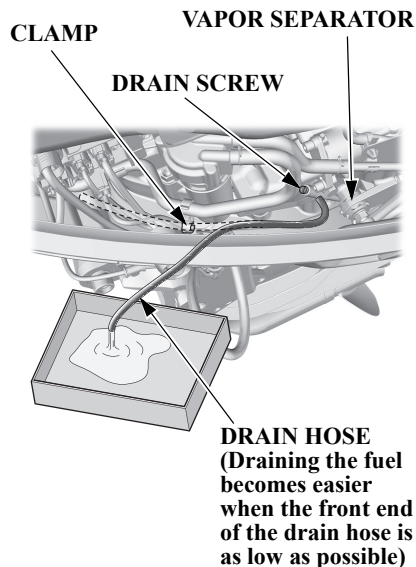

1. Unhook the drain hose from the clamp.
2. Set the end of the hose toward the outside of the engine undercase. Place an approved gasoline container below the fuel drain outlet, and use a funnel to avoid spilling fuel.
3. Loosen the vapor separator drain screw.

### **⚠ WARNING**

Gasoline is highly flammable and explosive.

You can be burned or seriously injured when handling fuel.

- Stop the engine and let it cool before handling fuel.
- Keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Keep away from your vehicle.
- Wipe up spills immediately.



## STORAGE

---

4. Tilt the outboard motor up all the way. Leave the outboard motor tilted up until the gasoline stops flowing.
5. After thoroughly draining, tighten the drain screw securely and return the outboard motor to the vertical position.
6. Clamp the drain hose on the clamp.
7. Drain the fuel tank into an approved gasoline container, or if you need to store fuel in the fuel tank, you can extend fuel storage life by filling the fuel tank with fresh gasoline and adding Honda Marine fuel stabilizer or equivalent following the directions on the container.


### Engine Oil

1. Change the engine oil and the oil filter (p. 99 – 103).
2. Remove the spark plugs (p. 106), and remove the emergency stop switch clip from the emergency stop switch.
3. Pour 1 – 2 teaspoons (5 – 10 cm<sup>3</sup>) (p. 138) of clean engine oil into each cylinder.
4. Rotate the engine a few revolutions to distribute the oil in the cylinders.
5. Reinstall the spark plugs (p. 107).




### HOISTING THE OUTBOARD MOTOR

Front

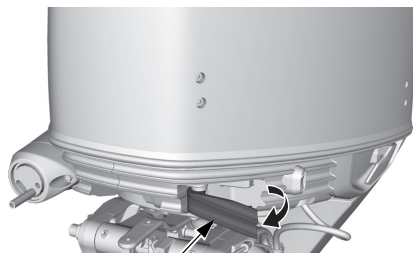


ENGINE COVER LATCH

Side

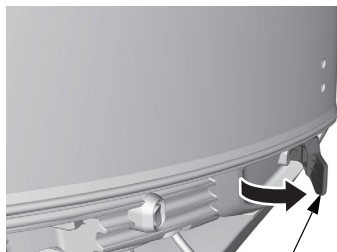

ENGINE COVER LATCH (each side)

1. Unlock and remove the engine cover (p. 97).

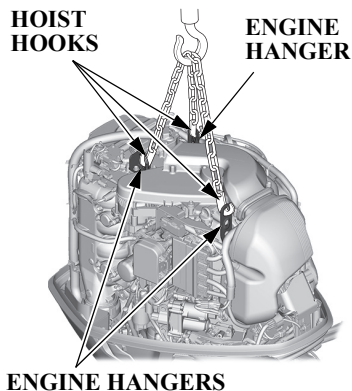

2. Attach the hoist hooks to the engine hangers.
3. Disconnect the outboard motor from the boat, hoist the outboard motor, and move it to the storage area.
4. After the outboard motor is placed in storage and disconnected from the hoist, install the engine cover.

### STORAGE PRECAUTIONS

Select a well-ventilated storage area. If possible, avoid storage areas with high humidity.

If storing a container of gasoline, store it away from any appliance that operates with a flame, such as a furnace, water heater, or clothes dryer. Also avoid any area with a spark producing electric motor, or where power tools are operated.




## STORAGE



**OUTBOARD MOTOR STAND**

If the outboard motor will be removed from the boat for storage, we recommend storing it vertically by mounting it on a commercially available stand.

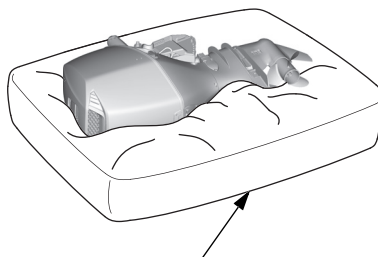

**PROTECTOR**

If it is necessary to store the outboard motor horizontally as shown, drain the vapor separator (p. 121), and drain the engine oil (p. 100), before removing the outboard motor from the boat.

Rest the outboard motor on a cushion of protective material.

Cover the outboard motor to keep out dust. Do not use a plastic sheet as a dust cover. A nonporous cover will trap moisture, promoting rust and corrosion.

## REMOVAL FROM STORAGE

Check your outboard motor as described in the *BEFORE OPERATION* chapter of this manual.

If the cylinders were coated with oil during storage preparation, the engine may smoke briefly at startup. This is normal.




## TRANSPORTING

### WITH OUTBOARD MOTOR INSTALLED ON BOAT

When trailering a boat with the outboard motor attached, always disconnect the fuel line from the fuel tank.

Use an outboard motor support bar to prevent the outboard motor from moving while trailering the boat. Refer to the manufacturer's instructions for using an outboard motor support bar.

The preferred method is to leave the engine in the normal running position, but if there is insufficient road clearance, you can tilt the outboard motor using a commercially available outboard motor support bar available through your dealer. Refer to the manufacturer's instructions for using an outboard motor support bar.

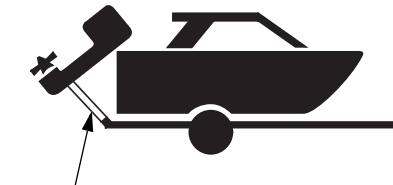

**OUTBOARD MOTOR SUPPORT BAR**  
(commercially available)

### WITH OUTBOARD MOTOR REMOVED FROM BOAT

Secure the outboard motor in either the vertical or horizontal position shown on p. 124.



# TAKING CARE OF UNEXPECTED PROBLEMS

## ELECTRIC STARTER WILL NOT OPERATE

Possible Cause	Correction
Battery connections loose or corroded.	Clean and tighten battery connections.
Battery discharged.	Recharge battery.
Fuse(s) blown.	Replace fuse(s) (p. 131).
Fuel system malfunction, fuel pump failure, ignition malfunction, stuck valves, starter malfunction, switch malfunction, or electrical problem in the starting circuit, etc.	Use starting procedure (p. 63, 69, 71); if engine still will not start, then take outboard motor to an authorized Marine dealer, or refer to the shop manual.



## TAKING CARE OF UNEXPECTED PROBLEMS

---

### ENGINE WILL NOT START

Possible Cause	Correction
Clip not inserted in emergency stop switch.	Insert clip in emergency stop switch.
Control lever not in neutral position.	Shift to neutral.
Fast idle lever raised (side-mount type).	Leave fast idle lever OFF (p. 67).
Out of fuel.	Refuel (p. 109).
Fuel hose not primed.	Squeeze priming bulb (p. 62).
Fuel filter with water separator or fuel tank filter clogged.	Replace fuel filters (p. 111).
Bad fuel; outboard motor stored without treating or draining gasoline, or refueled with bad gasoline.	Drain fuel tank and vapor separator (p. 121). Refill with fresh gasoline (p. 109).



## TAKING CARE OF UNEXPECTED PROBLEMS

---

### ENGINE WILL NOT START

Possible Cause	Correction
Water separator full of water accumulation.	Clean water separator (p. 111).
Spark plugs faulty, fouled, or improperly gapped.	Gap (non-iridium type) or replace spark plugs (p. 106).
Spark plugs wet with fuel (flooded engine).	Dry and reinstall spark plugs. Start engine with the throttle open.
Fuel system malfunction, fuel pump failure, ignition malfunction, etc.	Take outboard motor to an authorized Marine dealer, or refer to the shop manual.



## TAKING CARE OF UNEXPECTED PROBLEMS

---

### HARD STARTING OR STALLS AFTER STARTING

Possible Cause	Correction
Fast idle lever raised (side-mount type).	Leave fast idle lever OFF (p. 67).
Fuel hose not primed.	Squeeze priming bulb (p. 62).
Fuel filter or fuel tank filter clogged.	Replace fuel filters (p. 111).
Bad fuel; outboard motor stored without treating or draining gasoline, or refueled with bad fuel.	Drain fuel tank and vapor separator (p. 121). Refill with fresh gasoline (p. 109).
Water separator full of water accumulation.	Clean water separator (p. 111).



## TAKING CARE OF UNEXPECTED PROBLEMS

---

### HARD STARTING OR STALLS AFTER STARTING

Possible Cause	Correction
Spark plugs faulty, fouled, or improperly gapped.	Gap (non-iridium type) or replace spark plugs (p. 106).
Fuel system malfunction, fuel pump failure, ignition malfunction, etc.	Take outboard motor to an authorized Marine dealer, or refer to the shop manual.

### ENGINE OVERHEATS

Possible Cause	Correction
Water intake screens clogged.	Clean water intake screens.
Faulty thermostat or water pump.	Take outboard motor to an authorized Marine dealer, or refer to the shop manual.



## TAKING CARE OF UNEXPECTED PROBLEMS

### FUSES

#### Electric Starter Will Not Operate

The 7.5 A, 10 A, 15 A, and 30 A main fuses protect the electric starter relay and related circuits.

The main fuse protects the ignition switch and related circuits. If this fuse blows, the engine will not start or run, and the power trim/tilt switch will not activate the trim/tilt mechanism.

The 40 A fuse is in the power harness connected to the battery. If this fuse blows, the engine will not start or run.

#### Battery Will Not Charge

A 100 A ACG fuse protects the alternator circuit. If the ACG fuse blows, the engine will not charge the battery. Refer to p. 133.


### Fuse Replacement

#### NOTICE


*Disconnect the battery cable at the battery negative (–) terminal before replacing the fuse.  
Failure to do so may cause a short circuit.*

#### Main Fuse

1. Stop the engine and disconnect the battery cable.
2. Remove the engine cover.

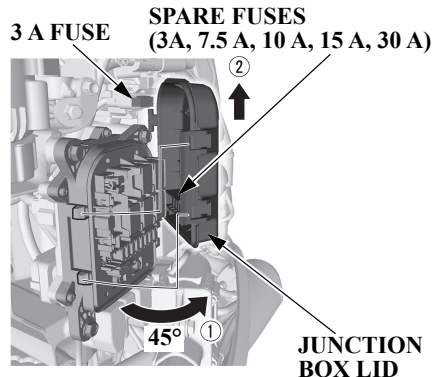

3. Remove the junction box lid.

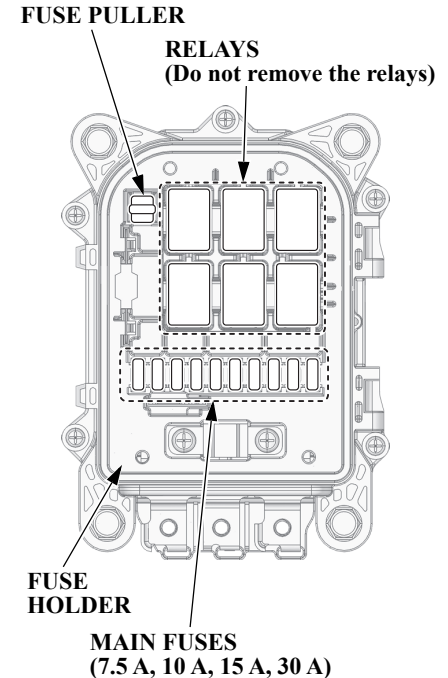



## TAKING CARE OF UNEXPECTED PROBLEMS

### *Mechanical wire type*


Fuse No.	Rating	Component(s) or Circuit(s) Protected
1	100 A	ACG, Battery
4	30 A	STARTER SOLENOID, AND RELAYS IN JUNCTION BOX
5	10 A	Power tilt relay, Warning buzzer, Indicator, Meter
8	10 A	Fuel pump (High pressure side)
9	15 A	Injector, ECU
10	10 A	DLC, Fuel pump (Low pressure side)
11	15 A	PTC
	3 A	Battery switch OFF notification

### *DBW type*


Fuse No.	Rating	Component(s) or Circuit(s) Protected
1	100 A	ACG, Battery
2	15 A	GROUND
3	7.5 A	12 V Accessory
4	30 A	STARTER SOLENOID, AND RELAYS IN JUNCTION BOX
5	7.5 A	REMOTE CONTROL SYSTEM
6	30 A	SHIFT ACTUATOR
7	15 A	THROTTLE BODY
8	10 A	Fuel pump (High pressure side)
9	15 A	Injector, ECU
10	10 A	DLC, Fuel pump (Low pressure side)
11	15 A	PTC
	3 A	Battery switch OFF notification

4. Use the fuse puller from the fuse holder to remove the fuses. If a fuse is blown, install a replacement fuse of the same specified rating. The outboard motor is supplied with spare fuses in the junction box lid.

MAIN FUSE RATINGS:  
7.5 A, 10 A, 15 A, 30 A

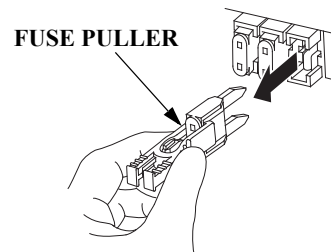

**BLOWN FUSE**

 



## TAKING CARE OF UNEXPECTED PROBLEMS

5. Reinstall the junction box lid, and the engine cover.

6. Reconnect the battery.


### NOTICE

*Never use a fuse with a rating greater than specified. Serious damage to the electrical system could result.*

If a blown fuse is found, try to determine and correct the electrical problem that caused the blown fuse. An uncorrected electrical problem may cause the fuse to blow again.


If fuses continue to blow, take the outboard motor to an authorized Marine dealer for inspection and service, or refer to the shop manual.

### 3 A Fuse

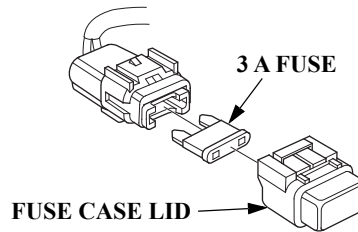

1. Stop the engine and disconnect the battery cable.
  2. Remove the engine cover.
  3. Remove the fuse case lid.
  4. Remove the old fuse.
  5. Install a new fuse. The outboard motor is supplied with spare fuse in the junction box lid.
- FUSE RATING: 3 A
6. Be sure the fuse case lid is securely locked.
  7. Reinstall the engine cover.
  8. Reconnect the battery.

### ACG Fuse

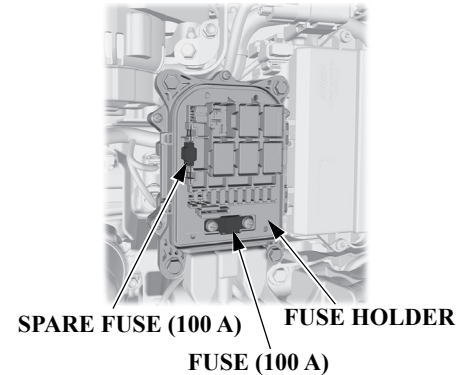

1. Stop the engine and disconnect the battery cable.
2. Remove the engine cover.
3. Remove the junction box lid.
4. Remove the old fuse by removing two 5 mm screws.



## TAKING CARE OF UNEXPECTED PROBLEMS

5. Install a new fuse by tightening two 5 mm screws.

ACG FUSE: 100 A

6. Reinstall the junction box lid, and the engine cover.

7. Reconnect the battery.


A spare fuse is located on the fuse holder.

### *Power Harness*

1. Stop the engine.
2. Disconnect the battery cable and the power harness.
3. Open the fuse cover.
4. Pull the old fuse out of the clip with the fuse puller supplied in the fuse box.
5. Push a new fuse (40A) into the clip.
6. Close the fuse cover.


## OIL PRESSURE INDICATOR GOES OFF AND ENGINE SPEED IS LIMITED

### *Side-Mount Type*

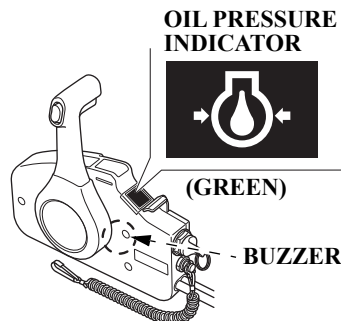

### *Flush-Mount/Top-Mount Types (Mechanical wire type)*

#### OIL PRESSURE INDICATOR

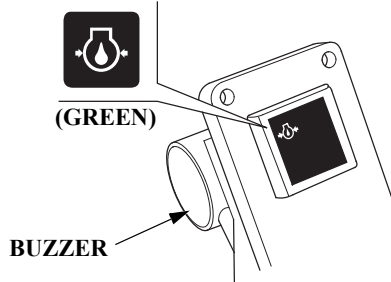


### *Display Assy*

#### LOW OIL PRESSURE INDICATOR



(RED)

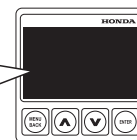

If using a flush-mount or top-mount control panel without indicators, check the indicators displayed on an NMEA2000-compatible device. For information about NMEA2000-compatible device displays, refer to the display device's manual.



## TAKING CARE OF UNEXPECTED PROBLEMS

If oil pressure becomes low, the oil pressure indicator will go off, and the engine protection system limits engine speed. If you are at cruising speed, engine speed will decrease automatically.

The oil pressure indicator is also equipped with a buzzer that sounds when the oil pressure indicator goes off.

Low oil pressure may be the result of a low engine oil level, or there may be a problem with the engine lubrication system.

If the throttle is closed suddenly after full throttle operation, engine speed may drop below the specified idle rpm, and that could activate the engine protection system momentarily.


If low oil pressure activates the engine protection system, stop the engine, check the engine oil level (p. 99), and add oil if needed.

With the engine oil at the recommended level, restart the engine. If the lubrication system is OK, the oil pressure indicator should come on within 30 seconds, and the engine will respond normally to throttle control lever operation.

If the engine protection system remains activated after 30 seconds, return to the nearest boat landing, and have the outboard motor inspected by an authorized Marine dealer.


### OVERHEAT INDICATOR COMES ON AND ENGINE SPEED IS LIMITED

#### *Side-Mount Type*

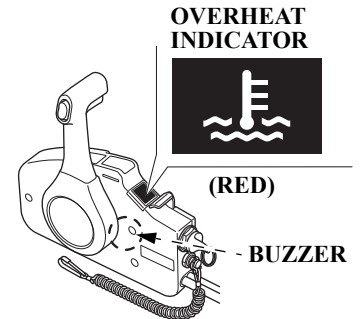

#### *Flush-Mount/Top-Mount Types (Mechanical wire type)*


##### OVERHEAT INDICATOR

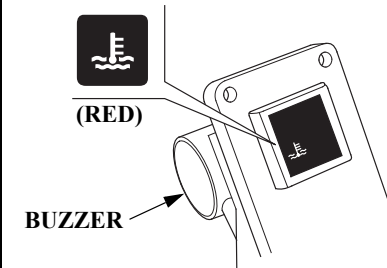



## TAKING CARE OF UNEXPECTED PROBLEMS

### *Display assy*

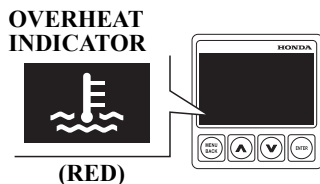

If using a flush-mount or top-mount control panel without indicators, check the indicators displayed on an NMEA2000-compatible device. For information about NMEA2000-compatible device displays, refer to the display device's manual.


If the engine overheats, the overheat indicator will come on, and the engine will stop in 20 seconds after the engine protection system limits engine speed. If you are at cruising speed, engine speed will decrease automatically.

All types are equipped with a buzzer that sounds when the overheat indicator comes on.

Engine overheating may be the result of restricted water intake screens, or there may be a problem with the cooling system thermostat or water pump.

If the engine is stopped after running at full throttle, and then restarted soon afterward, that could activate the engine protection system momentarily.

### **COOLING SYSTEM INDICATOR**

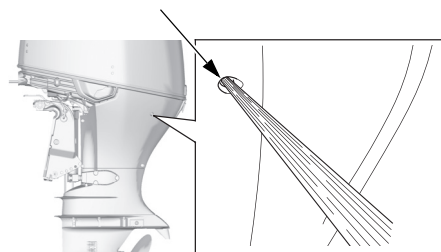

If overheating activates the engine protection system, idle the engine in neutral, and check the cooling system indicator.




## TAKING CARE OF UNEXPECTED PROBLEMS

If water is flowing from the cooling system indicator, continue idling for 30 seconds. If the cooling system is OK, the overheat indicator should go off within 30 seconds, and the engine will respond normally to throttle control lever operation.

If there is no water flowing from the cooling system indicator, stop the engine, and tilt the outboard motor to inspect the water intake screens. If restricted, clean the water intake screens, return the outboard motor to the running position, restart the engine, and check the cooling system indicator again.

If there is still no water flowing from the cooling system indicator, or if the engine protection system remains activated after 30 seconds, return to the nearest boat landing, and have the outboard motor inspected by an authorized Marine dealer.

### WATER SEPARATOR BUZZER SOUNDS

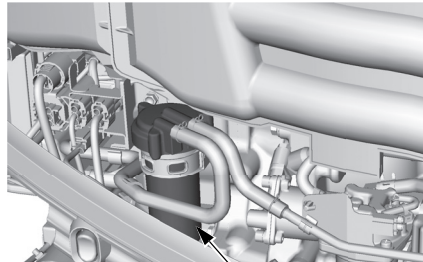

**WATER SEPARATOR**

When the water separator buzzer sounds (a rapid, repeating signal):

Check the water separator for water contamination. If water is present, stop the engine, and clean the water separator following the instructions on page 111, or consult with an authorized Honda Marine dealer.

### SUBMERGED OUTBOARD MOTOR

A submerged outboard motor must be serviced immediately after it is recovered from the water in order to minimize corrosion.

If there is a Honda Marine dealership nearby, take the outboard motor to the dealer immediately. If you are far from a dealership, proceed as follows:


1. Remove the engine cover, and rinse the outboard motor with fresh water to remove salt water, sand, mud, etc.
2. Drain the vapor separator as described on p. 121.



## TAKING CARE OF UNEXPECTED PROBLEMS

---

3. Change the engine oil and oil filter as described on p. 99 – 103. If there was water in the engine crankcase, or if the used engine oil showed signs of water contamination, then a second engine oil change should be performed after running the engine for half an hour.
4. Remove the spark plugs (p. 106). Operate the starter to expel water from the engine's cylinder.

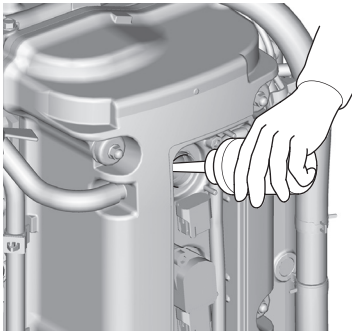

5. Pour a teaspoon (p. 122) of engine oil into each spark plug hole to lubricate the inside of the cylinders. Reinstall the spark plugs.

If the engine was running when it submerged, there may be mechanical damage, such as bent connecting rods. If the engine binds when cranked, do not attempt to run the engine until it has been repaired.

6. Attempt to start the engine (be sure the water level is at least 2 inches above the antiventilation plate).

If you are changing the oil filter while the outboard motor is out of the water, use commercially available ear muffs and water hose to supply water.

### NOTICE

*Running the outboard motor without sufficient cooling water will damage the water pump and overheat the engine.*

If the engine fails to start, remove the spark plugs and dry them, then reinstall the spark plugs and attempt to start the engine again.

If the engine starts, and no mechanical damage is evident, continue to run the engine for a half hour or longer. Be sure the water level is at least 2 inches (5 cm) above the antiventilation plate to avoid overheating and water pump damage.

7. As soon as possible, take the outboard motor to an authorized Marine dealer for inspection and service.







## TAKING CARE OF UNEXPECTED PROBLEMS

### Emergency Gear Shifting (for DBW type)

If the gear cannot be shifted, perform shift operation manually according to the following procedures and return to port at possible engine speed.

1. Set the remote control lever in the NEUTRAL position (p. 28-29).
2. Stop the engine (p. 74).
3. Remove the engine cover (p. 97).
4. Shift gear into neutral by inserting the Phillips screwdriver with the grip of the tool kit (p. 93) into the hole of the shift pivot and moving the shaft.  
Grasp the shaft closer to the shift pivot of the inserted Phillips screwdriver.  
Operate in a stable posture that makes it easy to apply force.

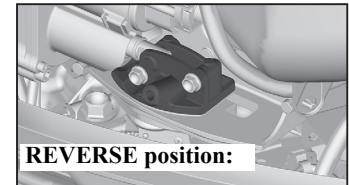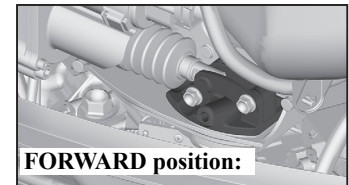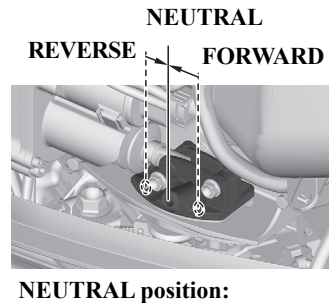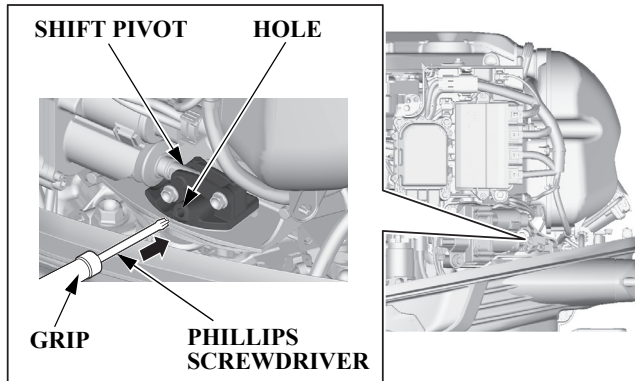

5. Start the engine (p. 63).
6. Shift gear into "F" (Forward) or "R" (Reverse) by moving the shift pivot with the Phillips screwdriver with the grip of the tool kit.

After returning to port, stop the engine and anchor the boat.




# TECHNICAL INFORMATION

## Serial Number Locations

Record the frame serial number, the engine serial number, and the date of purchase in the space provided on this page. You will need these numbers when ordering parts, and when making technical or warranty inquiries (p. 149).

### FRAME SERIAL NUMBER

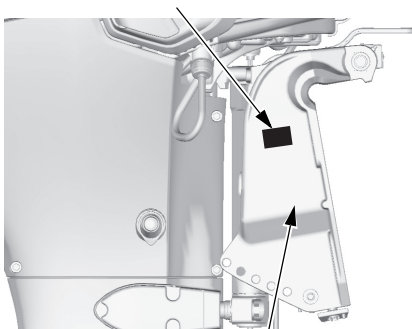

**RIGHT STERN BRACKET**


The frame serial number is stamped on a plate attached on the right side of the stern bracket.

Frame Serial Number:

---

Date of purchase:

---

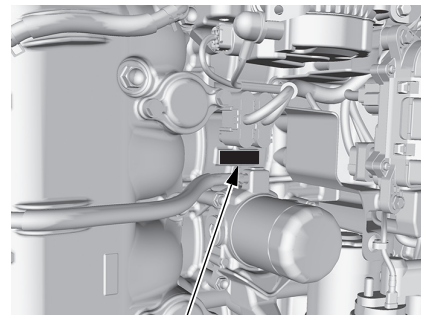

**ENGINE SERIAL NUMBER**

The engine serial number is stamped on the upper right side of the engine.

Engine serial number:

---



### Battery

#### **WARNING**

The battery contains sulfuric acid (electrolyte), which is highly corrosive and poisonous.

Getting electrolyte in your eyes or on your skin can cause serious burns.

Wear protective clothing and eye protection when working near the battery.

**KEEP CHILDREN AWAY  
FROM THE BATTERY.**

For complete information, refer to the battery manufacturer's instructions.

### Minimum Requirements

12 V – 64 Ah/5 HR (80 Ah/20 HR)  
(CCA622)

#### **NOTICE**

- *Be careful to avoid connecting the battery in reverse polarity, as this will damage the battery-charging system in the outboard motor.*
- *Do not disconnect the battery cables while the engine is running. Disconnecting the cables while the engine is running will damage the outboard motor's electrical system.*
- *Battery cable extension: Extending the original battery cable will cause the battery voltage to drop due to the increased length of the cable and number of connections. This voltage drop may cause the buzzer to sound momentarily when engaging the starter motor and may prevent the engine from starting. If the engine starts and the buzzer sounds momentarily, there may be barely sufficient voltage reaching the engine.*

**WARNING:** Battery posts, terminals, and related accessories contain lead and lead compounds.  
**Wash your hands after handling.**

### Emission Control System Information

#### *Source of Emissions*

The combustion process produces carbon monoxide, oxides of nitrogen, and hydrocarbons. Control of hydrocarbons and oxides of nitrogen is very important because, under certain conditions, they react to form photochemical smog when subjected to sunlight. Carbon monoxide does not react in the same way, but it is toxic.

Honda utilizes appropriate air/fuel ratios and other emissions control systems to reduce the emissions of carbon monoxide, oxides of nitrogen, and hydrocarbons.



## TECHNICAL INFORMATION

---

### ***PGM-FI System***

The PGM-FI system uses sequential multiport fuel injection. It has three subsystems: Air Intake, Engine Control, and Fuel Control. The Engine Control Module (ECM) uses various sensors to determine how much air is going into the engine. It then controls how much fuel to inject under all operating conditions.

### ***Ignition Timing Control System***

The system constantly adjusts the ignition timing, reducing the amount of HC, CO, and NO<sub>x</sub> produced.

### ***The U.S., California Clean Air Acts, and Canadian Environmental Protection Act***

EPA, California, and Canadian regulations require all manufacturers to furnish written instructions describing the operation and maintenance of emission control systems.

The following instructions and procedures must be followed in order to keep the emissions from your Honda engine within the emission standards.

### ***Tampering and Altering***

#### **NOTICE**

*Tampering is a violation of Federal and California law.*

Tampering with or altering the emission control system may increase emissions beyond the legal limit. Among those acts that constitute tampering are:

- Removal or alteration of any part of the intake, fuel, or exhaust systems.
- Alterations that would cause the engine to operate outside its design parameters.



### ***Problems That May Affect Emissions***

If you are aware of any of the following symptoms, have your engine inspected and repaired by your servicing dealer.

- Hard starting or stalling after starting
- Rough idle
- Misfiring or backfiring under load
- Afterburning (backfiring)
- Black exhaust smoke or high fuel consumption

### ***Replacement Parts***

The emission control systems on your Honda engine were designed, built, and certified to conform with EPA, California, and Canadian emission regulations. We recommend the use

of Honda Genuine parts whenever you have maintenance done. These original-design replacement parts are manufactured to the same standards as the original parts, so you can be confident of their performance.

Honda cannot deny coverage under the emission warranty solely for the use of non-Honda replacement parts or service performed at a location other than an authorized Honda dealership; you may use comparable EPA certified parts, and have service performed at non-Honda locations. However, the use of replacement parts that are not of the original design and quality may impair the effectiveness of your emissions control system.

A manufacturer of an aftermarket part assumes the responsibility that the part will not adversely affect emission performance. The manufacturer or rebuilder of the part must certify that use of the part will

not result in a failure of the engine to comply with emission regulations.

### ***Maintenance***

As the outboard engine owner, you are responsible for completing all required maintenance listed in your owner's manual. Honda recommends that you retain all receipts covering maintenance on your outboard engine, but Honda cannot deny warranty coverage solely for the lack of receipts or for your failure to ensure that all scheduled maintenance has been completed.

Follow the *MAINTENANCE SCHEDULE* on page 94 and 95. Remember that this schedule is based on the assumption that your machine will be used for its designed purpose. Sustained high-load operation, or use in unusual conditions, will require more frequent service.



## TECHNICAL INFORMATION

### Star Label

#### US, Puerto Rico, and US Virgin Islands

A Star label was applied to this outboard motor in accordance with the requirements of the California Air Resources Board.

### *The Star Label means Cleaner Marine Engine*

This engine has been certified as a:



### The Symbol for Cleaner Marine Engines:

**Cleaner Air and Water** - for healthier lifestyle and environment.

**Better Fuel Economy** - burns up to 30 - 40 percent less gas and oil than conventional carbureted two-stroke engines, saving money and resources.

**Longer Emission Warranty** - protects consumer for worry-free operation.





**One Star  
Low  
Emission**

The one-star label identifies engines that meet the Air Resources Board's Personal Watercraft and Outboard marine engine 2001 exhaust emission standards. Engines meeting these standards have 75% lower emissions than conventional carbureted two-stroke engines. These engines are equivalent to the U.S. EPA's 2006 standards for marine engines.



**Two Stars  
Very Low  
Emission**

The two-star label identifies engines that meet the Air Resources Board's Personal Watercraft and Outboard marine engine 2004 exhaust emission standards. Engines meeting these standards have 20% lower emissions than One Star-Low Emission engines.



**Three Stars  
Ultra Low  
Emission**

The three-star label identifies engines that meet the Air Resources Board's Personal Watercraft and Outboard marine engine 2008 exhaust emission standards or the Sterndrive and Inboard marine engine 2003-2008 exhaust emission standards. Engines meeting these standards have 65% lower emissions than One Star-Low Emission engines.



**Four Stars  
Super Ultra  
Low Emission**

The four-star label identifies engines that meet the Air Resources Board's Sterndrive and Inboard marine engine 2009 exhaust emission standards. Personal Watercraft and Outboard marine engines may also comply with these standards. Engines meeting these standards have 90% lower emissions than One Star-Low Emission engines.

Cleaner Watercraft - Get the Facts  
1-800-END-SMOG  
[www.arb.ca.gov](http://www.arb.ca.gov)



# TECHNICAL INFORMATION

## Specifications

MODEL	BF115J			
Description code	BBWJ			
Type	LR	LD	XR	XD
Overall length	35.9 in (913 mm)			
Overall width	24.3 in (618 mm)			
Overall height	66.5 in (1,688 mm)		71.5 in (1,815 mm)	
Transom height (when transom angle at 12°)	20.0 in (508 mm)		25.0 in (635 mm)	
Dry mass [weight]*	487 lbs (221 kg)	494 lbs (224 kg)	494 lbs (224 kg)	500 lbs (227 kg)
Rated power	85.8 kW (115 HP)			
Full throttle range	4,500 – 6,000 rpm			
Engine type	4 stroke DOHC in-line 4-cylinder			
Displacement	143.6 cu-in (2,354 cm <sup>3</sup> )			
Spark plug gap	0.039 – 0.043 in (1.0 – 1.1 mm)			
Starter system	Electric starter			
Ignition system	Fully transistorized, battery ignition			
Lubrication system	Trochoid pump pressure lubrication			
Specified oil	Engine: API standard (SG, SH, SJ, SL) SAE/FC-W 10W-30 Gear case: API standard (GL-4) SAE 90 Hypoid gear oil			
Oil capacity	Engine: 6.9 US qt (6.5 L) without oil filter change 7.1 US qt (6.7 L) with oil filter change Gear case: 1.04 US qt (0.98 L)			

\* With propeller

CARB star label	ULTRA · LOW EMISSION
D.C. output	12 V – 40 A
Cooling system	Water cooling with thermostat
Exhaust system	Water exhaust
Spark plugs	ZFR6K-11 (NGK) KJ20DR-M11 (DENSO)
Fuel pump	Low pressure side: mechanical type High pressure side: electromagnetic type
Fuel	Unleaded gasoline (86 pump octane or higher)
Gear change	Forward-Neutral-Reverse (dog type)
Steering angle	30° right and left
Tilt up angle (when transom angle at 12°)	Stageless (68°)
Trim angle (when transom angle at 12°)	– 4° to 16°

## Tune Up

Spark plug gap	0.039 – 0.043 in (1.0 – 1.1 mm)	See page 107
Idle speed	750 ± 50 rpm	See shop manual
Valve clearance (cold)	Intake: 0.23 ± 0.02 mm Exhaust: 0.30 ± 0.02 mm	See shop manual
Other specifications	No other adjustment is needed	

Honda outboard motors are power rated in accordance with NMMA procedures and using the ICOMIA standard 28/23.



## Specifications

MODEL	BF140A					
Description code	BBUJ					
Type	LR	LD	XR	XD	XCR	XCD
Overall length	35.9 in (913 mm)					
Overall width	24.3 in (618 mm)					
Overall height	66.5 in (1,688 mm)		71.5 in (1,815 mm)			
Transom height (when transom angle at 12°)	20.0 in (508 mm)		25.0 in (635 mm)			
Dry mass [weight]*	487 lbs (221 kg)	494 lbs (224 kg)	494 lbs (224 kg)	500 lbs (227 kg)	500 lbs (227 kg)	507 lbs (230 kg)
Rated power	104.4 kW (140 HP)					
Full throttle range	5,000 – 6,000 rpm					
Engine type	4 stroke DOHC in-line 4-cylinder					
Displacement	143.6 cu-in (2,354 cm <sup>3</sup> )					
Spark plug gap	0.039 – 0.043 in (1.0 – 1.1 mm)					
Starter system	Electric starter					
Ignition system	Fully transistorized, battery ignition					
Lubrication system	Trochoid pump pressure lubrication					
Specified oil	Engine: API standard (SG, SH, SJ, SL) SAE/FC-W 10W-30 Gear case: API standard (GL-4) SAE 90 Hypoid gear oil					
Oil capacity	Engine: 6.9 US qt (6.5 L) without oil filter change 7.1 US qt (6.7 L) with oil filter change Gear case: 1.04 US qt (0.98 L)					

CARB star label	ULTRA · LOW EMISSION
D.C. output	12 V – 40 A
Cooling system	Water cooling with thermostat
Exhaust system	Water exhaust
Spark plugs	ZFR6K-11 (NGK) KJ20DR-M11 (DENSO)
Fuel pump	Low pressure side: mechanical type High pressure side: electromagnetic type
Fuel	Unleaded gasoline (86 pump octane or higher)
Gear change	Forward-Neutral-Reverse (dog type)
Steering angle	30° right and left
Tilt up angle (when transom angle at 12°)	Stageless (68°)
Trim angle (when transom angle at 12°)	– 4° to 16°

## Tune Up

Spark plug gap	0.039 – 0.043 in (1.0 – 1.1 mm)	See page 107
Idle speed	750 ± 50 rpm	See shop manual
Valve clearance (cold)	Intake: 0.23 ± 0.02 mm Exhaust: 0.30 ± 0.02 mm	See shop manual
Other specifications	No other adjustment is needed	

\* With propeller

Honda outboard motors are power rated in accordance with NMMA procedures and using the ICOMIA standard 28/23.



# TECHNICAL INFORMATION

## Specifications

MODEL	BF150D						
Description code	BBTJ						
Type	JR	LR	LD	XR	XD	XCR	XCD
Overall length	35.9 in (913 mm)						
Overall width	24.3 in (618 mm)						
Overall height	46.3 in (1,177 mm)	66.5 in (1,688 mm)	71.5 in (1,815 mm)				
Transom height (when transom angle at 12°)	20.0 in (508 mm)			25.0 in (635 mm)			
Dry mass [weight]*	485 lbs (220 kg)	487 lbs (221 kg)	494 lbs (224 kg)	494 lbs (224 kg)	500 lbs (227 kg)	500 lbs (227 kg)	507 lbs (230 kg)
Rated power	111.9 kW (150 HP)						
Full throttle range	5,000 – 6,000 rpm						
Engine type	4 stroke DOHC VTEC in-line 4-cylinder						
Displacement	143.6 cu-in (2,354 cm <sup>3</sup> )						
Spark plug gap	0.039 – 0.043 in (1.0 – 1.1 mm)						
Starter system	Electric starter						
Ignition system	Fully transistorized, battery ignition						
Lubrication system	Trochoid pump pressure lubrication						
Specified oil	Engine: API standard (SG, SH, SJ, SL) SAE/FC-W 10W-30 Gear case: API standard (GL-4) SAE 90 Hypoid gear oil						
Oil capacity	Engine: 6.9 US qt (6.5 L) without oil filter change 7.1 US qt (6.7 L) with oil filter change Gear case: 1.04 US qt (0.98 L)						

\* EXCEPT JR : With propeller

JR : Without battery cable, gear case and propeller

Honda outboard motors are power rated in accordance with NMMA procedures and using the ICOMIA standard 28/23.

CARB star label	ULTRA · LOW EMISSION
D.C. output	12 V – 40 A
Cooling system	Water cooling with thermostat
Exhaust system	Water exhaust
Spark plugs	ZFR6K-11 (NGK) KJ20DR-M11 (DENSO)
Fuel pump	Low pressure side: mechanical type High pressure side: electromagnetic type
Fuel	Unleaded gasoline (86 pump octane or higher)
Gear change	Forward-Neutral-Reverse (dog type)
Steering angle	30° right and left
Tilt up angle (when transom angle at 12°)	Stageless (68°)
Trim angle (when transom angle at 12°)	– 4° to 16°

## Tune Up

Spark plug gap	0.039 – 0.043 in (1.0 – 1.1 mm)	See page 107
Idle speed	750 ± 50 rpm	See shop manual
Valve clearance (cold)	Intake: 0.23 ± 0.02 mm Exhaust: 0.30 ± 0.02 mm	See shop manual
Other specifications	No other adjustment is needed	



## CONSUMER INFORMATION

### Dealer Locator Information

To find an authorized Honda  
Servicing Dealer

For USA:

Visit our website:

<http://marine.honda.com> and click on  
Find a Dealer

For Canada:

Call 1-888-946-6329 or visit our  
website:

English

<http://marine.honda.ca/dealerlocator>

French

[http://marine.honda.ca/  
trouver-concessionnaire](http://marine.honda.ca/trouver-concessionnaire)

### Honda Publications

These publications will give you  
additional information for  
maintaining and repairing your  
outboard motor.

### *Shop Manual*

This manual covers complete  
maintenance and overhaul procedures.  
It is intended to be used by a skilled  
technician.

For USA:

Shop manuals are available through  
your Honda Marine dealer or visit  
[http://marine.honda.com /Service &  
Support](http://marine.honda.com/Service%20Support) and click on Shop Manuals

For Canada:

Contact your dealer for information  
on the Shop Manual.

### *Parts Catalog*

For USA:

This manual provides complete,  
illustrated parts lists.  
The catalog is available through your  
Honda Marine dealer or visit  
[http://marine.honda.com/Parts &  
Accessories](http://marine.honda.com/Parts%20Accessories) and click on Look Up  
Parts

For Canada:

Contact your dealer for information  
on Parts.

### *Accessory Catalog*

Your authorized Honda Marine dealer  
offers a wide selection of accessories  
(optional equipment, oils, and  
lubricants) to enhance your boating  
experience.

For USA:

Visit <http://marine.honda.com> and  
click on PARTS & ACCESSORIES  
to see the entire catalog of  
accessories.

For Canada:

Check with your dealer or visit  
[www.honda.ca](http://www.honda.ca) and select the Parts  
and Accessories tab under the Honda  
Marine segment to view the range of  
accessories available.



## CONSUMER INFORMATION

---

### Customer Service Information

#### *Contacting Honda*

Your Owner's Manual was written to cover most of the questions you might ask about your Honda. Any questions not answered in the Owner's Manual can be answered by your Honda dealer. If your dealer doesn't have an immediate answer, they should be able to get it for you.

If you have a difference of opinion with your dealer, please remember that each dealership is independently owned and operated. That's why it's important to work to resolve any differences at the dealership level. If the service personnel are unable to assist you, please discuss your concerns with the dealer management such as the Service Manager or the dealership's owner.

If you need to contact Honda regarding your experiences with your Honda product or with your dealer, please contact the Honda office in your region:

#### **American Honda Motor Co., Inc.**

Marine Division  
Customer Relations Office  
4900 Marconi Drive  
Alpharetta, GA 30005-8847  
Telephone (770) 497 – 6400  
M-F 9:00 am-7:30 pm (Eastern Time Zone)

In Canada:

#### **Honda Canada Inc.**

Customer Relations Department  
180 Honda Boulevard  
Markham, Ontario L6C 0H9  
Tel: 1-888-946-6329 (Toll free)  
Fax: 1-877-939-0909 (Toll free)

Please include the following information in your communication:

- Your name, address and telephone number (complete with area code)
- Model and complete serial number
- Date of purchase
- Name and location of selling dealer
- Name and location of servicing dealer (if different)
- A detailed description of your concerns

We will likely ask your Honda dealer to respond, or possibly acknowledge your comments directly.

#### ***Warranty Coverage***

Your new Honda is covered by the following warranties:

- Distributor's Limited Warranty
- Emission Control System Warranty

Please read the warranty statements contained in this manual. There are responsibilities, restrictions, and exclusions that apply to these warranties.



To obtain warranty service you must take your Honda outboard motor, together with proof of original retail purchase date, at your expense, to a Honda engine dealer or distributor authorized to sell that product in the United States, Puerto Rico, the U.S. Virgin Islands or Canada.

It is important to realize that your warranty applies to defects in material or workmanship of your Honda. Your warranty coverage does not apply to normal wear or deterioration associated with using your Honda outboard motor.

Your warranty coverage will not be voided if you choose to perform your own maintenance. However, you should have the proper tools and service information and be mechanically qualified. Failures that occur due to modifications, improper maintenance, or service are not covered.

### *Warranty Service*

Please remember that recommended maintenance interval servicing is not included in your warranty coverage. Additionally, your warranty does not apply to the normal wear of items (such as spark plug(s), water pump, etc.).

As the owner of a Honda product, your servicing dealer may ask you to authorize an inspection. If the problem is covered under warranty, your dealer will perform any warranty repairs for you at no cost. However, you may be responsible for additional non-warranty charges.

If you have questions about warranty coverage or the nature of the repair, it is best to talk to the service manager of your Honda dealer.

Sometimes, in spite of the best intentions of all concerned, a misunderstanding may occur. If you aren't satisfied with your dealer's handling of the situation, we suggest you discuss your problem with the appropriate member of the dealership's management team. If the problem has already been reviewed with the appropriate manager of the Service, Parts, or Sales department, contact the owner of the dealership or their designated representative.



# CONSUMER INFORMATION

---

## Warranty Statements

The American Honda Distributor's Limited Warranty applies to outboards purchased in the United States, Puerto Rico, or the U.S. Virgin Islands. The Honda Canada Distributor's Warranty applies to outboards purchased in Canada. The product warranty is only valid in the country where the product was purchased.

## United States, Puerto Rico and U.S. Virgin Islands

### Distributor's Limited Warranty

This warranty is limited to Honda Outboard Motors and related original equipment distributed by American Honda Motor Co., Inc., Power Sports and Products Division, 4900 Marconi Drive, Alpharetta, Georgia 30005-8847.

Products Covered by Warranty:	Length of Warranty: (from date of original retail purchase)		
	NON-COMMERCIAL/ NON-RENTAL	COMMERCIAL/RENTAL	STATE/LOCAL/FEDERAL GOVERNMENT
All models purchased on or after Jan. 1, 2016 <sup>(2)</sup>	60 months	24 months	36 months
All models purchased between July 1, 2008 and December 31, 2015 <sup>(2)</sup>	60 months	12 months	24 months
All models purchased on or before June 30, 2008 <sup>(1)(2)</sup>	36 months	12 months	24 months
Related original equipment items: BF5 through BF20 models: Portable fuel tank and original propeller. All models: Primer bulb/fuel line assembly and tiller handle.	The same duration as the outboard with which they were purchased. <sup>(3)</sup>		

(1) Models purchased prior to July 1, 2008 (unless previously purchased with True-5 warranty from a participating dealer).

(2) 40, 65, & 105 Jet models: Jet pump assembly is a dealer installed option. Jet pump warranty is provided by Specialty Manufacturing Co. (Outboard Jets).

(3) Portable fuel tanks: 24 months or the same duration as the outboard they were purchased with, whichever is longer.



### **To Qualify for This Warranty:**

The Honda Outboard Motor must be purchased from American Honda or a dealer authorized by American Honda to sell Honda Outboard Motors in the United States, Puerto Rico, or the U.S. Virgin Islands. This limited warranty applies to the first retail purchaser and each subsequent owner during the applicable warranty time period.

### **What American Honda Will Repair or Replace Under Warranty:**

American Honda will repair or replace, at its option, any part that is proven to be defective in material or workmanship under normal use during the applicable warranty time period. Warranty repairs and replacements will be made without charge for parts or labor. Anything replaced under warranty becomes the property of American Honda Motor Co., Inc.

All parts replaced under warranty will be considered as part of the original product and any warranty on those parts will expire coincidentally with the original product warranty.

### **To Obtain Warranty Service:**

You must, at your expense, take your Honda Outboard Motor and proof of the original purchase date to any dealer who is authorized to service Honda Outboard Motors in the United States, Puerto Rico, or the U.S. Virgin Islands, during the dealer's normal business hours. If you are unable to obtain warranty service, or are dissatisfied with the warranty service you receive, take the following steps: First, contact the owner of the dealership involved; normally this should resolve the problem. However, if you should require further assistance, write or call the Honda Marine Customer Relations Department of American Honda Motor Co., Inc. Please see *Contacting Honda* on page 150.



## CONSUMER INFORMATION

---

### **Exclusions:**

This warranty does not extend to the following:

- Conditions caused by lack of routine maintenance or improper storage (as outlined in the owner's manual)
- Conditions caused by the use of propeller (s) that do not allow the outboard motor to run in its recommended full throttle rpm range
- Operation inconsistent with the recommended operation/duty cycle (as outlined in the owner's manual)
- Parts affected or damaged by an abuse, submersion and/or collision
- Fuel contamination and water entering the engine through the fuel intake, air intake, or exhaust system
- Operation with fuels, oils, additives and lubricants which are not suitable for use in the product
- Use in an application for which the outboard motor was not designed, such as racing or competitive use or any other misuse or neglect
- Normal wear and tear
- Incorporation of unsuitable attachments or parts
- The unauthorized alteration, improper installation and/or rigging, or any causes other than defects in material or workmanship
- Corrosion to steering system or electrical components, corrosion due to electrolysis, water born foreign chemicals, improper service or corrosion caused by damage or abuse

- Reimbursement for towing charges, in and out of water charges, or technician travel time
- Growth of marine organisms on motor surfaces, external or internal
- Any product that has ever been declared a total loss or sold for salvage by a financial institution or insurer, or that has been issued a "salvage" or similar title under any state's law.

### **Disclaimer of consequential damage and limitation of implied warranties:**

American Honda disclaims any responsibility for loss of time or use of the outboard, revenue, or the equipment in which the outboard is installed, transportation, commercial loss, or any other incidental or consequential damage. Any implied warranties are limited to the duration of this written limited warranty.

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



## CONSUMER INFORMATION

### Accessories and Replacement Parts

This warranty is limited to Honda Marine parts, accessories and apparel when distributed by American Honda Motor Co., Inc., 4900 Marconi Drive, Alpharetta, Georgia 30005-8847.

Products Covered by Warranty:	Length of Warranty: (from date of original retail purchase)		
	NON-COMMERCIAL	COMMERCIAL/RENTAL	STATE/LOCAL/FEDERAL GOVERNMENT
Accessories other than noted below	12 months	3 months	3 months
Emission related accessories: Portable fuel tanks, fuel line assemblies, and water/fuel separators	24 months	24 months	24 months
Replacement Parts	6 months	3 months	3 months

### To Qualify for This Warranty:

1. The accessories or replacement parts must be purchased from American Honda or a dealer, distributor, or distributor's dealer authorized by American Honda to sell those products in the United States, Puerto Rico, and the U.S. Virgin Islands. Parts and Accessories must be purchased for installation on original Honda equipment or engines to be eligible for warranty coverage. Installing Parts and Accessories on non-Honda products or engines voids this warranty.
2. You must be the first retail purchaser. This warranty is not transferable to subsequent owners.

### What American Honda Will Repair or Replace Under Warranty:

American Honda will repair or replace, at its option, any

marine product accessories or replacement parts that are proven to be defective in material or workmanship under normal use during the applicable warranty time period. Anything replaced under warranty becomes the property of American Honda Motor Co., Inc. All parts replaced under warranty will be considered as part of the original product and any warranty on those parts will expire coincidentally with the original product warranty.

Accessories and replacement parts, installed by a dealer who is authorized by American Honda to sell them, will be repaired or replaced under warranty without charge for parts or labor. If installed by anyone else, accessories and replacement parts will be repaired or replaced under warranty without charge for parts, but any labor charges will be the responsibility of the purchaser.



## CONSUMER INFORMATION

---

### **To Obtain Warranty Service:**

You must, at your expense, take the Honda Outboard Motor product accessory or replacement part or the outboard motor or boat on which the accessory or replacement part is installed, and proof of purchase to any Honda Marine authorized service facility or dealer in the United States, Puerto Rico, or the U.S. Virgin Islands, during normal business hours.

### **Exclusions:**

This warranty does not extend to accessories or parts affected or damaged by collision, normal wear, use in an application for which the product was not designed or any other misuse, neglect, incorporation or use of unsuitable attachments or parts, unauthorized alteration, improper installation, or any causes other than defects in material or workmanship of the product.

Installing parts and accessories on non-Honda products or engines voids this warranty.

### **Disclaimer of consequential damage and limitation of implied warranties:**

American Honda disclaims any responsibility for loss of time or use of the outboard motor, or the boat on which the product is installed, transportation, commercial loss, or any other incidental or consequential damage. Any implied warranties are limited to the duration of this

written warranty. Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.



### **Emission Control System Warranty**

Your new Honda outboard engine complies with both the U.S. EPA and State of California emission regulations. American Honda provides the same emission warranty coverage for outboard engines sold in all 50 states. In all areas of the United States your outboard engine must be designed, built, and equipped to meet the U.S. EPA and California Air Resources Board emission standard for spark ignited marine engines.

### **CALIFORNIA EMISSIONS CONTROL SYSTEM WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS**

The California Air Resources Board (CARB) and American Honda Motor Co., Inc. are pleased to explain the emission control system warranty on your 2024 Honda outboard engine. In California, new outboard engines must be designed, built, and equipped to meet the state's stringent anti-smog standards.

American Honda Motor Co., Inc. must warrant the emission control system on your outboard engine for the periods of time listed below provided there has been no abuse, neglect, or improper maintenance of your outboard engine.

Your emission control system may include parts such as the carburetor or fuel injection system, the ignition system, catalytic converter, canisters, clamps, filters, fuel caps, fuel lines, fuel tanks, valves, and vapor hoses. Also included may be hoses, belts, connectors, and other emission-related assemblies.

Where a warrantable condition exists, American Honda Motor Co., Inc. will repair your outboard engine at no cost to you including diagnosis, parts, and labor.



## CONSUMER INFORMATION

---

### MANUFACTURER'S WARRANTY COVERAGE:

Select emission control parts from model year 2010 and later outboard engines are warranted for five years or 250 hours of use, whichever first occurs; or the length of the *Honda Marine Distributor's Limited Warranty*, whichever is longer. The evaporative emission control system from model year 2010 and later outboard engines are warranted for two years with no limit on hours of use, or the length of the *Honda Marine Distributor's Limited Warranty*, whichever is longer, from the date of delivery to the retail purchaser. However, warranty coverage based on the hourly period is only permitted for engines equipped with hour meters as defined in § 2441(a)(13)\* or their equivalent. If any emission-related part on your engine is defective under warranty, the part will be repaired or replaced by American Honda Motor Co., Inc. See the *Emission Control System Warranty Parts* table on page 161 for parts description.

\* California Code of Regulations.

### OWNER'S WARRANTY RESPONSIBILITIES:

As the outboard engine owner, you are responsible for the performance of the required maintenance listed in your owner's manual. American Honda Motor Co., Inc. recommends that you retain all receipts covering maintenance on your outboard engine, but American Honda Motor Co., Inc. cannot deny warranty solely for the lack of receipts or your failure to ensure the performance of all scheduled maintenance.

As the outboard engine owner, you should, however, be aware that American Honda Motor Co., Inc. may deny you warranty coverage if your outboard engine or a part has failed due to abuse, neglect, improper maintenance, or unapproved modifications.

You are responsible for presenting your outboard engine to a Honda Marine dealer as soon as a problem exists. The warranty repairs will be completed in a reasonable amount of time, not to exceed 30 days.

If you have any questions regarding your warranty rights and responsibilities, you should contact

American Honda Motor Co., Inc.  
Marine Division Customer Relations Office  
4900 Marconi Drive  
Alpharetta, Georgia 30005-8847  
Telephone: (770) 497-6400



### WARRANTY COVERAGE:

See *Manufacturer's Warranty Coverage* above for warranty coverage terms. This warranty is transferred to each subsequent purchaser for the duration of the warranty period.

Warranty repairs will be made without charge for diagnosis, parts, and labor. All defective parts replaced under this warranty become the property of American Honda Motor Co., Inc. A list of warranty parts is on page 161. Normal maintenance items, such as spark plugs and filters, that are on the warranted parts list are warranted up to their required replacement interval only.

American Honda Motor Co., Inc. is also liable for damages to other engine components caused by a failure of any warranted part during the warranty period.

Only Honda approved replacement parts will be used in the performance of any warranty repairs, and they will be provided without charge to the owner. You may use any replacement part as defined in § 1900(b)(20)\* in the performance of any maintenance or repairs. Honda cannot deny coverage under the emission warranty solely for use of non-Honda replacement parts or service performed at a location other than an authorized Honda dealership; however, use of a part that is not functionally identical to the original equipment part in any respect that may in any way affect emissions (including durability) could result in denial of coverage. If a non-Honda replacement part is used in the repair or maintenance of your engine, and an authorized Honda Marine dealer determines it causes the failure of a warranted part, your warranty claim may be denied. If the part in question is not related to the reason that your engine requires repair, your claim will not be denied.

\* California Code of Regulations



## CONSUMER INFORMATION

---

### TO OBTAIN WARRANTY SERVICE:

You must take your Honda outboard engine, along with your sales registration card or other proof of original purchase date, at your expense, to any Honda Marine dealer that is authorized by American Honda Motor Co., Inc. to sell and service that Honda marine product during its normal business hours. Claims for repair or adjustment found to be caused solely by defects in material or workmanship will not be denied because the engine was not properly maintained and used.

If you are unable to obtain warranty service, or are dissatisfied with the warranty service you received, contact the owner of the dealership involved. Normally this should resolve your problem. However, if you require further assistance, write or call the Honda Marine Customer Relations Office of American Honda Motor Co., Inc.

### EXCLUSIONS:

Failures other than those resulting from defects in material or workmanship are not covered by this warranty. This warranty does not extend to emission control systems or parts which are affected or damaged by owner abuse, neglect, improper maintenance, misuse, misfueling, improper storage, and/or collision, the incorporation of, or use of, unsuitable attachments, or the unauthorized alteration of any part.

This warranty does not cover replacement of expendable maintenance items made in connection with required maintenance service after the items first scheduled replacement as listed in the maintenance section of the product owner's manual, such as: spark plugs and filters.

### DISCLAIMER OF CONSEQUENTIAL DAMAGE AND LIMITATION OF IMPLIED WARRANTIES:

American Honda Motor Co., Inc. disclaims any responsibility for incidental or consequential damages such as loss of time or the use of outboard engine, or any commercial loss due to the failure of the equipment; and any implied warranties are limited to the duration of this written warranty. This warranty is applicable only where the California or U.S. EPA emission control system warranty regulation is in effect.



## CONSUMER INFORMATION

### EMISSION CONTROL SYSTEM WARRANTY PARTS:

SYSTEMS COVERED BY THIS WARRANTY:	PARTS DESCRIPTION:	LENGTH OF WARRANTY:
Evaporative	Portable fuel tank, Outboard internal fuel tank, Fuel cap, Fuel hoses, Primer bulb, Fuel hose joint, Vapor separator, and Carbon canister, All other parts not listed that may affect the evaporative emissions control system	Two years, no limit on hours of use; or the length of the <i>Honda Distributor's Limited Warranty</i> , whichever is longer.
Fuel Metering	Carburetor assembly, Throttle body, Fuel injector, Fuel pump, Fuel pressure regulator, Throttle position sensor, Intake air temperature sensor, Engine temperature sensor, Manifold absolute pressure sensor, Idle air control valve, Barometric pressure sensor, Fuel line solenoid valve, Intake manifold, Intake valves, and Oxygen sensor or Air fuel ratio sensor	Five years or 250 hours of use, whichever first occurs; or the length of the <i>Honda Distributor's Limited Warranty</i> , whichever is longer.
Air Induction	Air intake duct, Intake manifold tuning valve (Intake air bypass control valve)	
Ignition	Flywheel magneto, Ignition pulse generator, Ignition coil assembly, Ignition control module, Engine control module, Crankshaft position sensor, Spark plug cap, Spark plug*, Knock sensor, and Camshaft position sensor	
Lubrication System	Oil pump and internal parts	
Crankcase Emission Control	Crankcase breather tube, Positive crankcase ventilation valve, Oil filler cap	
Exhaust	Exhaust manifold and Exhaust valves	
Valve Control System	Rocker arm oil control valve	
Miscellaneous Parts	Tubing, fittings, seals, gaskets, and clamps associated with these listed systems.	
* Covered up to the first required replacement only. See the <i>Maintenance Schedule</i> on page 94 and 95.		



## CONSUMER INFORMATION

### Canada

#### Distributor's Warranty

HONDA CANADA INC., for and on behalf of Honda Motor Co. Ltd., Tokyo, Japan, gives the following written warranty on each new marine product manufactured by Honda Motor Co. Ltd., Japan, distributed in Canada by Honda Canada Inc. and sold by authorized Honda Marine dealers.

Whenever used herein, the word "Honda" refers to Honda Canada Inc. and/or Honda Motor Co. Ltd., as appropriate from the context.

HONDA WARRANTS THAT each new Honda Marine product will be free, under normal use and maintenance, from any defects in material or workmanship for the relevant warranty period set forth below. If any defects should be found in a Honda Marine product within the relevant warranty period, necessary repairs and replacements with a new part or the Honda equivalent shall be made at no cost to the consumer for parts and labour, when Honda acknowledges that such defects are attributable to faulty material or workmanship at the time of manufacture.

#### WARRANTY PERIOD RETAILED ON OR AFTER APRIL 1, 2005:

	Non-commercial use	Commercial use
All Honda Outboard Models	36 Months	12 Months

#### THIS WARRANTY COVERS

- a) Any Honda Marine product purchased in Canada from an authorized Honda dealer which has been registered at the time of purchase on a form provided by Honda, which has had set-up and pre-delivery service performed by an authorized Honda dealer and which is normally operated in Canada;
- b) Any factory installed part (except normal maintenance parts referred to in "THIS WARRANTY DOES NOT COVER"); and
- c) Any marine product on which required maintenance services have been performed as prescribed in the Owner's Manual.



### THIS WARRANTY DOES NOT COVER

- a) Any repairs required as a result of collision, accident, striking any object, misuse or lack of required maintenance;
- b) Any repairs required as a result of any attachments, parts or devices installed by or repairs done by a party other than an authorized Honda dealer;
- c) Any outboard that has been operated out of water, (Run Dry) damaging the water pump and or engine components due to insufficient cooling water.
- d) Any marine products modified, altered, disassembled or remodelled;
- e) Normal maintenance services, including tightening of nuts, bolts and fittings and engine tune-up and the replacement of parts made in connection with normal maintenance services including filters, spark plugs and wires, fuses, belts, lubricants and other expendables susceptible to natural wear;
- f) Outboard propeller or shear pin.
- g) All accessories or attachments.

### THE OWNER'S OBLIGATION

In order to maintain the validity of this DISTRIBUTORS WARRANTY, the required maintenance services as set forth in the Owner's Manual must be performed at the proper intervals and detailed receipts and records retained as proof.

### TO OBTAIN WARRANTY SERVICE

You must take your Honda Marine product, at your expense, during normal service hours, to any authorized Honda Marine dealership. If you are unable to obtain or are dissatisfied with the warranty service you receive, first contact the owner of the dealership involved; this should resolve the problem. If you require further assistance, contact Honda Canada's Customer Relations Department at:

HONDA CANADA INC.  
Customer Relations Office  
180 Honda Boulevard  
Markham, Ontario L6C 0H9

TELEPHONE: 1-888-946-6329 TOLL FREE  
FAX : 1-877-939-0909 TOLL FREE



## CONSUMER INFORMATION

---

### REPLACEMENT PARTS AND ACCESSORY WARRANTY

New genuine Honda replacement parts or accessories sold to a consumer or installed by an authorized Honda Marine dealer which are not covered by the DISTRIBUTORS WARRANTY are warranted for a period of one year from date of purchase, provided, however, that this Replacement Parts and Accessory Warranty does not apply to any replacement parts modified, used with, or installed on a marine product for which the replacement parts were not intended. Electrical components that are not installed by the dealer (sold over the counter) are not covered by warranty.

### ENTIRE WRITTEN WARRANTY

This DISTRIBUTORS WARRANTY and the REPLACEMENT PARTS AND ACCESSORY WARRANTY are the only and the entire written warranties given by Honda for Marine engines. No dealer or his agent or employee is authorized to extend or enlarge on these warranties on behalf of Honda by any written or verbal statement or advertisement.

### DISCLAIMER

To the extent the law permits, Honda disclaims any responsibility for loss of time or use of the product, transportation or towing costs or any other indirect, incidental or consequential damage, inconvenience or commercial loss.

### NOTICE TO CONSUMER

The provisions contained in these written warranties are not intended to limit, modify, take away from, disclaim or exclude any warranties set forth in or the operation of The Consumer Products Warranties Act, 1977 (Saskatchewan), The Consumer Product Warranty and Liability Act (New Brunswick), The Consumer Protection Act (Quebec), or any other similar provincial or federal legislation.



# INDEX

Alternator (ACG) Indicator .....	54	Electric Starter Will Not Operate .....	126, 131
Anodes .....	58	Emergency Stop Switch Clip and Emergency Stop Switch .....	
Replacement .....	115	Flush-Mount Type .....	37
ARE YOU READY TO GET UNDERWAY? .....	59	Side-Mount Type .....	27, 34
		Top-Mount Type .....	40
Battery .....	141	Emission Control System Information .....	141
Will Not Charge .....	131	Emission Control System Warranty .....	157
BEFORE OPERATION .....	59	Engine .....	
BREAK-IN PROCEDURE .....	61	Cover .....	
		Latch .....	48
CLEANING AND FLUSHING .....	118	REMOVAL AND INSTALLATION .....	97
Common Controls .....	44	Oil .....	
COMPONENT AND CONTROL LOCATIONS .....	13	Change .....	100
CONSUMER INFORMATION .....	149	Filter Change .....	102
CONTROL AND FEATURE IDENTIFICATION .....		Level Check .....	99
CODES .....	11	Recommendations .....	103
CONTROLS .....	24	OVERHEATS .....	130
CONTROLS AND FEATURES .....	11	WILL NOT START .....	127
Cooling System Indicator .....	57		
CRUISING .....	82		
Customer Service Information .....	150		
		Fast Idle Button .....	
Dealer Locator Information .....	149	Flush-Mount Type .....	39
Distributor's Limited Warranty .....	152	Top-Mount Type .....	43
Distributor's Warranty .....	162	Fast Idle Lever .....	36



# INDEX

---

Fuel		Ignition Switch	
Filter Inspection and Replacement .....	111	Flush-Mount Type .....	36
PRIMING .....	62	Side-Mount Type .....	33
Priming Bulb .....	58	Top-Mount Type .....	40
RECOMMENDATIONS .....	110	IMPORTANT SAFETY INFORMATION .....	7
Fuse Replacement .....	131	INDICATORS .....	53
FUSES .....	131	INFREQUENT OR OCCASIONAL USE .....	62
		INSTRUMENTS .....	49
GEARSHIFT AND THROTTLE OPERATION .....	79	IS YOUR OUTBOARD MOTOR	
Flush-Mount Type .....	79	READY TO GO? .....	59
Side-Mount Type .....	79		
Top-Mount Type .....	79	Lubrication Points .....	104
Gearshift/Throttle Control Lever			
Flush-Mount Type .....	28	MAINTENANCE SAFETY .....	92
Side-Mount Type .....	34	MAINTENANCE SCHEDULE .....	94
Top-Mount Type .....	29, 41	Malfunction Indicator .....	55
		MANUAL RELIEF VALVE .....	46, 97
HARD STARTING OR STALLS AFTER		MOORING, BEACHING, LAUNCHING .....	89
STARTING .....	129	MULTIPLE OUTBOARD MOTORS .....	90
HOISTING THE OUTBOARD MOTOR .....	123		
Honda Publications .....	149	NMEA 2000® Interface Coupler .....	50
Honda Smart Key .....	25		
HOW TO DETERMINE WHICH DIRECTION			
THE PROPELLER SHAFT ROTATES .....	12		



Oil Pressure Indicator .....	55	Spark Plug Service .....	106
OIL PRESSURE INDICATOR GOES OFF AND		Specifications .....	146
ENGINE SPEED IS LIMITED .....	134	Star Label .....	144
Operating Hour Notification System .....	50	STARTING THE ENGINE .....	63
OPERATION .....	61	Flush-Mount Type .....	69
OTHER FEATURES .....	57	Side-Mount Type .....	66
OUTBOARD MOTOR SAFETY .....	7	Top-Mount Type .....	71
Overheat Indicator .....	56	STEERING .....	82
OVERHEAT INDICATOR COMES ON AND		STOPPING THE ENGINE .....	74
ENGINE SPEED IS LIMITED .....	135	Emergency Engine Stopping .....	74
		Normal Engine Stopping .....	75, 77
Power Tilt Switch .....	46	STORAGE .....	120
Power Trim/Tilt Switch .....	44	Engine oil .....	122
Propeller Replacement .....	115	Fuel .....	120
		STORAGE PRECAUTIONS .....	123
REFUELING .....	109	SUBMERGED OUTBOARD MOTOR .....	137
REMOVAL FROM STORAGE .....	124		
Rev Limiter .....	57		
SAFE OPERATING PRECAUTIONS .....	61		
SAFETY LABEL LOCATION .....	9		
Serial Number Locations .....	140		
SERVICING YOUR OUTBOARD MOTOR .....	91		
SHALLOW WATER OPERATION .....	88		
SPARE EMERGENCY STOP SWITCH CLIP			
(optional equipment) .....	93		



# INDEX

---

Tachometer (optional equipment) .....	49
TAKING CARE OF UNEXPECTED PROBLEMS ...	126
TECHNICAL INFORMATION .....	140
THE IMPORTANCE OF MAINTENANCE .....	91
Tilt Lock Lever .....	47
TOOL KIT and OWNER'S MANUAL .....	93
TRANSPORTING .....	125
WITH OUTBOARD MOTOR INSTALLED	
ON BOAT .....	125
WITH OUTBOARD MOTOR REMOVED	
FROM BOAT .....	125
Trim Meter (optional equipment) .....	49
Trim Tab .....	49
TRIM TAB ADJUSTMENT .....	96
TRL (Trolling) Control Switch .....	47
Trolling Speed Control .....	85
Warranty Statements .....	152
Water Separator Buzzer .....	57
WATER SEPARATOR BUZZER SOUNDS .....	137







# HONDA

31ZVT604  
00X31-ZVT-6040



英 (AB) 0000.00AA.AA  
Printed in Japan