

HONDA


Power

Equipment

Owner's Manual

SNOWBLOWER

HS928 • HS1332

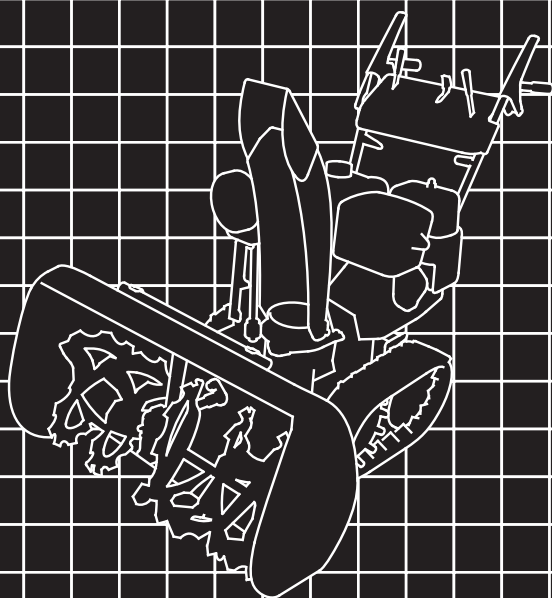



WARNING:



The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

Keep this owner's manual handy, so you can refer to it any time. This owner's manual is considered a permanent part of the snowblower and should remain with the snowblower if resold.

The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd. reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation whatever.

INTRODUCTION

Congratulations on your selection of a Honda snowblower. We are certain you will be pleased with your purchase of one of the finest snowblowers on the market.

We want to help you get the best results from your new snowblower and to operate it safely. This manual contains the information on how to do that; please read it carefully.

As you read this manual, you will find information preceded by a **NOTICE** symbol. That information is intended to help you avoid damage to your snowblower, other property, or the environment.

We suggest you read the warranty policy to fully understand its coverage and your responsibilities of ownership. The warranty policy is a separate document that should have been given to you by your dealer.

When your snowblower needs scheduled maintenance, keep in mind that your Honda servicing dealer is specially trained in servicing Honda snowblowers. Your Honda servicing dealer is dedicated to your satisfaction and will be pleased to answer your questions and concerns.

Best Wishes,
Honda Motor Co., Ltd.

INTRODUCTION


A FEW WORDS ABOUT SAFETY

Your safety and the safety of others are very important. And using this snowblower safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all the hazards associated with operating or maintaining a snowblower. You must use your own good judgment.

You will find important safety information in a variety of forms, including:

- **Safety Labels** — on the snowblower.
- **Safety Messages** — preceded by a safety alert symbol  and one of three signal words, DANGER, WARNING, or CAUTION.

These signal words mean:

 **DANGER**

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

 **WARNING**

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

 **CAUTION**

You **CAN** be **HURT** if you don't follow instructions.

- **Safety Headings** — such as *IMPORTANT SAFETY INFORMATION*.
- **Safety Section** — such as *SNOWBLOWER SAFETY*.
- **Instructions** — how to use this snowblower correctly and safely.

This entire book is filled with important safety information — please read it carefully.

CONTENTS

SNOWBLOWER SAFETY	5
IMPORTANT SAFETY INFORMATION	5
SAFETY LABEL LOCATIONS	8
CONTROLS & FEATURES.....	9
COMPONENT & CONTROL LOCATIONS	9
CONTROLS.....	11
Fuel Valve Lever	11
Engine Switch.....	11
Fuel Gauge.....	11
Chute Crank	12
Starter Grip	12
Throttle Lever	12
Choke Knob	13
Shift Lever.....	13
Discharge Deflector Lever	14
Foot Pedal	14
Drive Clutch Lever and Auger Clutch Lever.....	15
Transmission Release Lever	16
FEATURES.....	17
Work Light	17
Snow Clearing Bar	17
BEFORE OPERATION	18
ARE YOU READY TO GET STARTED?	18
IS YOUR SNOWBLOWER READY TO GO?	18
Check the General Condition of the Snowblower.....	19
Check the Engine.....	19
CHECK YOUR WORK AREA	20
OPERATION	21
SNOWBLOWING PRECAUTIONS	21
STARTING THE ENGINE	21
STOPPING THE ENGINE	26
CLEARING SNOW.....	29
SNOW-CLEARING TIPS.....	32
REMOVING OBSTRUCTIONS	33
SERVICING YOUR SNOWBLOWER.....	34
THE IMPORTANCE OF MAINTENANCE	34
MAINTENANCE SAFETY.....	35
TOOL KIT	36
MAINTENANCE SCHEDULE	37
REFUELING	39
FUEL RECOMMENDATIONS	40

CONTENTS

SERVICING YOUR SNOWBLOWER (continued)

ENGINE OIL LEVEL CHECK	41
ENGINE OIL CHANGE	42
ENGINE OIL RECOMMENDATIONS	43
HYDROSTATIC TRANSMISSION FLUID	44
SPARK PLUG SERVICE	46
TRACK ADJUSTMENT	48
TIRE INSPECTION	49
AUGER AND BLOWER INSPECTION	49
LOCK BOLT REPLACEMENT PROCEDURE	50
SKID SHOES AND SCRAPER	51

STORAGE53

STORAGE PREPARATION	53
Cleaning	53
Fuel	54
Engine Oil	57
Tires	57
STORAGE PRECAUTIONS	58
REMOVAL FROM STORAGE	58

TRANSPORTING59

BEFORE LOADING	59
LOADING	60

TAKING CARE OF UNEXPECTED PROBLEMS62

ENGINE PROBLEMS	62
DRIVER PROBLEMS	64
SNOWBLOWER PROBLEMS	65

TECHNICAL INFORMATION67

Serial Number Locations	67
Carburetor Modification for High Altitude Operation	68
Emission Control System Information	69
Air Index	71
Specifications	72

CONSUMER INFORMATION74

Honda PUBLICATIONS	74
Customer Service Information	75

QUICK REFERENCE INFORMATIONInside back cover

SNOWBLOWER SAFETY

IMPORTANT SAFETY INFORMATION

Honda snowblowers are designed to clear snow from driveways and walkways. Other uses can result in injury to the operator or damage to the snowblower and other property.

Most injuries or property damage with snowblowers can be prevented if you follow all instructions in this manual and on the snowblower. The most common hazards, are discussed below, along with the best way to protect yourself and others.

Avoid Rotating Impeller and Auger

Hand contact with the rotating impeller inside the discharge chute is the most common cause of injury associated with snowblowers. The snowblower auger can also cause serious injury. Keep away from the impeller and auger whenever the engine is running. If you need to work around the snowblower to clear snow for any reason, always shut off the engine. If the snow discharge chute becomes clogged, stop the engine and disconnect the spark plug cap. Use the snow clearing bar or a wooden stick to remove the obstructions. Never put your hand into the snow discharge chute while the engine is running; serious personal injury could result.

Clear Operation Area

The snowblower can throw rocks and other objects with enough force to cause serious injury. Before operating the snowblower, carefully inspect the area and remove any visible stones, sticks, bones, nails, pieces of wire, and other loose objects. Never use the snowblower to clear snow from a gravel road or driveway, as rocks may be picked up and ejected. They may cause injury to bystanders.

SNOWBLOWER SAFETY

Keep Shields in Place

Guards and shields are designed to protect you from being hit by thrown objects and to keep you from touching hot engine parts and moving components. For your safety and the safety of others, keep all shields in place when the engine is running.

Adjust the snow discharge chute to avoid hitting the operator, bystanders, windows, and other objects with ejected snow. Stay clear of the snow discharge chute while the engine is running.

Children and pets must be kept away from the area of operation to avoid injury from flying debris and contact with the snowblower.

Refuel with Care

Gasoline is extremely flammable, and gasoline vapor can explode. Allow the engine to cool if the snowblower has been in operation. Refuel only outdoors in a well-ventilated area with the engine OFF. Do not overfill the fuel tank. Never smoke near gasoline, and keep other flames and sparks away. Always store gasoline in an approved container. Make sure that any spilled fuel has been wiped up before starting the engine.

Turn Engine OFF When Not Operating the Snowblower

If you need to leave the snowblower for any reason, even just to inspect the area ahead, always turn the engine off.

Operation on Slopes

To avoid overturning, be careful when changing the direction of the snowblower while operating it on a slope. Do not use the snowblower to remove snow from roofs. The snowblower may overturn on steep slopes if left unattended, causing injury to the operator or bystanders.

Operating Conditions

Do not use the snowblower when visibility is poor. Under conditions of poor visibility, there is a greater risk of striking an obstacle or causing injury. Adjust the snow discharge chute to avoid hitting bystanders or vehicles.

Stay clear of the snow discharge chute while the engine is running and be aware that loose clothing can get drawn into the moving parts.

Operating Near Roads

Always watch for vehicle traffic when operating the snowblower near roads and driveways.

Operator Responsibility

Know how to stop the snowblower quickly in case of emergency. Understand the use of all snowblower controls.

Never permit anyone to operate the snowblower without proper instruction. Do not let children operate the snowblower. If people or pets suddenly appear in front of the snowblower while it is in operation, immediately release the auger and drive clutch levers to stop the snowblower and avoid possible injury from rotating auger blades.

While operating the snowblower, hold the handle firmly and walk, don't run. Wear suitable winter boots that resist slipping.

Wear safety glasses or eye shields during operation to protect eyes from thrown objects.

Exercise caution on slippery surfaces to avoid falling, especially when operating in reverse.

SNOWBLOWER SAFETY

SAFETY LABEL LOCATIONS

These labels warn you of potential hazards that can cause serious injury. Read them carefully.

If a label comes off or becomes hard to read, contact your Honda snowblower dealer for a replacement.

⚠ WARNING

Rotating and moving parts can cause serious injury.

- Keep hands and feet away from all rotating and moving parts.
- To prevent accidental start-up, stop the engine and remove the spark plug cap before making repairs, adjustments, or inspections.
- Use a trowel or long stick to clear debris from the discharge chute; never use your hand.

Thrown objects can cause injury to bystanders.

- Do not direct discharge at bystanders or windows.

Stop the engine if you must leave the snow thrower unattended.

Read owner's manual before operation.

⚠ DANGER



Impeller contact will cause serious injury.

- Never use your hands to unclog the discharge chute.
- Turn off engine before unclogging and use the clean-out tool provided.

⚠ WARNING

Gasoline is highly flammable and explosive.
Turn engine off and let cool before refueling.

The engine emits toxic carbon monoxide.
Do not run in an enclosed area.

⚠ CAUTION


HOT MUFFLER CAN BURN YOU.
Stay away if engine has been running.

⚠ DANGER



Rotating auger will cause serious injury.

- Keep hands and feet clear while engine is running.
- Turn off engine before unclogging and use the clean-out tool provided.

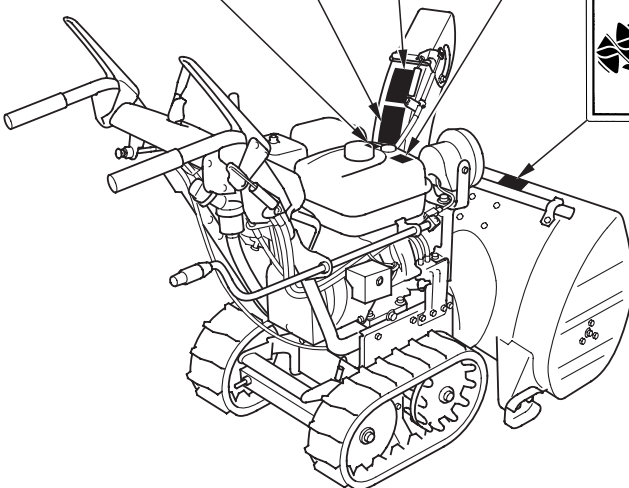


CONTROLS & FEATURES

COMPONENT & CONTROL LOCATIONS



Use the two illustrations on these pages to locate and identify the most frequently used controls.

Track type

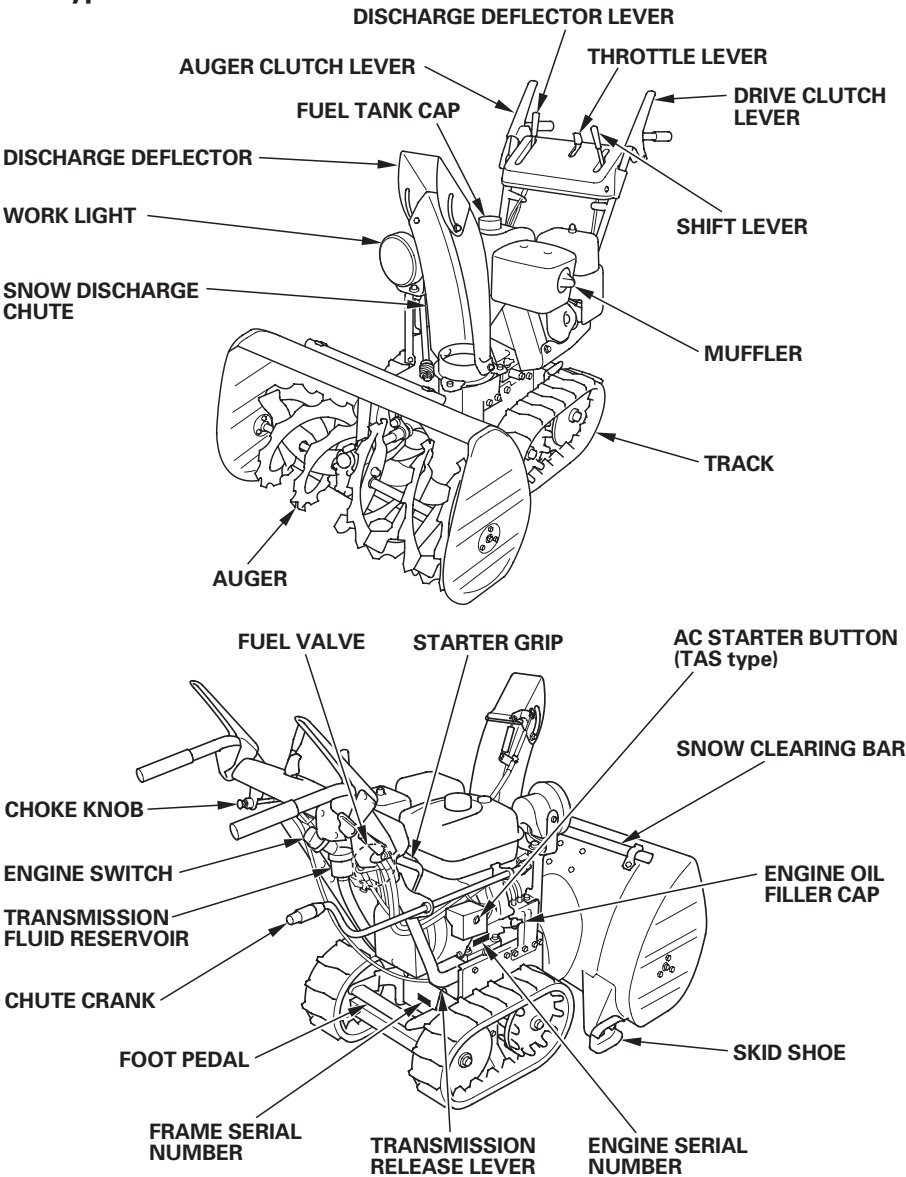

CONTROLS & FEATURES


Wheel type

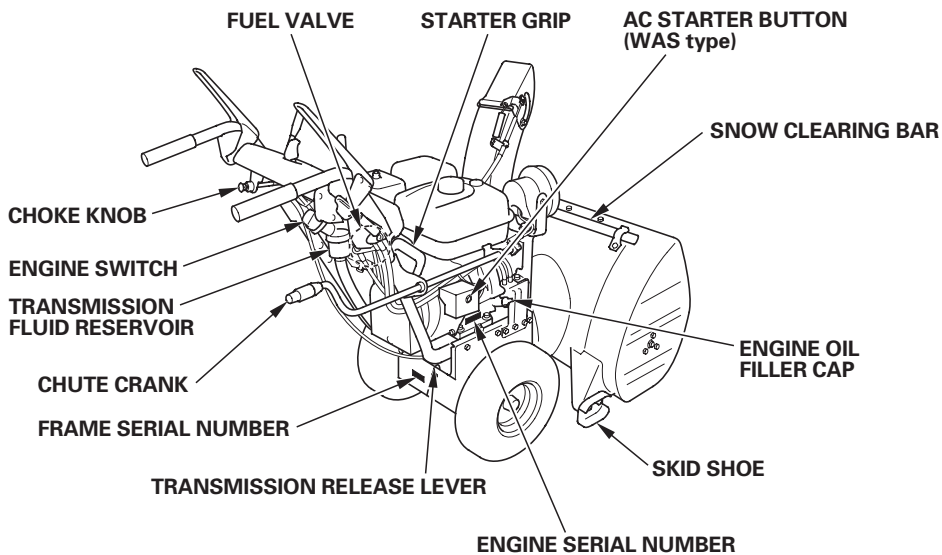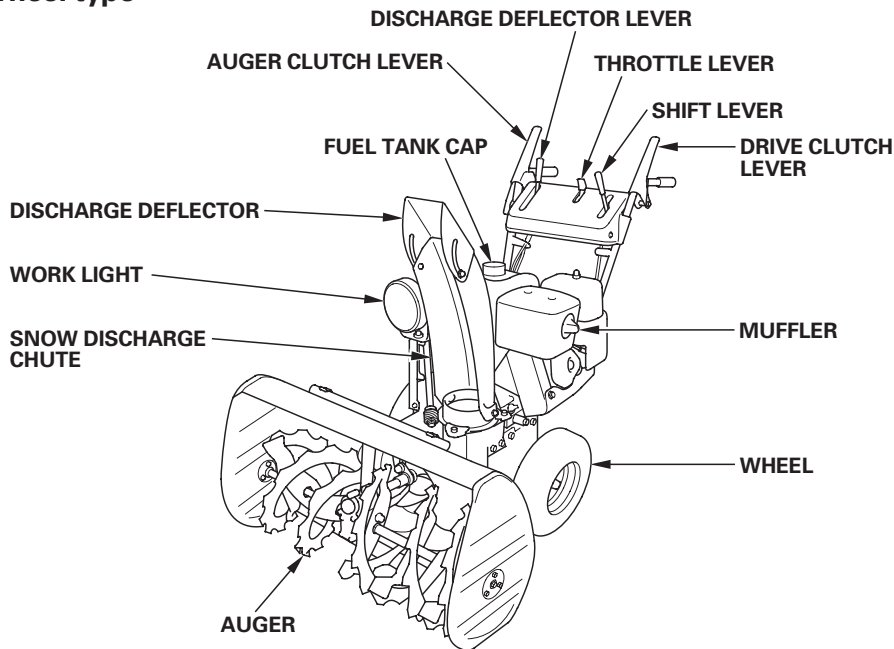

CONTROLS

Fuel Valve Lever

The fuel valve opens and closes the fuel line leading from the fuel tank to the carburetor. Make sure that the fuel valve is positioned exactly at either the ON or OFF position. When the snowblower is not in use, always leave the fuel valve in the OFF position to reduce the possibility of fuel leakage.

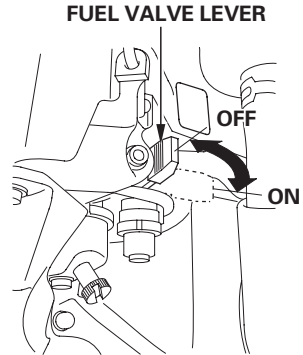


Engine Switch

The engine switch controls the ignition system. The key can only be inserted and removed when turned to OFF.


OFF — Stops the engine.

ON — Running position, and for starting with the recoil starter.

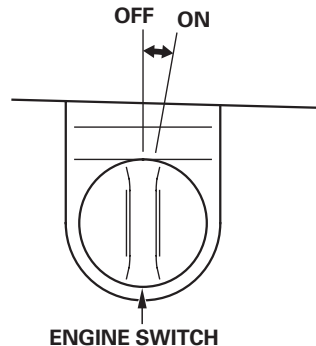

Fuel Gauge


The fuel gauge indicates the amount of fuel in the tank. When the fuel gauge needle enters the EMPTY position, refill the tank as soon as possible.

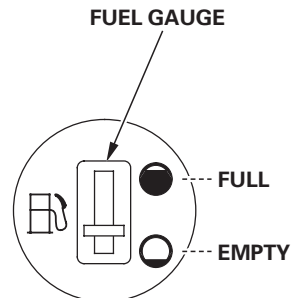

CONTROLS & FEATURES

Chute Crank


Use the chute crank to turn the snow discharge chute right or left.

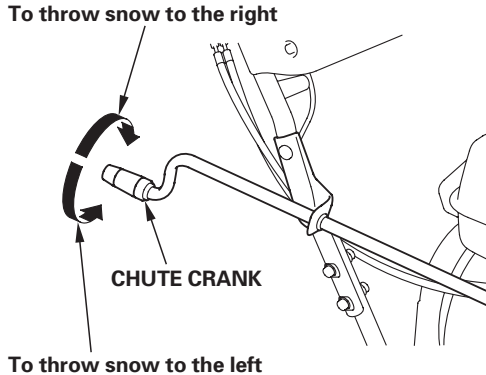

Starter Grip


Pull this grip to start the engine. See page 24 for starting procedures.

STARTER GRIP

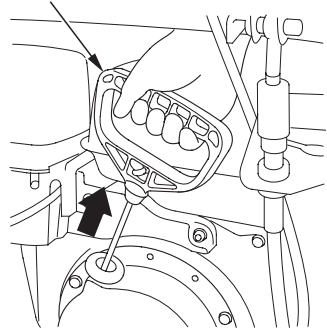

Throttle Lever

The throttle lever controls engine speed from SLOW to FAST, it will stay in any designated position.

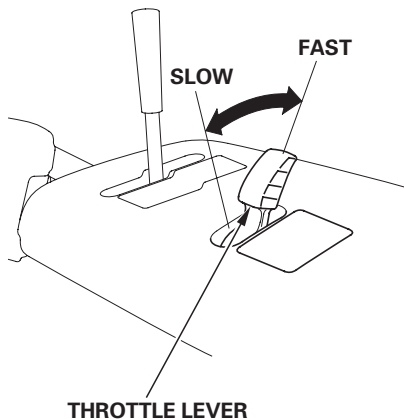


Choke Knob

The choke knob opens and closes the choke valve in the carburetor.

The CLOSED position enriches the fuel mixture for starting a cold engine.


The OPEN position provides the correct fuel mixture for operation after starting, and for restarting a warm engine.

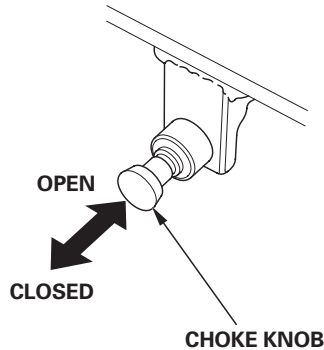

Shift Lever

The shift lever selects F (FORWARD), N (NEUTRAL), or R (REVERSE).


The shift lever also controls the transmission drive ratio; moving the lever farther from NEUTRAL increases drive speed. While clearing snow, use the shift lever to control drive speed, so you can leave the throttle lever in the FAST position for best snow-clearing performance.

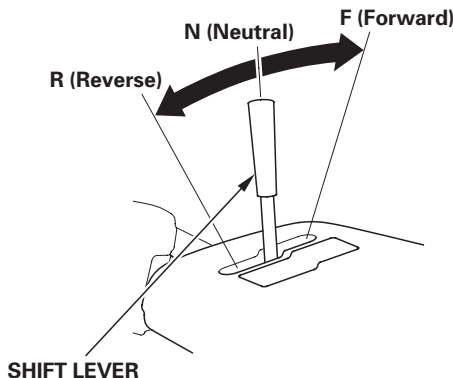

CONTROLS & FEATURES

Discharge Deflector Lever

The discharge deflector lever controls the snow discharge angle.

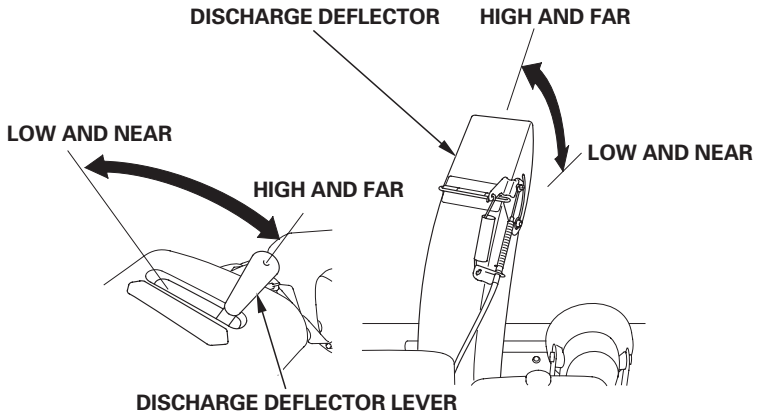

Foot Pedal (track type only)

Use the pedal for adjusting the height and angle of the machine in relation to the tracks.


Hold the handles and step on the pedal.

Raise or lower the machine to the desired position and release the pedal.

LOW — Smooth, ice-covered surfaces only.


MIDDLE — Normal use.

HIGH — Deep snow or for transporting the snowblower.

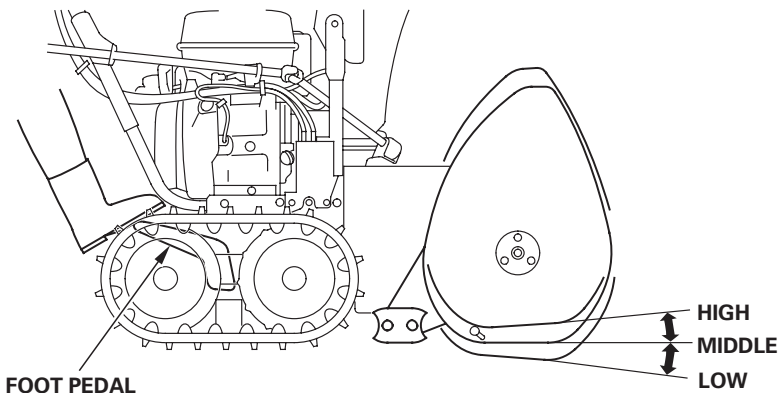


Drive Clutch Lever and Auger Clutch Lever

Use these controls to engage the snow blowing mechanism and/or the drive mechanism.

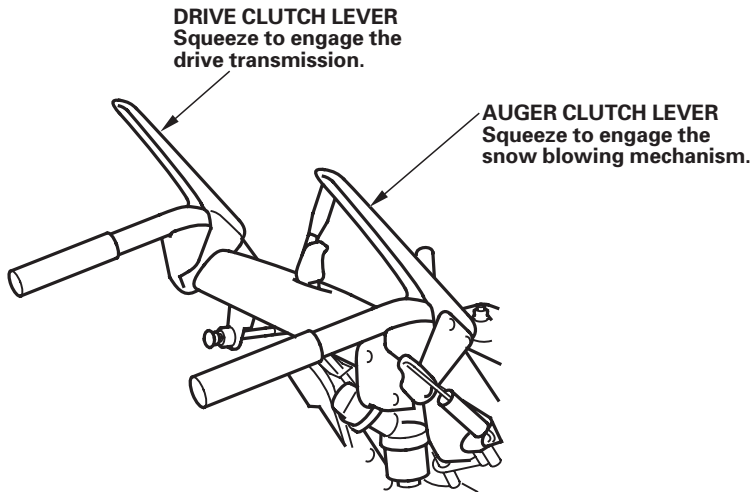

When both levers are squeezed, the drive clutch lever locks the auger clutch lever down. Releasing the drive clutch lever then unlocks and releases the auger clutch lever.

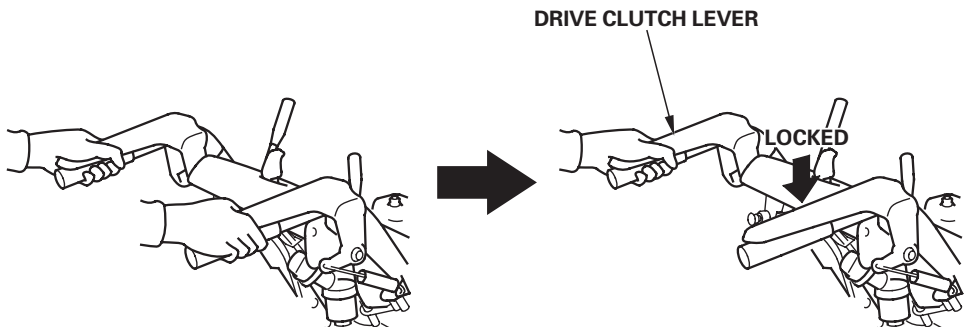

Both levers squeezed

The auger clutch lever remains locked down as long as one hand continues to squeeze the drive clutch lever.

CONTROLS & FEATURES

Transmission Release Lever

The transmission release lever has two positions, RELEASED and ENGAGED. Set the lever to the ENGAGED position for self-propelled operation. Set it to the RELEASED position when pushing the snowblower with the engine stopped.


NOTICE

Operating the transmission release lever while the engine is running can damage the transmission.

1. Stop the engine.
2. Set the shift lever to the "N" (Neutral) position.
3. Set the lever to the ENGAGED or RELEASED position.

NOTICE


Pushing or towing the snowblower with the transmission release control in the engaged position will damage the hydrostatic transmission.

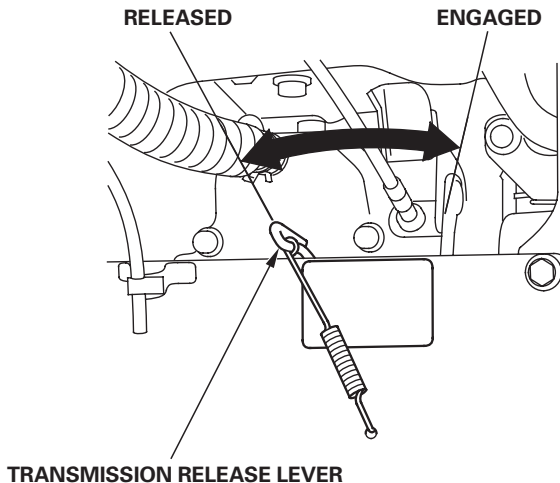

FEATURES

Work Light

The light comes ON while the engine is running, and it goes OFF when the engine stops. The light does not come ON when the engine switch is turned ON unless the engine is started. The light can be adjusted up or down.

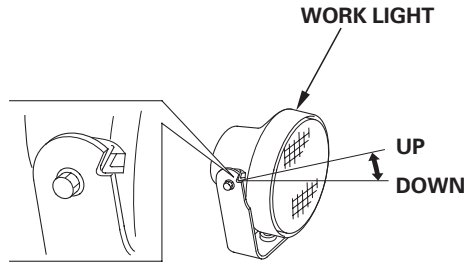


Snow Clearing Bar

If the snow discharge chute or snow blowing mechanism becomes restricted, stop the engine, and make sure all rotating parts have come to a complete stop. Remove the spark plug cap from the spark plug.

Use the snow clearing bar to remove the obstruction.

After clearing the obstruction, wipe the bar clean, and store it in the holders. Replace the spark plug cap.

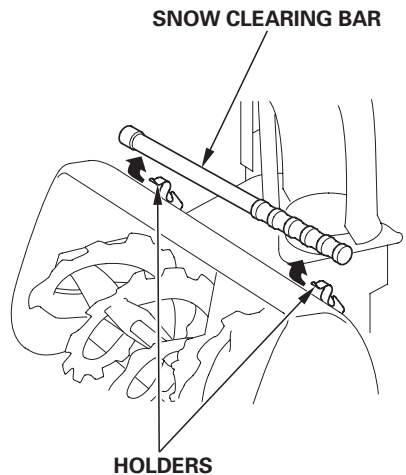

BEFORE OPERATION

ARE YOU READY TO GET STARTED?

Your safety is your responsibility. A little time spent in preparation will significantly reduce the risk of injury.

Knowledge

Read and understand this manual. Know what the controls do and how to operate them.

Familiarize yourself with the snowblower and its operation before you begin using it. Know how to quickly shut off the snowblower in case of an emergency.

IS YOUR SNOWBLOWER READY TO GO?

For your safety, and to maximize the service life of your equipment, it is very important to take a few moments before you operate the snowblower to check its condition. Be sure to take care of any problem you find, or have your servicing dealer correct it, before you operate the snowblower.

WARNING

Improperly maintaining this snowblower, or failing to correct a problem before operation, could cause a malfunction in which you could be seriously injured.

Always perform a pre-operation inspection before each operation, and correct any problem.

Before beginning your pre-operation checks, be sure the snowblower is on a level surface and the engine switch is in the OFF position.

Check the General Condition of the Snowblower:

- Look around and underneath the snowblower for signs of oil or gasoline leaks.
- Check the auger housing and the discharge chute for accumulation of packed snow or ice. Clean the auger housing and discharge chute before starting the snowblower.
- Look for signs of damage.
- Check each control for proper operation.
- Check the auger and blower for loose or broken bolts. If broken, replace them with new ones (see page 50).
- Check the skid shoes and scraper for wear. Replace them if necessary (see page 51).
- Check that all nuts, bolts, and screws are tightened.

Check the Engine

- Check the oil level (see page 41).
- Check the fuel level (see page 39). Starting with a full tank will help to eliminate or reduce operating interruptions for refueling.
- Check the hydrostatic fluid level in the reservoir (see page 44). Use only Honda Hydrostatic Fluid.

BEFORE OPERATION

CHECK YOUR WORK AREA

For your safety and the safety of others, always inspect the area before operating the snowblower.

Objects

Anything that can be picked up by the augers and thrown is a potential hazard to you and others. Thoroughly inspect the area where the equipment is to be used and remove all doormats, sleds, boards, wires, stones, and nails from the work area.

People and Pets

People and animals near the work area can move into your snowblower's path or into a position where they could be struck by thrown objects. Clear the area of people, especially children, and pets. Their safety is your responsibility.

Work Area

Check the condition of the snow. Adjust your snowblower ground speed (not engine speed) and snowblowing swath accordingly.

Check the skid shoes for proper adjustment. Adjust the skid shoes to obtain the auger ground clearance for the type of surface the snowblower will be operated over (see page 52).

OPERATION

SNOWBLOWING PRECAUTIONS

Before operating the snowblower for the first time, please review both the *SNOWBLOWER SAFETY* chapter (see page 5) and the *BEFORE OPERATION* chapter (see page 18).

Even if you have operated other snowblowers, take time to become familiar with how this snowblower works, and practice in a safe area until you build up your skills.

Never tamper with or alter any of the controls or safety devices on the snowblower. Tampering is a violation of Federal and California law.

For your safety, do not start or operate the engine in an enclosed area such as a garage. Your snowblower's exhaust contains poisonous carbon monoxide gas that can collect rapidly in an enclosed area and cause illness or death.


⚠ WARNING

Exhaust contains poisonous carbon monoxide gas that can build up to dangerous levels in closed areas. Breathing carbon monoxide can cause unconsciousness or death.

Never run the engine in a closed, or even partly closed area where people may be present.


STARTING THE ENGINE

1. Move the shift lever to "N" (Neutral) position.

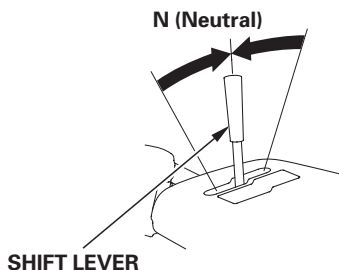


OPERATION


2. Set the transmission release lever in the ENGAGED position (see page 16).

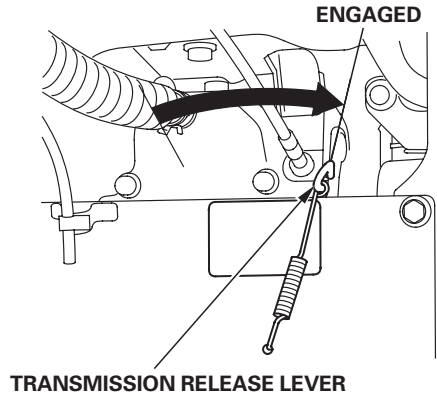

3. Turn the fuel valve to the ON position. Be sure that the drain knob is tightened securely.

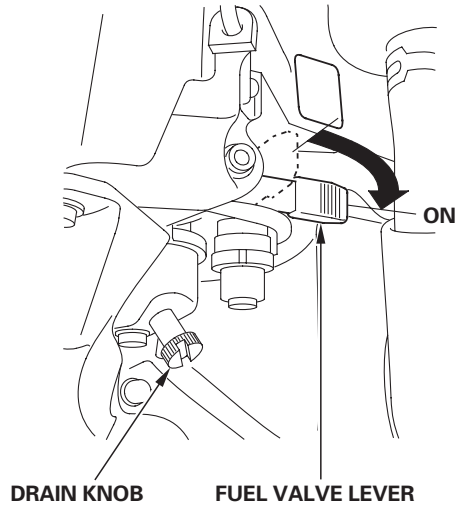


4. In cold weather and when the engine is cold, pull the choke knob to the CLOSED position and move the throttle lever to the FAST position.

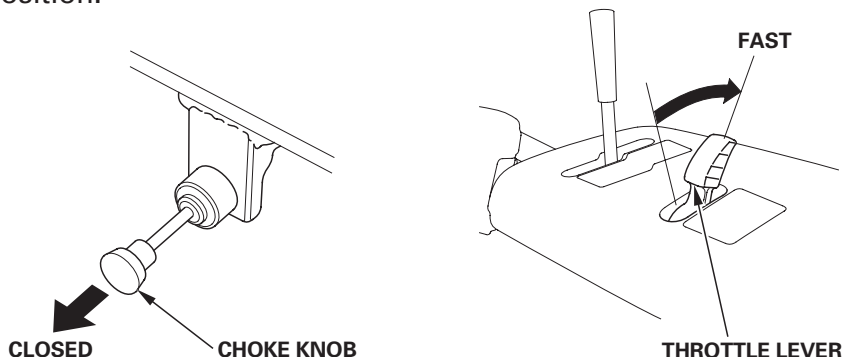

5. Start the engine.

Electric-start Models (TAS, WAS type):

- a. Connect your power cord to the switch box and the male end of the power cord to a properly grounded 120 Volt ac outlet.

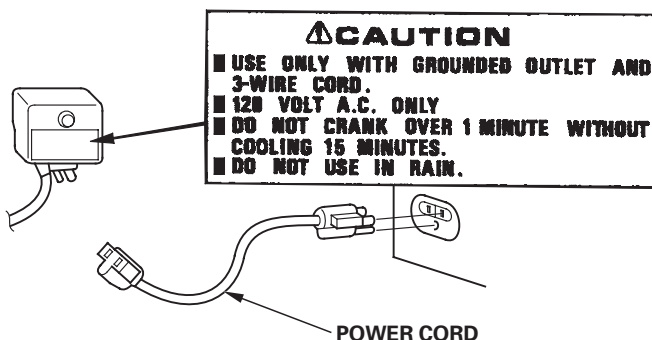


To minimize the possibility of potentially dangerous electrical shocks, always use a 3-conductor power cord with a power rating of no less than 15 amps. Also, be sure that the outlet you are using is properly grounded.

Do not connect and disconnect the power cord with wet hands.


Be sure to hold the plug when disconnecting the power cord from the electrical outlet or switch box. Do not disconnect by pulling on the power cord.

OPERATION

- b. Turn the engine switch to the ON position.

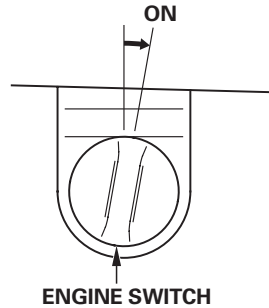

- c. Push the starter button until the engine starts. After the engine starts, disconnect the power cord from the electrical outlet, and then from the switch box.

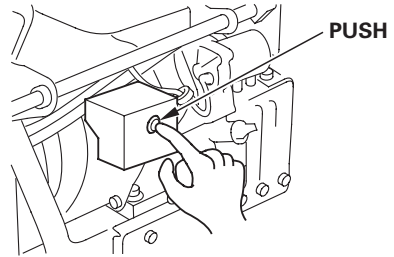


NOTICE

Do not operate the starter for more than 1 minute. If the engine fails to start, release the button and allow the starter to cool for 15 minutes before operating it again.

Manual Starting only

- a. Turn the engine switch to the ON position.
b. Pull the starter grip lightly until you feel resistance, then pull briskly in the direction of the arrow as shown.
c. Return the starter grip gently to the engine.


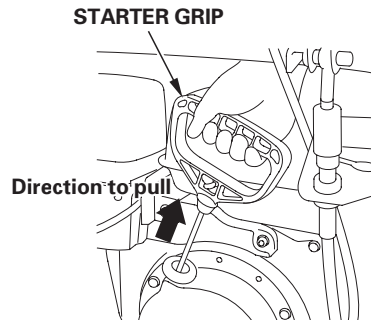


NOTICE

- *Do not allow the starter grip to snap back against the engine. Return it gently to prevent damage to the starter.*
- *Do not pull the starter grip while the engine is running. The starter could be damaged.*

6. Let the engine warm up for several minutes.


If the choke knob has been pulled to the CLOSED position to start the engine, gradually push it to the OPEN position as the engine warms up. Move the throttle lever to the SLOW position.

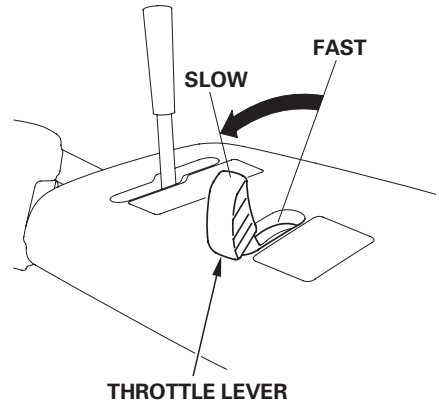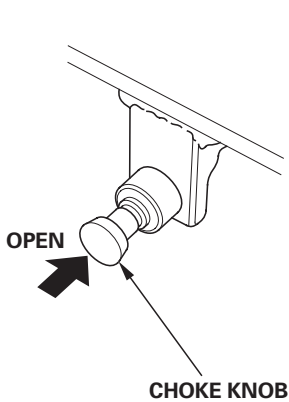


OPERATION

7. While warming the engine up, also warm the transmission as follows:

- a. Check that the shift lever is in the "N" (Neutral) position.

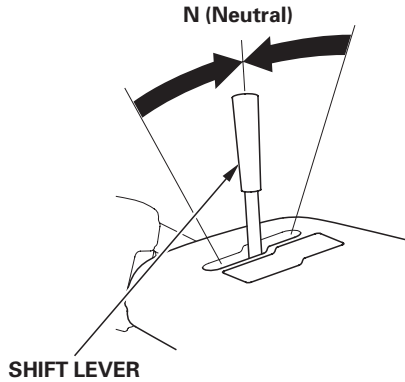


- b. Squeeze the drive clutch lever for about 30 seconds to warm up the transmission fluid.

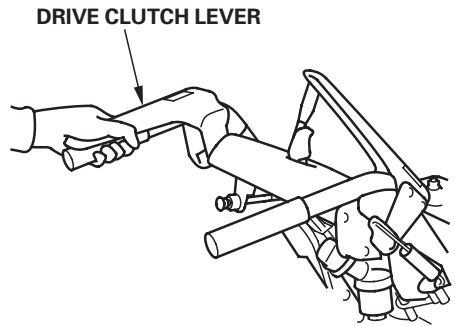


STOPPING THE ENGINE


To stop the engine in an emergency, simply turn the engine switch to the OFF position. Under normal conditions, use the following procedure.

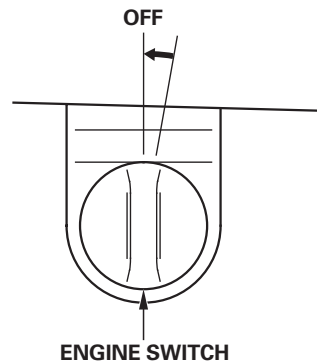


1. Release the auger and drive clutch levers. The drive and snow blowing mechanism will stop operation.

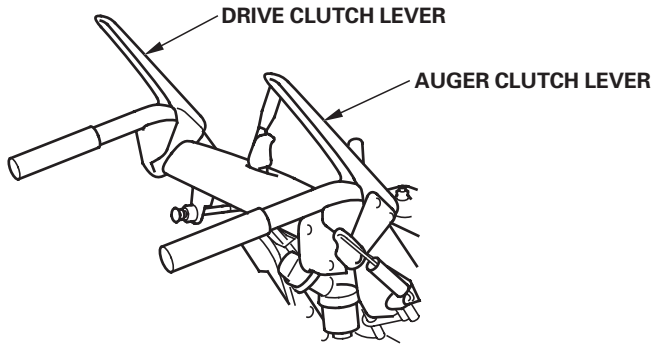

2. Move the shift lever to "N" (Neutral) position.

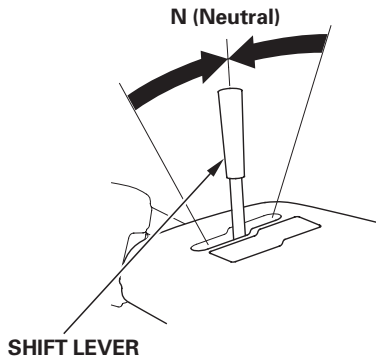


3. Turn the throttle lever to the SLOW position.

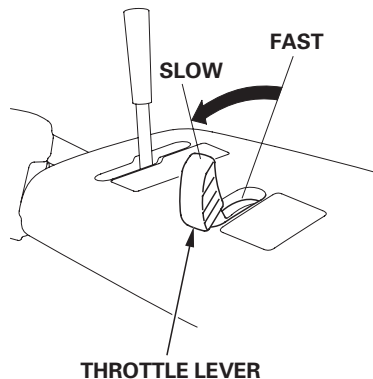


OPERATION

4. Turn the engine switch to the OFF position.

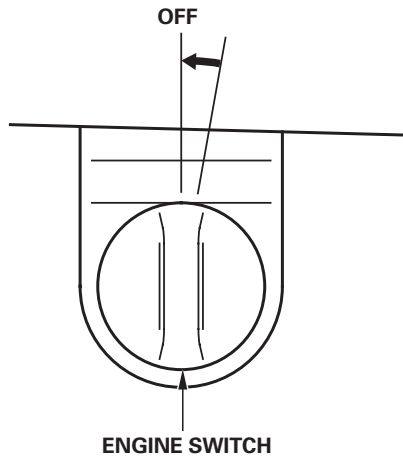

5. Turn the fuel valve to the OFF position.

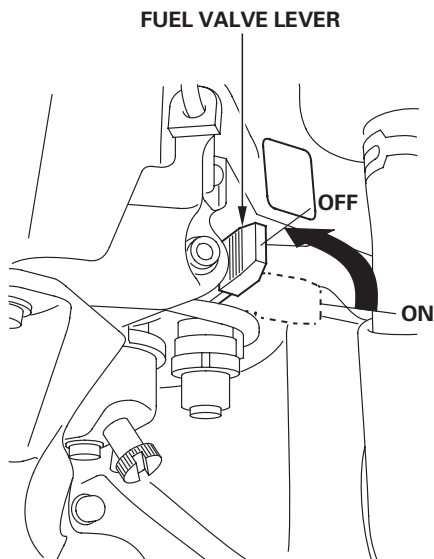

CLEARING SNOW

1. Move the throttle lever to the FAST position for normal operation.



2. Release the auger clutch lever, and move the shift lever to select the desired drive speed.

Low speed is recommended for removing deep or hard-packed snow.

3. Set the foot pedal to the correct position (see page 14 , track type only).

4. Adjust the throwing direction by using the chute crank and the discharge deflector lever (see pages 12 and 14).

5. Squeeze the auger clutch lever.
The machine will clear snow when you squeeze the auger clutch lever.

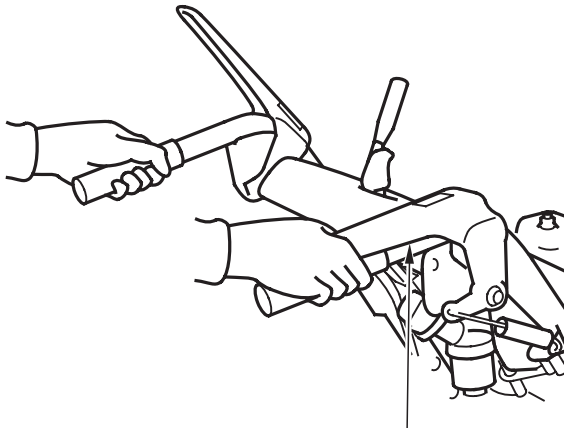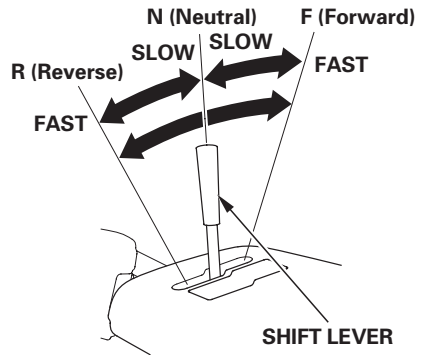


AUGER CLUTCH LEVER

OPERATION


6. Squeeze the drive clutch lever to self-propel the snowblower.

If the transmission release lever (see page 22) is in the ENGAGED position, and the shift lever (see page 29) is in the FORWARD (F) position, the hydrostatic drive will propel the snowblower forward when you squeeze the drive clutch lever.

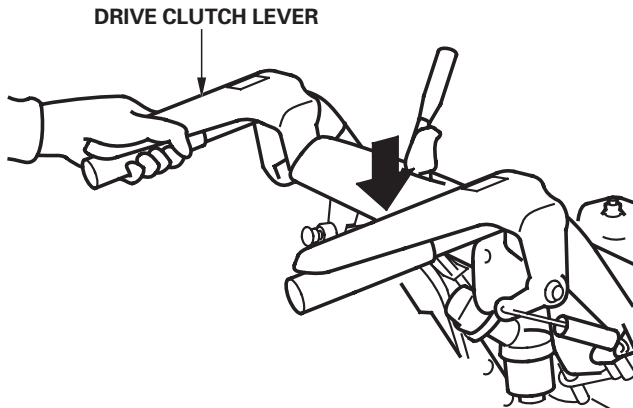


When both levers are squeezed, the drive clutch lever locks the auger clutch lever down. This frees your right hand to operate the other snowblower controls. Releasing the drive clutch lever unlocks and releases the auger clutch lever.

To move from one place to another, or to change direction, use the drive clutch lever only. Release both the drive clutch lever and auger clutch lever, and then squeeze the drive clutch lever.

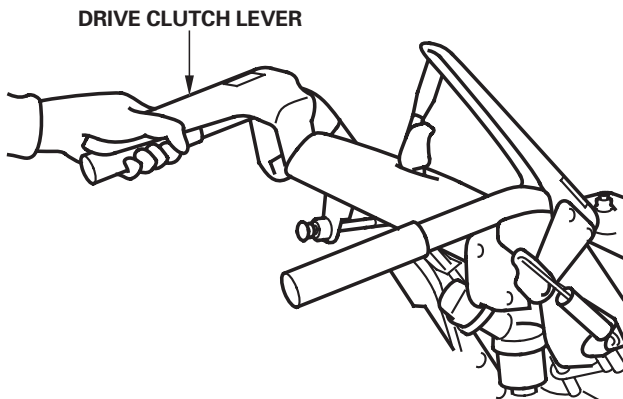

7. Release the clutch levers to stop clearing or moving.

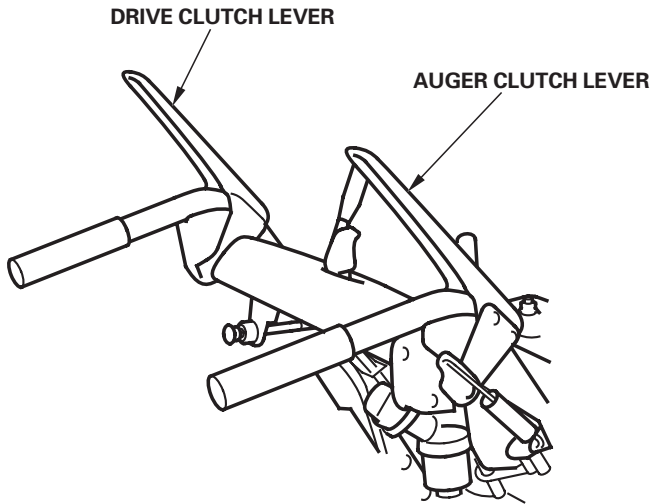


OPERATION

SNOW-CLEARING TIPS

For best efficiency, clear snow before it melts, refreezes and hardens. Do not reduce engine speed while clearing snow.

Operating tips for clearing hard or deep snow:


- Reduce forward speed. If that is not sufficient, use the shift lever to clear snow with a back and forth motion.
- Clear a narrower swath. Make several passes with the auger overlapping the cleared areas.
- If the snow is deeper than the height of the auger, remove it in several steps, as shown below, or install the drift-breaker kit (optional part) that is available from authorized Honda snowblower dealers.

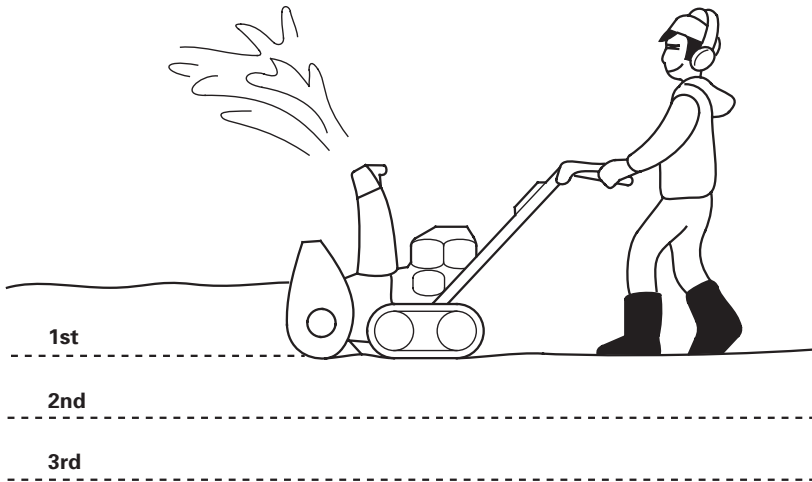

REMOVING OBSTRUCTIONS

If the snow discharge chute or snow blowing mechanism becomes restricted, review snow clearing information (see page 32) to reduce the possibility of reoccurring obstructions.

1. Before removing the obstruction, be sure to stop the engine, and make sure that all rotating parts have come to a complete stop. Remove the spark plug cap from the spark plug.
2. Remove the snow clearing bar, or use a wooden stick to clear the obstruction.
3. After unclogging, wipe the bar clean, and secure it in the holders.

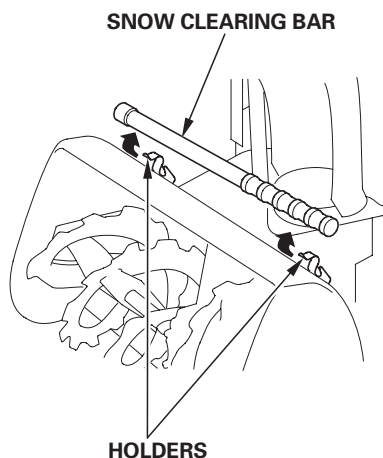

SERVICING YOUR SNOWBLOWER

THE IMPORTANCE OF MAINTENANCE

Good maintenance is essential for safe, economical, and trouble-free operation. It will also help reduce air pollution.

To help you properly care for your snowblower, the following pages include a maintenance schedule, routine inspection procedures, and simple maintenance procedures using basic hand tools. Other service tasks that are more difficult, or require special tools, are best handled by professionals and are normally performed by a Honda technician or other qualified mechanic.

The maintenance schedule applies to normal operating conditions. If you operate your snowblower under unusual conditions, consult your servicing dealer for recommendations applicable to your individual needs and use.

Remember that your authorized Honda servicing dealer knows your snowblower best and is fully equipped to maintain and repair it.

WARNING

Improper maintenance, or failure to correct a problem before operation, can cause a malfunction in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

To ensure the best quality and reliability, use only new, Honda Genuine parts or their equivalents for repair or replacement.

Maintenance, replacement, or repair of the emission control devices and systems may be performed by any engine repair establishment or individual, using parts that are "certified" to EPA standards.

MAINTENANCE SAFETY

Some of the most important safety precautions follow. However, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

WARNING

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in the owner's manual.

Safety Precautions


- Make sure the engine is off before you begin any maintenance or repairs. This will eliminate several potential hazards:
 - **Carbon monoxide poisoning from engine exhaust.**
Operate outside, away from open windows or doors.
 - **Burns from hot parts.**
Let the engine and exhaust system cool before touching.
 - **Injury from moving parts.**
Do not run the engine unless instructed to do so.
- Read the instructions before you begin, and make sure you have the tools and skills required.
- To reduce the possibility of fire or explosion, be careful when working around gasoline. Use only a nonflammable solvent, not gasoline, to clean parts. Keep cigarettes, sparks, and flames away from all fuel-related parts.

SERVICING YOUR SNOWBLOWER

TOOL KIT

The tools necessary for performing some of the periodic maintenance, simple adjustments and repairs are supplied in the tool kit.

Spare shear bolts and nuts are also located in the tool kit.



SPARK PLUG WRENCH




**6 mm SELF LOCK
NUTS (3)**




WRENCH HANDLE




**LOCK
BOLTS (3)**



**10 × 12 mm
BOX END WRENCH**



**14 × 17 mm
WRENCH**

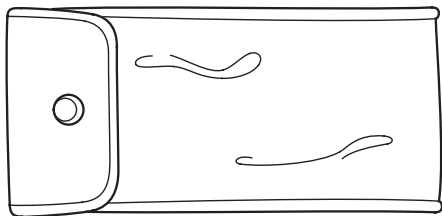

TOOL BAG

SERVICING YOUR SNOWBLOWER

MAINTENANCE SCHEDULE

REGULAR SERVICE PERIOD (1) Perform at every indicated month or operating hour interval, whichever comes first. Item		Each use	Every year		First month or 20 hrs.	Every 100 hrs.	Every 300 hrs.	Every 4 years	Page
			Before operation	Before storage					
Engine oil	Check level	○							41
	Change		○ (4)		○	○ (4)			42
Auger mission oil	Check level		○ (2)						—
HST oil	Check level	○							44
Battery electrolyte (If applicable)	Check level	○							—
	Check level and gravity		○ (2) (4)						
Spark plug	Check-adjust		○ (4)						46
	Replace						○	○	
Auger skid shoes and scraper	Check-adjust	○	○ (4)						51
Track	Check-adjust		○ (4)		○				48
Wheel	Check	○		○					49
Auger and blower lock bolt	Check	○							50
Bolts, nuts, fasteners	Check	○							19

(1) For professional commercial use, log hours of operation to determine proper maintenance intervals.

(2) These items should be serviced by your Honda servicing dealer, unless you have the proper tools and are mechanically proficient. Refer to the Honda Shop Manual for service procedures.

See "Honda Publications" on page 74 for ordering information.

(3) Check the belt for wear or damage. Replace the belt with a new one if it is worn or damaged.

(4) These parts may required more frequent inspection and replacement under heavy use.

SERVICING YOUR SNOWBLOWER

REGULAR SERVICE PERIOD (1) Perform at every indicated month or operating hour interval, whichever comes first. Item	Each use	Every year		First month or 20 hrs.	Every 100 hrs.	Every 300 hrs.	Every 4 years	Page
		Before operation	Before storage					
Fuel sediment Clean cup			○					56
Fuel tank and carburetor Drain			○					56
Anti corrosion Apply oil oil			○					53
Chute guide Check-adjust control cable		○ (2) (4)		○ (2) (4)				—
Auger clutch Check-adjust cable		○ (2) (4)		○ (2) (4)				—
Throttle/Choke Check-adjust cable		○ (2) (4)						—
Drive clutch Check-adjust cable		○ (2) (4)		○ (2) (4)				—
Auger housing Check move adjust lever		○ (2) (4)						—
Drive belt Check-adjust		○ (2) (3) (4)		○ (2)(3)(4)				—
Auger belt Check-adjust		○ (2) (3) (4)		○ (2)(3)(4)				—
Idle speed Check-adjust		○ (2)				○ (2)		—
Valve clearance Check-adjust		○ (2)				○ (2)		—
Combustion chamber Clean		After every 1,000 hrs. (2)						—
Fuel tank and filter Clean					○ (2)		○ (2)	—
Fuel tube Check Replace		Every 2 years (2)						—
							○ (2)	

(1) For professional commercial use, log hours of operation to determine proper maintenance intervals.

(2) These items should be serviced by your Honda servicing dealer, unless you have the proper tools and are mechanically proficient. Refer to the Honda Shop Manual for service procedures.

See "Honda Publications" on page 74 for ordering information.

(3) Check the belt for wear or damage. Replace the belt with a new one if it is worn or damaged.

(4) These parts may required more frequent inspection and replacement under heavy use.

SERVICING YOUR SNOWBLOWER

REFUELING

With the engine stopped, remove the fuel tank cap and check the fuel level. Refill the tank if the fuel level is low. Do not fill above the base of the filler neck.

⚠ WARNING



Gasoline is highly flammable and explosive.

You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks, and flames away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

Refuel in a well-ventilated area before starting the engine. If the engine has been running, allow it to cool. Refuel carefully to avoid spilling fuel. Add fuel only while standing on the fuel tank side of the snowblower. Do not fill the fuel tank completely. Fill tank to approximately 1.4 inch (35 mm) below the top of the fuel tank to allow for fuel expansion. It may be necessary to lower the fuel level depending on operating conditions. After refueling, tighten the fuel tank cap securely.

Never refuel the snowblower inside a building where gasoline fumes may reach flames or sparks. Keep gasoline away from appliance pilot lights, barbecues, electric appliances, power tools, etc.

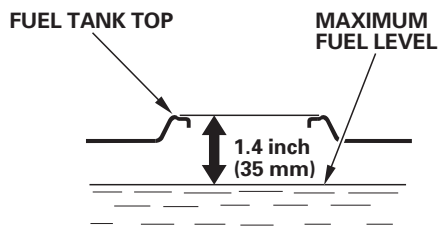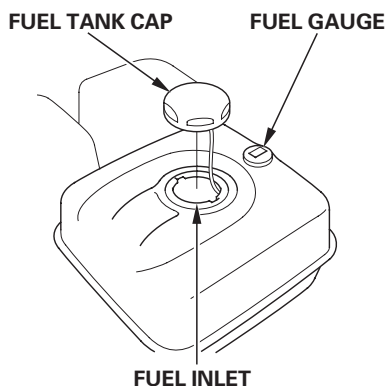

SERVICING YOUR SNOWBLOWER

Spilled fuel is not only a fire hazard, it causes environmental damage. Wipe up spills immediately.

NOTICE

Fuel can damage paint and plastic. Be careful not to spill fuel when filling your fuel tank. Damage caused by spilled fuel is not covered under warranty.

FUEL RECOMMENDATIONS

These engines are certified to operate on unleaded gasoline with a pump octane rating of 86 or higher.

You may use regular unleaded gasoline containing no more than 10% ethanol (E10) or 5% methanol by volume. In addition, methanol must contain cosolvents and corrosion inhibitors.

Use of fuels with content of ethanol or methanol greater than shown above may cause starting and/or performance problems. It may also damage metal, rubber, and plastic parts of the fuel system.

Engine damage or performance problems that result from using a fuel with percentages of ethanol or methanol greater than shown above are not covered under warranty.

Never use stale or contaminated gasoline or an oil/gasoline mixture. Avoid getting dirt or water in the fuel tank.


If your equipment will be used on an infrequent basis, please refer to the fuel section of the STORAGE chapter (see page 54) for additional information regarding fuel deterioration.

SERVICING YOUR SNOWBLOWER

ENGINE OIL LEVEL CHECK

Check the engine oil level with the engine stopped and in a level position.

1. Remove the oil filler cap.
2. Check the oil level. If it is below the upper limit, fill with the recommended oil to the upper limit (see page 43).
3. Reinstall the oil filler cap securely.

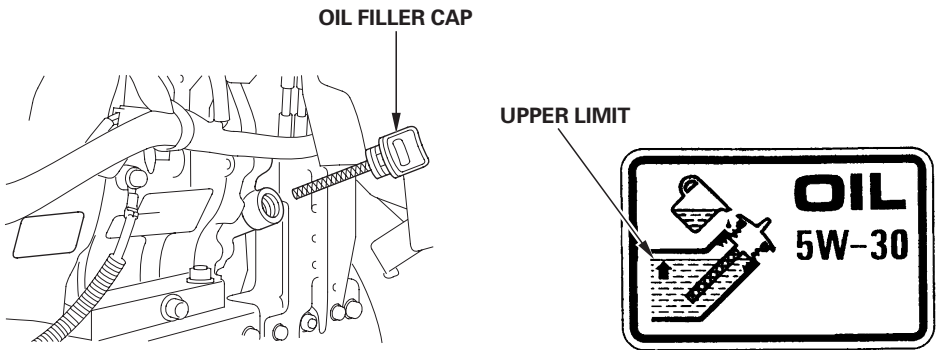

NOTICE

Running the engine with a low oil level can cause engine damage. This type of damage is not covered by the Distributor's Limited Warranty.


SERVICING YOUR SNOWBLOWER

ENGINE OIL CHANGE

Drain the oil while the engine is still warm to assure rapid and complete draining.

1. Place the snowblower on a level surface.
2. Place a suitable container below the engine to catch the used oil, then remove the oil filler cap and the drain plug.

To avoid loosening the drain plug extension, hold it with a 17 mm wrench while loosening the drain plug with a 10 mm wrench.

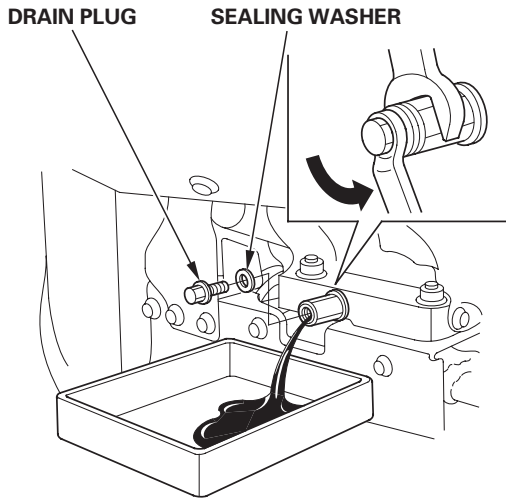

3. Allow the used oil to drain completely into an approved container, then reinstall the drain plug with a new sealing washer, and tighten it securely.

NOTICE

Improper disposal of engine oil can be harmful to the environment. If you change your own oil, please dispose of used motor oil properly. Put it in a sealed container, and take it to a recycling center. Do not throw it in the trash, pour it on the ground, or pour it down a drain.

SERVICING YOUR SNOWBLOWER

4. With the engine in a level position, fill to the upper limit with the recommended oil (see this page).

Maximum oil capacity: 1.1 US qt (1.1 L)

UPPER LIMIT



NOTICE

Running the engine with a low oil level can cause engine damage. This type of damage is not covered by the Distributor's Limited Warranty.


5. Reinstall the oil filler cap securely.

ENGINE OIL RECOMMENDATIONS

Oil is a major factor affecting performance and service life. Use a 4-stroke automotive detergent oil.

SAE 5W-30 is recommended for general use.

The SAE oil viscosity and service classification are on the API label on the oil container. Honda recommends that you use API SERVICE category SJ or later (or equivalent) oil.

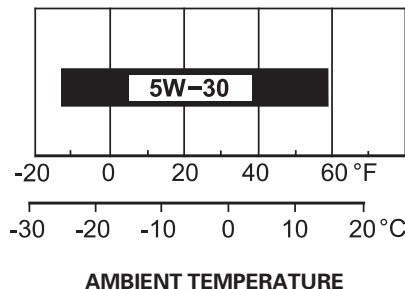

SERVICING YOUR SNOWBLOWER

HYDROSTATIC TRANSMISSION FLUID

Check the hydrostatic fluid level in the reservoir.


Hydrostatic fluid expands and contracts with changes in temperature. The UPPER and LOWER limit marks on the reservoir are calibrated for room temperature fluid.

It is normal for the fluid level to rise above the UPPER level mark when snowblower operation warms the transmission.

When checking the level of cold fluid, below room temperature, refer to the temperature chart for appropriate fluid levels (see page 45).

At temperatures below -4°F (-20°C), fluid may not be visible in the reservoir before operation, but should rise into the reservoir when the transmission warms up.

TRANSMISSION FLUID RESERVOIR

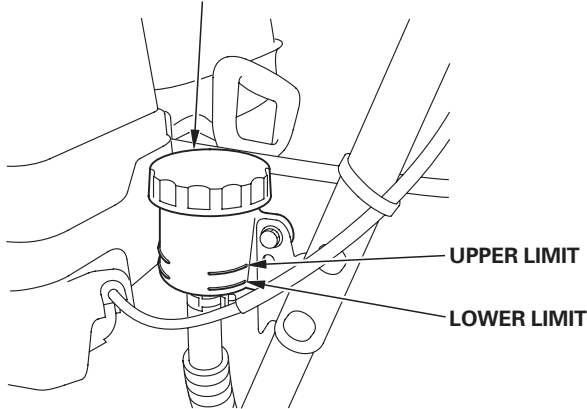

SERVICING YOUR SNOWBLOWER


If the fluid level is low, add Honda Hydrostatic Fluid.

NOTICE

The use of other hydrostatic fluids will reduce transmission performance and may damage the transmission. Use only Honda Hydrostatic Fluid.

1. Unscrew the reservoir cap and remove the seal. Be careful to prevent dirt, water, or snow from entering the reservoir.
2. Add Honda Hydrostatic Fluid to bring the fluid level to the UPPER limit mark at room temperature, or to the appropriate level shown in the temperature chart below. Do not overfill.
3. Reinstall the seal, and tighten the cap securely.

Temp	Fluid level
68°F (20°C)	Between upper and lower limit marks (approx. 0.20 in (5 mm) above lower limit marks)
50°F (10°C)	Slightly above lower limit mark (approx. 0.08 in (2 mm) above lower limit mark)
32°F (0°C)	Slightly below lower limit mark (approx. 0.04 in (1 mm) below lower limit mark)
14°F (-10°C)	Between lower limit mark and bottom of reservoir (approx. 0.16 in (4 mm) below lower limit mark)

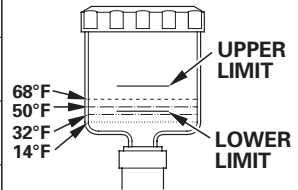

SERVICING YOUR SNOWBLOWER

SPARK PLUG SERVICE


Recommended spark plug: BPR5ES (NGK)
W16EPR-U (DENSO)

NOTICE

Use only the recommended spark plugs or equivalent. Spark plugs which have an improper heat range may cause engine damage.


To ensure proper engine operation, the spark plug must be properly gapped and free of deposits. If the engine has been running, the muffler will be very hot. Be careful not to touch the muffler.

1. Remove the spark plug cap.
2. Clean any dirt from around the spark plug base.
3. Use the spark plug wrench supplied in the tool kit to remove the spark plug.
4. Inspect the spark plug. Replace it if the electrodes are worn or if the insulator is cracked, chipped, or fouled.

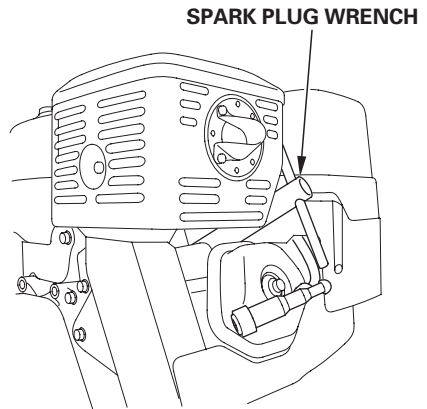

5. Measure the plug gap with a wire-type feeler gauge. Correct as necessary by carefully bending the side electrode.

The gap should be:
0.028–0.031 in (0.7–0.8 mm)

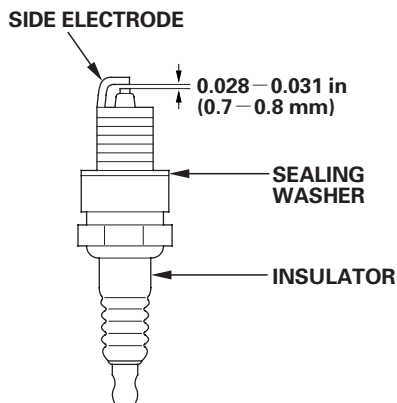

6. Make sure that the spark plug sealing washer is in good condition, and thread the spark plug in by hand to prevent cross-threading.
7. After the spark plug is seated, tighten with a spark plug wrench to compress the washer.

If installing a new spark plug, tighten 1/2 turn after the spark plug seats to compress the washer. If reinstalling a used spark plug, tighten 1/8 to 1/4 turn after the spark plug seats.

NOTICE

The spark plug must be securely tightened. An improperly tightened spark plug can become very hot and may damage the engine.


SERVICING YOUR SNOWBLOWER

TRACK ADJUSTMENT

Make sure the tracks are clean and dry before adjustment. The tracks cannot be correctly adjusted if clogged with snow or debris, or coated with ice.


With the snowblower resting on its tracks, check track deflection by pressing down midway between the wheels with a force of 33 lbf (15 kgf).

When correctly adjusted, track deflection should be:
1-1/16 – 1-5/16 in (27 – 33 mm)

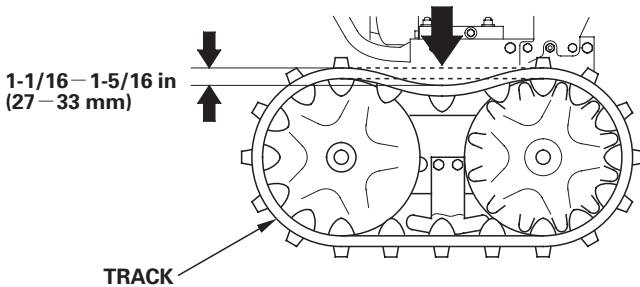

Adjusting Procedure


1. Loosen the left and right tension bolt lock nuts at the rear axle, and turn the adjusting nuts to correctly tension both tracks.
2. After adjustment, tighten the lock nuts securely.

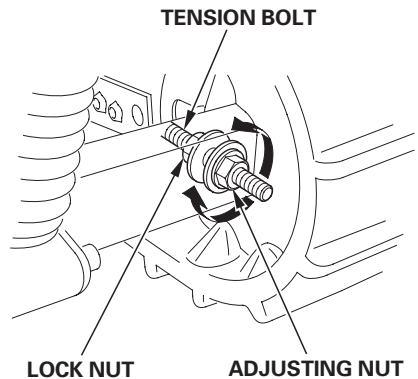

SERVICING YOUR SNOWBLOWER

TIRE INSPECTION

- Check the side wall and tread surface of each tire for cracks, damage, or excessive wear.
- Check the tire pressure
Tire pressure:
8.0 psi (55 kPa, 0.56 kgf/cm²)

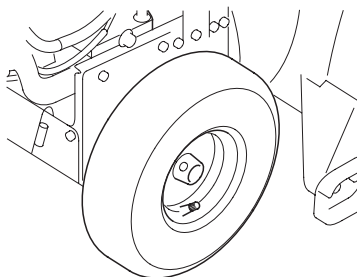

NOTICE

Excessive inflation pressure can damage the tires. Do not inflate the tires beyond the recommended pressure.

AUGER AND BLOWER INSPECTION

Check the auger, auger housing, blower, and shear bolts for signs of damage or other faults. If any of the shear bolts are broken, replace them with the ones furnished with the snowblower. Additional shear bolts and nuts are available from authorized Honda snowblower dealers.

NOTICE


Shear bolts are designed to break under force that would otherwise damage auger and blower parts. Do not replace shear bolts with ordinary hardware bolts.

SERVICING YOUR SNOWBLOWER


LOCK BOLT REPLACEMENT PROCEDURE

1. Place the snowblower on a firm, level surface.
2. Turn the engine switch OFF, and remove the cap from the spark plug.
3. Clean the auger and blower of snow, ice, or any other foreign particles.
4. Check the entire snow clearing mechanism.
5. Replace any broken lock bolts. Tighten securely.

HS928:

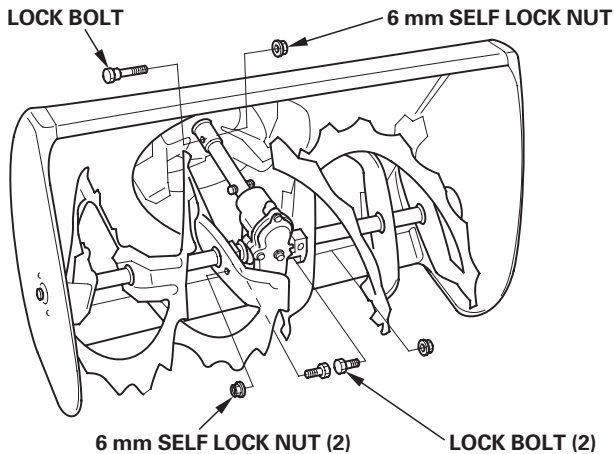

HS1332:

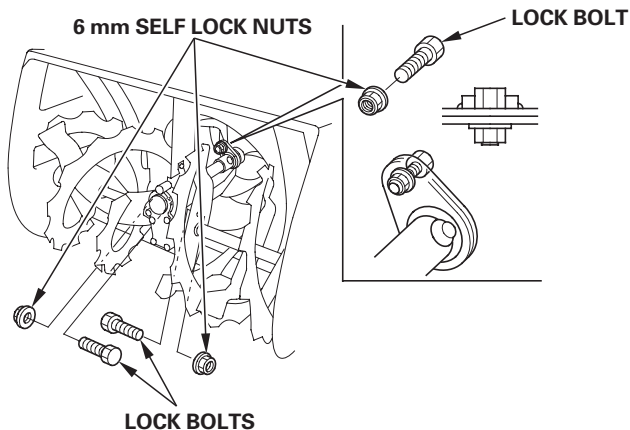

SKID SHOES AND SCRAPER

Turn the engine switch to the OFF position, and disconnect the spark plug cap, so the engine cannot be accidentally started while you are near the auger.

The skid can be installed at the rear or side of the auger housing.

The initial position set at the factory is rear.

Select the installation position for your convenience.

Remove the bolts to uninstall the skid, and then set the skid to the convenient position and tighten the bolts securely.

Wear inspection

1. Raise the auger housing off the ground.

Track type: Step on the foot pedal (see page 14), and raise the auger to the highest position.

Wheel type: Place a block of wood under the scraper to support the auger.

2. Measure the thickness of the right and left skid shoes at their thinnest point.


If the thickness of the skid contacting the ground surface is 0.02 in (0.5 mm), turn the skid upside down.

Replace the skid if the thickness is less than 0.02 in (0.5 mm) after turning the skid upside down.

SERVICING YOUR SNOWBLOWER

Adjustment

1. Place the snowblower on a level surface. (For track-type snowblowers, step on the foot pedal, and set the auger in the middle position.)
2. Loosen the skid shoe bolts and adjust the skid shoes to obtain the auger ground clearance for snow conditions recommended below. Adjust the right and left skid shoes equally. Retighten the bolts securely.

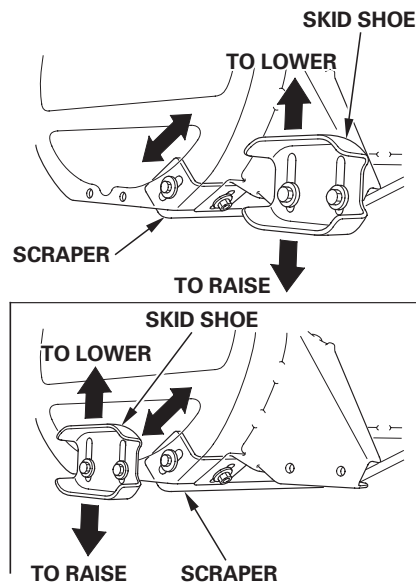

AUGER GROUND CLEARANCE RECOMMENDATIONS

Ordinary snow conditions	5/32 – 5/16 in (4.0 – 8.0 mm)
Smooth, ice-covered surfaces	3/32 – 3/16 in (2.0 – 5.0 mm)
Rough or uneven surfaces	1 – 1-3/16 in (25.0 – 30.0 mm)

NOTICE


Operation on rough or uneven surfaces with less than the recommended auger ground clearance can damage the snowblower.

3. Loosen all the nuts and bolts holding the scraper, and adjust the scraper to the specified ground clearance. Retighten the nuts and bolts securely.

SCRAPER GROUND CLEARANCE

3/32 – 5/32 in (2.0 – 4.0 mm)

4. Inspect the scraper. Replace the scraper if it is excessively worn.

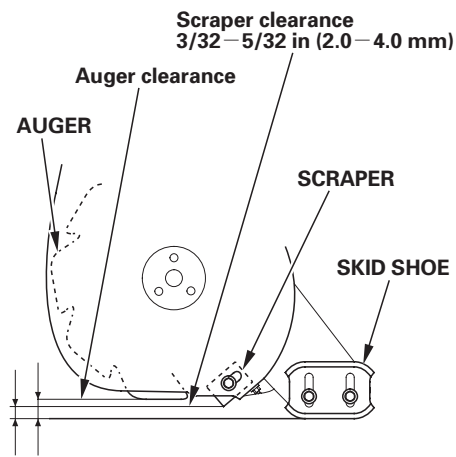


STORAGE

STORAGE PREPARATION

Proper storage preparation is essential for keeping your snowblower trouble-free and looking good. The following steps will help to keep rust and corrosion from impairing your snowblower's function and appearance, and will make the engine easier to start when you use the snowblower again.

Cleaning

1. Rinse the auger housing and wheels (or tracks) with a garden hose. Wipe the rest of the snowblower with a moist rag.
2. After the snowblower has dried, touch up any damaged paint.
3. Apply grease to the following areas for lubrication.

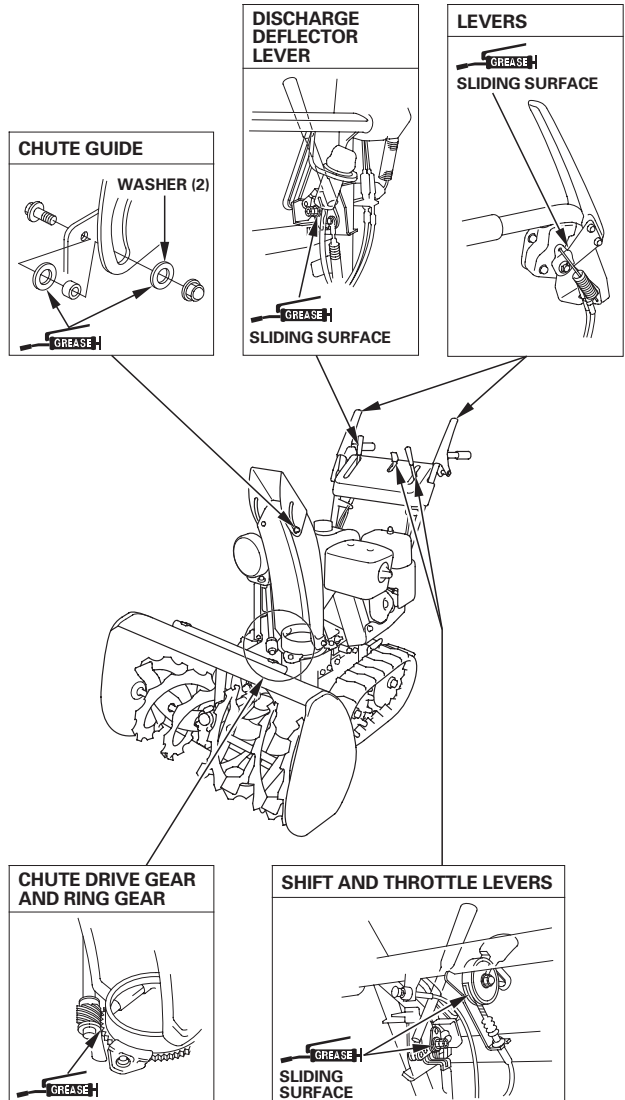

STORAGE

Fuel

NOTICE

Depending on the region where you operate your equipment, fuel formulations may deteriorate and oxidize rapidly. Fuel deterioration and oxidation can occur in as little as 30 days and may cause damage to the carburetor and/or fuel system. Please check with your servicing dealer for local storage recommendations.

Gasoline will oxidize and deteriorate in storage. Old gasoline will cause hard starting, and it leaves gum deposits that clog the fuel system. If the gasoline in your snowblower deteriorates during storage, you may need to have the carburetor and other fuel system components serviced or replaced.

The length of time that gasoline can be left in your fuel tank and carburetor without causing functional problems will vary with such factors as gasoline blend, your storage temperatures, and whether the fuel tank is partially or completely filled. The air in a partially filled fuel tank promotes fuel deterioration. Very warm storage/temperatures accelerate fuel deterioration. Fuel deterioration problems may occur within a few months, or even less if the gasoline was not fresh when you filled the fuel tank.

The *Distributor's Limited Warranty* does not cover fuel system damage or engine performance problems resulting from neglected storage preparation.

You can extend fuel storage life by adding a fuel stabilizer that is formulated for that purpose, or you can avoid fuel deterioration problems by draining the fuel tank and carburetor.

Adding a Fuel Stabilizer to Extend Fuel Storage Life

When adding a fuel stabilizer, fill the fuel tank with fresh gasoline. If only partially filled, air in the tank will promote fuel deterioration during storage. If you keep a container of gasoline for refueling, be sure that it contains only fresh gasoline.

Add fuel stabilizer following the manufacturer's instructions.


After adding a fuel stabilizer, run the engine outdoors for 10 minutes to be sure that treated gasoline has replaced the untreated gasoline in the carburetor.

Stop the engine, and move the fuel valve lever to the OFF position.

STORAGE

Draining the Fuel Tank and Carburetor

1. Place an approved gasoline container below the carburetor, and use a funnel to avoid spilling fuel.
2. Loosen the carburetor drain knob, then move the fuel valve lever to the ON position. Drain the carburetor until the fuel tank is empty.

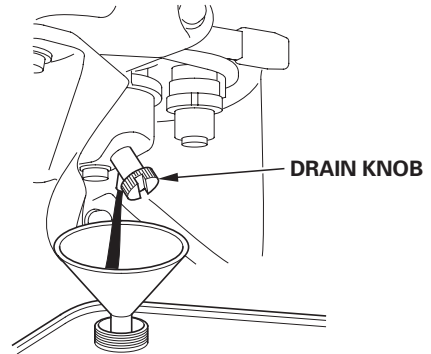


⚠ WARNING

Gasoline is highly flammable and explosive.
You can be burned or seriously injured when handling fuel.

- Keep heat, sparks, and flames away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

3. After draining, tighten the drain knob and turn the fuel valve OFF.
4. Remove the fuel sediment cup.
5. Empty the contents into a suitable container. Clean the fuel sediment cup.
6. Reinstall the sediment cup and O-ring and tighten securely.

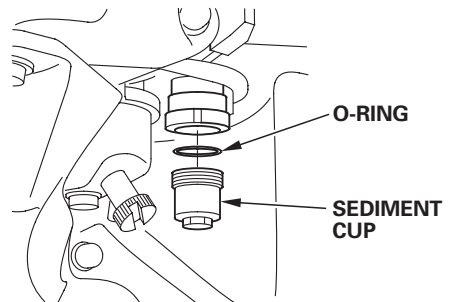

Engine Oil

1. Change the engine oil (see page 42).
2. Remove the spark plug (see page 46).
3. Pour a teaspoon (5 cc) of clean engine oil into the cylinder.
4. Pull the starter rope slowly several times to distribute the oil.
5. Reinstall the spark plug.
6. Pull the starter grip slowly until you feel resistance, then return the starter grip gently. This will close the valves so moisture cannot enter the engine cylinder.

Tires

Check the air pressure (see page 49).

STORAGE

STORAGE PRECAUTIONS

If your snowblower will be stored with gasoline in the fuel tank and carburetor, it is important to reduce the hazard of gasoline vapor ignition. Select a well-ventilated storage area away from any appliance that operates with a flame, such as a furnace, water heater, or clothes dryer. Also avoid any area with a spark-producing electric motor, or where power tools are operated.

If possible, avoid storage areas with high humidity, because that promotes rust and corrosion.

Unless all fuel has been drained from the fuel tank, leave the fuel valve in the OFF position to reduce the possibility of fuel leakage.

Place the snowblower on a level surface. Tilting can cause fuel or oil leakage.

With the engine and exhaust system cool, cover the snowblower to keep out dust. A hot engine and exhaust system can ignite or melt some materials. Do not use sheet plastic as a dust cover. A nonporous cover will trap moisture around the engine, promoting rust and corrosion.

REMOVAL FROM STORAGE

Check your snowblower as described in the *BEFORE OPERATION* chapter (see page 18) of this manual.

If the fuel was drained during storage preparation, fill the tank with fresh gasoline. If you keep a container of gasoline for refueling, be sure that it contains only fresh gasoline. Gasoline oxidizes and deteriorates over time, causing hard starting.

If the cylinder was coated with oil during storage preparation, the engine may smoke briefly at startup. This is normal.

TRANSPORTING

BEFORE LOADING


- 1. Loading the snowblower on a trailer should be performed on a firm, level surface.
- 2. Use a loading ramp that is strong enough to support the combined weight of the snowblower and the operator:

Weight of snowblower: (Operating weight)

Types	Models	HS928	HS1332
	TA	254 lbs (115 kg)	265 lbs (120 kg)
	TAS	265 lbs (120 kg)	276 lbs (125 kg)
	WA	220 lbs (100 kg)	—
	WAS	231 lbs (105 kg)	—

- 3. The loading ramp must be long enough so that its slope is 15° (26%) or less.

Length of Ramp (L)	8.2 ft (2.5 m)	9.8 ft (3.0 m)	11.5 ft (3.5 m)
Height (H)	1.6 ft (50 cm)	2.0 ft (60 cm)	2.3 ft (70 cm)

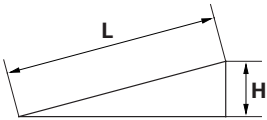

- 4. If the truck bed has a low roof or cover, with less than 5 ft (1.5 m) of headroom, lower the discharge deflector for better clearance, or remove the chute assembly.
- 5. Check that there is sufficient fuel in the tank. The engine may stall on the ramp if there is not enough fuel in the tank.


TRANSPORTING

LOADING

1. Track type: Step on the foot pedal, and raise the auger to the HIGH position (see page 14).
2. Start the engine (see page 21) and maneuver the snowblower backward into line with the loading ramp.
3. Track type: Run the snowblower backward slowly up the loading ramp.

Wheel type: Push down the handles to raise the auger and run the snowblower up the loading ramp.

Be careful to avoid striking the chute or other parts of the machine.

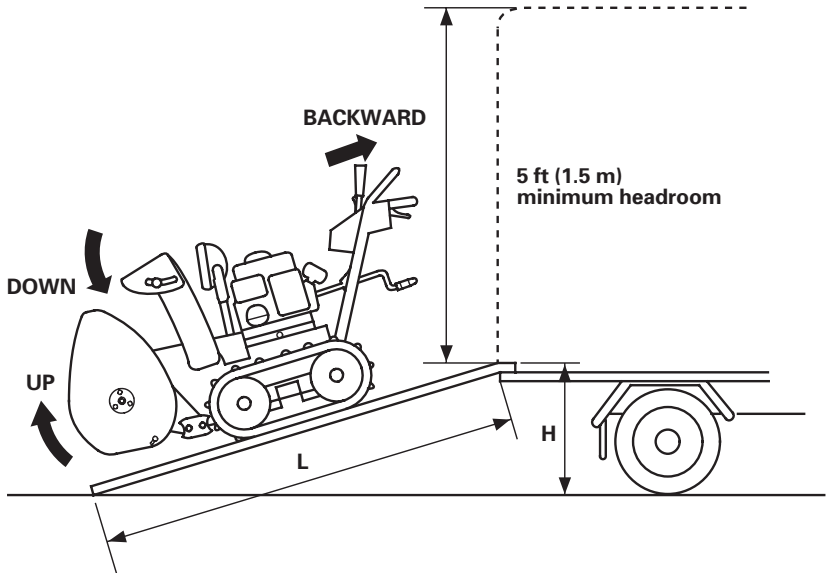


4. After the snowblower is in the truck, stop the engine, and turn the fuel valve to the OFF position. This will prevent the possibility of carburetor flooding and will reduce the possibility of fuel leakage.
5. Tie the snowblower down with rope or straps, and block the treads. Keep the tie-down rope or straps away from controls and cables.

Tie the snowblower down with rope or straps, and block the treads. Keep the tie-down rope or straps away from controls and cables.

Do not tie with rope or straps stronger than necessary to prevent snowblower parts from breaking.


Tie-down Points

Front

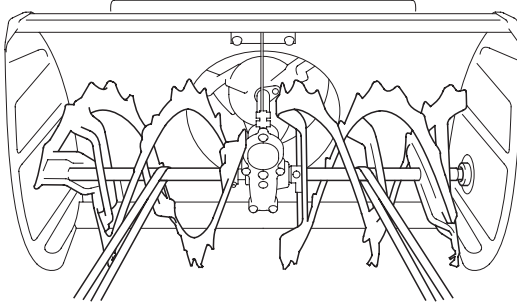


Rear

Track type:

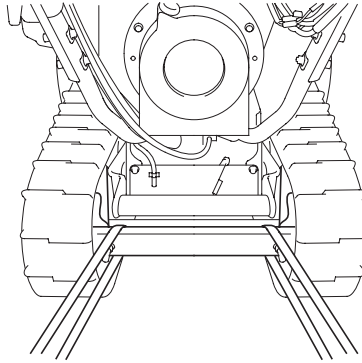

Wheel type:

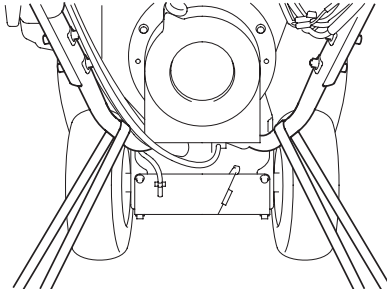

TAKING CARE OF UNEXPECTED PROBLEMS

ENGINE PROBLEMS

Electric starter does not operate

Possible cause	Correction
No electric current from outlet.	Try known good electrical outlet. Start engine by using the recoil starter.
Defective power cord.	Try another power cord. Start engine by using the recoil starter.

Starter operates, but engine will not start

Possible cause	Correction
Throttle not in proper position.	Throttle must be in FAST position, choke OFF for a hot start, choke ON for a cold start (see page 23).
Fuel valve is OFF.	Turn fuel valve to ON (see page 22). Check for contaminants in sediment cup (see page 56).
Sediment cup obstructed.	Be sure tank has fresh fuel.
Stale or old fuel.	Drain carburetor and sediment cup (see page 56).
Spark plug cap off.	Make sure cap is connected.
Improper electrode gap or deposits in the spark plug gap.	Verify that spark plug is free of deposits, and has proper gap (see page 47).

TAKING CARE OF UNEXPECTED PROBLEMS

Engine has low power

Possible cause	Correction
Fast ground speed when blowing wet, deep snow puts excessive load on engine.	Blow snow at slower ground speed.
Wet, deep cuts place excessive load on engine.	Reduce snowblowing swath.
Discharge chute restricted.	Clear discharge chute obstructions (see page 17).
Spark plug cap not secure. Improper electrode gap or deposits on the electrodes.	Make sure spark plug cap is securely connected. Verify the spark plug is free of deposits and has the proper gap.
Choke in wrong position or choke plate sticking.	Check choke plate movement.
Stale or old fuel.	Be sure tank has fresh fuel. Drain carburetor and sediment cup (see page 56).

TAKING CARE OF UNEXPECTED PROBLEMS

DRIVE PROBLEMS

Engine runs, but snowblower doesn't move

Possible cause	Correction
Lever is in the RELEASED position.	Move lever to the ENGAGED position (see page 22).
Fluid level is low.	Add hydrostatic transmission fluid to the proper level (see page 45).
Shift lever is in "N" (neutral).	Move shift lever to forward or reverse (see page 29).
Drive clutch lever mechanism or cable not functioning properly.	See servicing Honda snowblower dealer.
Drive belt worn, broken or not on pulleys.	See servicing Honda snowblower dealer.

TAKING CARE OF UNEXPECTED PROBLEMS

SNOWBLOWER PROBLEMS

Won't blow snow

Possible cause	Correction
Lock bolts broken.	Replace broken lock bolt(s) (see page 50).
Discharge chute restricted. Foreign object stopping auger from rotating.	Clear discharge chute of obstructions (see page 17). Remove foreign object.
Belt worn, not on pulleys or not properly installed.	See servicing Honda snowblower dealer.

Snow not discharging properly

Possible cause	Correction
Auger spinning too slowly.	Keep throttle in FAST (see page 12).
Lock bolts broken.	Replace broken lock bolt(s) (see page 50).
Wet, deep snow is difficult to blow.	Reduce snowblowing swath (see page 32).
Belt worn, not on pulleys or not properly installed.	See servicing Honda snowblower dealer.

TAKING CARE OF UNEXPECTED PROBLEMS

Snow not discharging properly (cont.)

Possible cause	Correction
Snowblower moving too fast for snow conditions.	Use shift lever to reduce ground speed (see page 29).


Engine stalls when auger clutch lever is set to On

Possible cause	Correction
Engine running too slow.	Keep throttle in FAST when engaging auger clutch (see page 12).
Discharge chute restricted. Foreign object stopping auger from rotating. Auger frozen by ice.	Clear discharge chute or auger housing of obstruction (see page 17).

TECHNICAL INFORMATION

Serial Number Locations

Record the engine and frame serial numbers in the spaces below. You will need these serial numbers when ordering parts, and when making technical or warranty inquiries (see page 75).

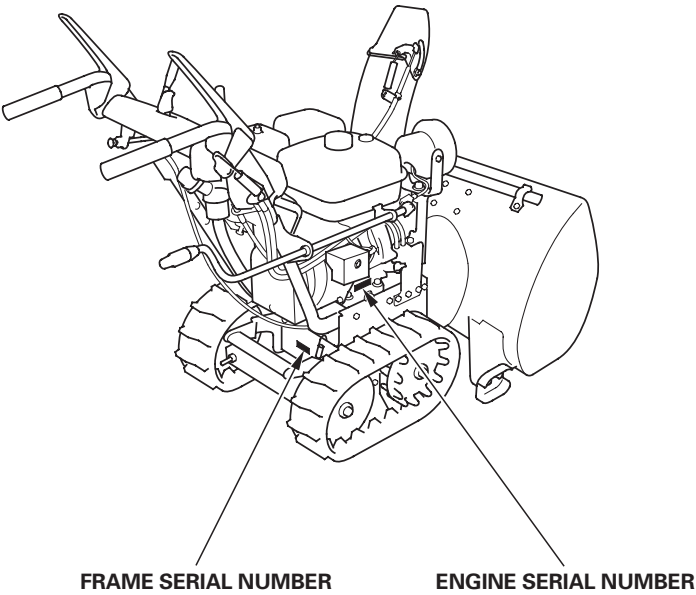

Engine serial number: _____

Frame serial number: _____

Date of purchase: _____

TECHNICAL INFORMATION

Carburetor Modification for High Altitude Operation

At high altitude, the standard carburetor air-fuel mixture will be too rich. Performance will decrease, and fuel consumption will increase. A very rich mixture will also foul the spark plug and cause hard starting. Operation at an altitude that differs from that at which this engine was certified, for extended periods of time, may increase emissions.

High altitude performance can be improved by specific modifications to the carburetor. If you always operate your snowblower at altitudes above 5,000 feet (1,500 meters) have your servicing dealer perform this carburetor modification. This engine, when operated at high altitude with the carburetor modifications for high altitude use, will meet each emission standard throughout its useful life.

Even with carburetor modification, engine horsepower will decrease about 3.5 % for each 1,000-foot (300-meter) increase in altitude. The effect of altitude on horsepower will be greater than this if no carburetor modification is made.

NOTICE

When the carburetor has been modified for high altitude operation, the air-fuel mixture will be too lean for low altitude use. Operation at altitudes below 5,000 feet (1,500 meters) with a modified carburetor may cause the engine to overheat and result in serious engine damage. For use at low altitudes, have your servicing dealer return the carburetor to original factory specifications.

Emission Control System Information

Source of Emissions

The combustion process produces carbon monoxide, oxides of nitrogen, and hydrocarbons. Control of hydrocarbons and oxides of nitrogen is very important because, under certain conditions, they react to form photochemical smog when subjected to sunlight. Carbon monoxide does not react in the same way, but it is toxic.

Honda utilizes appropriate air/fuel ratios and other emissions control systems to reduce the emissions of carbon monoxide, oxides of nitrogen and hydrocarbons.

The U.S. and California Clean Air Acts

EPA and California regulations require all manufacturers to furnish written instructions describing the operation and maintenance of emission control systems.

The following instructions and procedures must be followed in order to keep the Honda engine emissions within the emission standards.

Tampering and Altering

NOTICE

Tampering is a violation of Federal and California law.

Tampering with or altering the emission control system may increase emissions beyond the legal limit. Among those acts that constitute tampering are:

- Removal or alteration of any part of intake, fuel or exhaust system.
- Altering or defeating the governor linkage or speed-adjusting mechanism to cause the engine to operate outside its design parameters.

TECHNICAL INFORMATION

Problems That May Affect Emissions

If you are aware of any of the following symptoms, have your engine inspected and repaired by your authorized Honda servicing dealer.

- Hard starting or stalling after starting.
- Rough idle.
- Misfiring or backfiring under load.
- Afterburning (backfiring).
- Black exhaust smoke or high fuel consumption.

Replacement parts

The emission control systems on your new Honda engine were designed, built, and certified to conform with EPA and California emission regulations. We recommend the use of Honda Genuine parts whenever you have maintenance done. These original-design replacement parts are manufactured to the same standards as the original parts, so you can be confident of their performance. The use of replacement parts that are not of the original design and quality may impair the effectiveness of your emission control system.

A manufacturer of an aftermarket part assumes the responsibility that the part will not adversely affect emission performance. The manufacturer or rebuilder of the part must certify that use of the part will not result in a failure of the engine to comply with emission regulations.

Maintenance

Follow the *Maintenance Schedule* on pages 37 and 38. Remember that this schedule is based on the assumption that your machine will be used for its designed purpose. Sustained high-load operation will require more frequent service.

Air Index

An Air Index Information hang tag/label is applied to engines certified to an emission durability time period in accordance with the requirements of the California Air Resources Board.

The bar graph is intended to provide you, our customer, the ability to compare the emissions performance of available engines. The lower the Air Index, the less pollution.

The durability description is intended to provide you with information relating to the engine's emission durability period. The descriptive term indicates the useful-life period for the engine's emission control system. See your *Emission Control Warranty* for additional information.

Descriptive Term	Applicable to Emission Durability Period
Moderate	50 hours (0 – 80 cc, inclusive) 125 hours (greater than 80 cc)
Intermediate	125 hours (0 – 80 cc, inclusive) 250 hours (greater than 80 cc)
Extended	300 hours (0 – 80 cc, inclusive) 500 hours (greater than 80 cc) 1,000 hours (225 cc and greater)

TECHNICAL INFORMATION

Specifications

Frame

Model	HS928			
Type	TA	TAS	WA	WAS
Items				
Discription code	SAVJ			
Overall length	57.7 in (1,465 mm)		55.5 in (1,410 mm)	
Overall width	28.5 in (725 mm)			
Overall height	44.3 in (1,125 mm)		43.9 in (1,115 mm)	
Dry mass [weight]	243 lbs (110 kg)	254 lbs (115 kg)	209 lbs (95 kg)	220 lbs (100 kg)
Width of snow clearance	28.0 in (710 mm)			
Height of snow clearance	20.1 in (510 mm)			
Snow throwing distance (varies with snow conditions)	Max. 49.5 ft (15 m)			
Clearing capacity	50 Ton/hour			

Engine

Model	Honda GX270
Displacement	16.5 cu-in (270 cm ³)
Bore × stroke	3.03 × 2.28 in (77.0 × 58.0 mm)
Starting method	Recoil starter or AC electric starter
Ignition system	CDI magneto
Oil capacity	1.1 US qt (1.1 L)
Fuel tank capacity	1.32 US gal (5.0 L)
Spark plug	BPR5ES (NGK) W16EPR-U (DENSO)

Tuneup

ITEM	SPECIFICATION	MAINTENANCE
Spark plug gap	0.028 – 0.031 in (0.7 – 0.8 mm)	Refer to page: 46
Valve clearance	IN: 0.15 ± 0.02 mm EX: 0.20 ± 0.02 mm	See your authorized Honda dealer
Other specifications	No other adjustments needed.	

Specifications are subject to change without notice.

TECHNICAL INFORMATION

Frame

Model	HS1332	
Type	TA	TAS
Items		
Discription code	SAWJ	
Overall length	57.7 in (1,465 mm)	
Overall width	32.5 in (825 mm)	
Overall height	44.3 in (1,125 mm)	
Dry mass [weight]	254 lbs (115 kg)	265 lbs (120 kg)
Width of snow clearance	31.9 in (810 mm)	
Height of snow clearance	20.1 in (510 mm)	
Snow throwing distance (varies with snow conditions)	Max. 56.1 ft (17 m)	
Clearing capacity	65 Ton/hour	

Engine

Model	Honda GX390	
Displacement	23.7 cu-in (389 cm ³)	
Bore × stroke	3.46 × 2.52 in (88.0 × 64.0 mm)	
Starting method	Recoil starter	Recoil starter or AC electric starter
Ignition system	CDI magneto	
Oil capacity	1.1 US qt (1.1 L)	
Fuel tank capacity	1.51 US gal (5.7 L)	
Spark plug	BPR5ES (NGK) W16EPR-U (DENSO)	

Tuneup

ITEM	SPECIFICATION	MAINTENANCE
Spark plug gap	0.028 – 0.031 in (0.7 – 0.8 mm)	Refer to page: 46
Valve clearance	IN: 0.15 ± 0.02 mm EX: 0.20 ± 0.02 mm	See your authorized Honda dealer
Other specifications	No other adjustments needed.	

Specifications are subject to change without notice.

CONSUMER INFORMATION

DEALER LOCATOR INFORMATION

To find an authorized Honda Servicing Dealer anywhere in the United States:

Visit our web site:

<http://powerequipment.honda.com/dealer-locator> and click on Dealer Locator.

Honda PUBLICATIONS

Shop Manual

This manual covers complete maintenance and overhaul procedures. It is intended to be used by a skilled technician.

For more information, contact your local Honda distributor or visit our website at <http://powerequipment.honda.com>.

Parts Catalog

This manual provides complete, illustrated parts lists. Available through your Honda dealer.

Accessories Catalog

Your authorized Honda power equipment dealer offers a selection of accessories (optional equipment) to make your snowblower even more useful.

Visit <http://powerequipment.honda.com/snowblowers/accessories> and click on Snowblowers to see the entire catalog of accessories.

Customer Service Information

Servicing dealership personnel are highly trained professionals. They should be able to answer any question you may have. If you encounter a problem that your dealer does not solve to your satisfaction, please discuss it with the dealership's management. The Service Manager or General Manager can help. Almost all problems are solved in this way.

If you are dissatisfied with the decision made by the dealership's management, contact the Honda Power Equipment Customer Relations Office. You can write:

American Honda Motor Co., Inc.
Power Equipment Division
Customer Relations Office
4900 Marconi Drive
Alpharetta, Georgia 30005-8847

Or telephone: (770) 497-6400 M-F, 8:30 am to 7:00 pm ET

When you write or call, please give us this information:

- Model and serial number (see page 67)
- Name of the dealer who sold the snowblower to you
- Name and address of the dealer who services your snowblower
- Date of purchase
- Your name, address, and telephone number
- A detailed description of the problem


MEMO

QUICK REFERENCE INFORMATION

Fuel	Type	Unleaded gasoline with an ethanol content of no more than 10% and a pump octane rating of 86 or higher
Engine Oil	Type	SAE 5W-30 API SJ or later for general use Maximum oil capacity: 1.1 US qt (1.1 L)
Spark Plug	Type	BPR5ES (NGK) W16EPR-U (DENSO)
Tires	Tire Pressure	8.0 psi (55 kPa, 0.56 kgf/cm ²)
Maintenance	Before each use, check the following.	Engine oil level. Tire air pressure. Transmission oil level. Auger skid shoes and scraper. Auger and blower lock bolt. Bolt and nut torque.
	First 20 hours	Change engine oil. Adjust track deflection.
	Subsequent	See Maintenance Schedule (see pages 37 and 38)

HONDA

The Power of Dreams

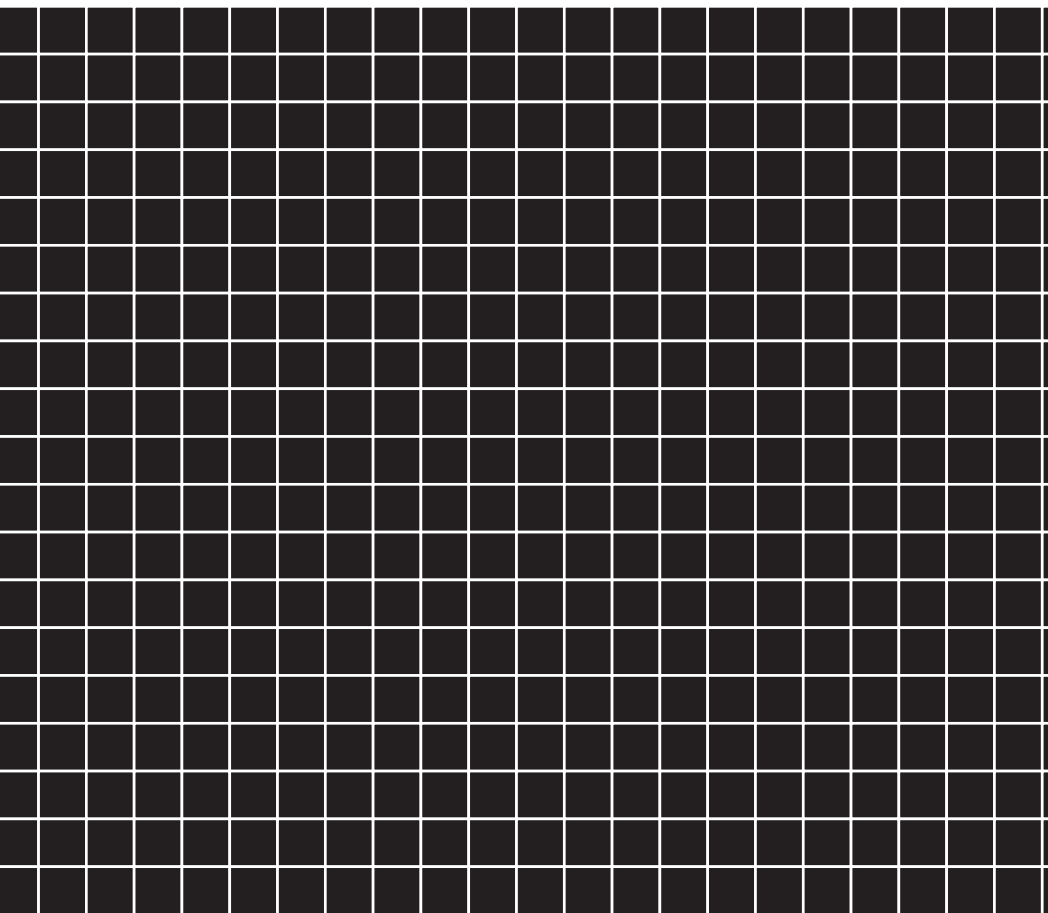

HFXI FÎ €F
€€ÝHFËXI FË €€F

EM3

Printed in Japan

Printed in Japan